



Section: VILLA TRANSMISSION ENGINE

Pos.	Quantity	Spare part No	Description	Kit	Notes	New
	2816					
	2836	2828				
	2856	2812 2858				
1	4	4	4	9739-0831-22	Nut	
2	1	1	1	9600-0050-00	Key	
3	1	1	1	1134-0269-00	Pedal rubber	
4	1	1	1	1134-2123-02	Clutch pedal	
7	1	1	1	1134-1927-01	Bearing	
15	1	1	1	1134-1949-01	Spring	
20	1	1	1	1134-1631-02	Tensioner arm	
21	1	1	1	9696-0013-01	Bowed washer	
22	1	1	1	9699-0037-02	Washer	
23	1	1	1	1134-0240-00	Shoulder screw	
24	5	5	5	9997-0840-16	Screw	
25	1	1	1	1134-0139-01	Belt guide	
26	1	1	1	1134-1849-01	Belt pulley	
27	1	1	1	1134-9008-01	V-belt	= 9585-0050-00
29	1	1	1	9747-0831-02	Lock nut	
31	1	1	1	9650-0016-04	Lock ring	
32	1	1	1	1134-1633-01	Engine belt pulley	
32	1	1	1	9997-1450-16	Puller-belt pulley	Tillbehör/Accessory
35	1	1	1	1134-9027-01	Tension roller	
37	1	1	1	9739-1031-22	Nut	
39	1	1	1	9987-5338-12	Screw	
40	4	4	4	9699-0090-02	Flat washer	
42	1	1	1	1134-1364-02	Spacer ring	
43	1	1	1	9959-0825-16	Screw	
44	1	1	1	1134-1795-01	Belt stirrup	
47	1	1	1	9997-1030-16	Screw	
48	4	4	4	9739-0631-22	Nut	
49	2	2	2	9898-0635-12	Screw	
50	1	1	1	1134-1931-01	Clutch rod	
51	1	1	1	1134-1889-01	Eyebolt	
52	1	1	1	9747-0631-02	Lock nut	
53	2	2	2	9799-0831-02	Nut	
54	1	1	1	9595-0160-00	Locating pin	
59	1	1	1	9600-0250-00	Key	
60	1	1	1	1134-1594-01	Panel	
63	2	2	2	9959-0612-16	Screw	
64	2	2	2	9849-8009-16	Screw	
65	1	1	1	1134-1975-01	Gas control	
66	1	1	1	9403-0035-10	Handle	
68			1	1134-2350-01	Exhaust pipe	
69			1	1134-0433-00	Muffler gasket	
70			2	9988-3651-12	Screw	
71			1	1134-3245-02	Muffler	
72			1	9578-0011-00	Clamp	
73			1	1134-2462-01	Lock	
74			2	1134-1565-01	Spacer	
75			1	1134-2354-01	Heat guard	
76			2	9997-0612-16	Screw	
83			1	9959-0820-16	Screw	
84			1	1134-2352-02	Tow bar	
87			1	1134-2394-01	Heat guard	
88			2	9739-0831-22	Nut	