



Section: PARK 11 TRANSMISSION

Pos.	Quantity	Spare part No	Description	Kit	Notes	New
	1118					
	1158					
	1442					
1	1	1134-2020-01	Engine pulley			
2	1	9987-5338-12	Screw			
8	1	1134-9027-01	Tension roller			
9	1	1134-2015-03	Tension arm			
10	1	1134-9035-01	V-belt			
11	1	9799-1031-02	Nut			
12	1	9997-1030-16	Screw			
13	1	1134-0645-00	Spring			
14	1	1134-1565-01	Spacer			
15	1	1134-1849-01	Belt pulley			
16	1	9600-0050-00	Key			
17	1	9650-0016-04	Lock ring			
18	1	1134-3278-01	Transaxle assy		Peerless 930-022	
19	4	9739-0831-22	Nut			
20	4	9997-0865-12	Screw			
21	1	1134-2986-01	Bracket			
22	1	9942-0820-16	Screw			
23	1	9959-0820-16	Screw			
24	1	9739-0831-22	Nut			
25	1	1134-3289-01	Belt guide			
26	2	9699-0056-02	Flat washer			
27	1	9942-0820-16	Screw			
28	1	1134-3289-01	Belt guide			
29	1	9959-0820-16	Screw			
30	1	9739-0831-22	Nut			
38	2	1134-3175-01	Rim-rear			
39	2	9545-0116-00	Tyre		16 x 7.50-8	
39	2	9545-0120-00	Tire		16 x 7.50-8	
39		9545-0203-00	Inner tube		Reservdel/spare par	
40	2	9545-0500-00	Valve			
41	2	9997-0845-12	Screw			
42	2	9747-0831-02	Lock nut			
43	2	1134-2471-01	Key			
51	1	1134-2031-02	Gear shifter cable			
52	2	9570-0001-00	Elbow link			
53	4	9739-0531-22	Nut			
54	1	1134-0266-00	Attaching clamp			
55	1	1134-0267-00	Clamp plate			
56	2	9997-0520-16	Screw			
57	2	9739-0531-22	Nut			
58	1	1134-2021-01	Clamp			
59	1	1134-3400-01	Angle plate			
60	2	9959-0816-16	Screw			
61	2	9739-0831-22	Nut			
62	1	1134-2030-04	Clutch cable			
63	2	9646-0036-22	Rivet			
64	2	9675-0008-02	Locking washer			
65	1	1134-3450-01	Brake pedal (L. H.)			
66	1	1134-9024-01	.Bearing			
67	1	1134-0269-00	Pedal rubber			
68	1	1134-0220-01	Gear shifter bracke			
69	1	1134-0240-00	Shoulder screw			
70	1	1134-2328-01	Gear lever			
71	1	9696-0013-01	Bowed washer			
72	1	9739-0831-22	Nut			
73	2	9739-0831-22	Nut			
74	2	9959-0816-16	Screw			
75	1	1134-2551-01	Knob			
76	1	1134-3279-01	Gear shifter arm			
77	1	9699-0060-02	Flat washer			
78	1	9987-5016-16	Screw			
80	1	1131-1506-00	Spring			