



## Section: PARK 16HST ENGINE BRAKE SYSTEM

Pos.	Quantity	Spare part No	Description	Kit	Notes	New
	1458					
	1441					
1	1	1134-2878-01	Fan cover			
2	4	9997-0512-16	Screw			
3	4	9699-0099-02	Washer			
4	1	1134-3355-01	Oil drain pipe assy			
5	1	1134-0997-01	.Fibre gasket			
6	1	1134-0995-01	.Plug			
7	1	9404-0020-00	.O-ring			
8	1	9997-0845-12	Screw		45 mm	
9	2	9997-0835-12	Screw		35 mm	
10	1	9997-0865-12	Screw		65 mm	
11	1	1134-3380-01	Spacer			
12	4	9739-0831-22	Nut			
13	1	1134-3455-01	Exhaust pipe			
14	2	1134-2988-01	Gasket-exhaust			
15	1	1134-3244-01	Silencer			
16	1	9959-0816-16	Screw			
17	1	9739-0831-22	Nut			
18	1	9578-0011-00	Clamp			
19	1	9600-0250-00	Key			
20	1	9579-0003-00	Cable holder			
27	1	9747-0631-02	Lock nut			
28	1	1134-3377-01	Control rod			
29	1	9675-0008-02	Locking washer			
30	1	1134-1889-01	Eyebolt			
31	1	1134-1023-00	Spring			
32	2	1134-3456-01	Bushing			
33	1	9747-0631-02	Lock nut			
41	1	1134-2886-01	Fuel tank			
42	1	1134-2877-02	Fuel tank cap			
43	2	1134-2941-01	Protection strip			
44	1	9997-0812-02	Screw			
45	1	9747-0831-02	Lock nut			
46	1	1134-3223-01	Fuel shut-off			
47	1	1134-2975-03	Fuel hose		L = 40 mm	
48	1	1134-2975-05	Fuel hose		L = 460 mm	
49	3	1134-3499-01	Hose clamp			
50	1	1134-2998-01	Hose clamp			
58	1	1134-3450-01	Brake pedal (L. H.)			
59	1	1134-9024-01	.Bearing			
60	1	1134-0269-00	Pedal rubber			
61	1	1131-1506-00	Spring			
62	1	1134-3584-01	Brake/clutch wire			
63	1	1134-3387-01	Attachment			
64	1	9959-0816-16	Screw			
65	1	9739-0831-22	Nut			
66	1	1134-1184-02	Bracket			
67	1	1134-2151-02	Stop			
68	1	1131-1497-01	Spring			
69	1	1134-0245-00	Shoulder screw			
70	1	9739-0831-22	Nut			
78	1	1134-1975-10	Gas control			
79	1	9403-0035-10	Handle			
80	2	9849-8013-16	Screw			
81	1	1134-2872-01	Choke control			
82	1	9699-0028-02	Flat washer		8.4 x 16 x 1.5	
83	1	9699-0062-02	Flat washer		8.4 x 22 x 1.5	