



Section: JB 921 TRANSMISSION

Pos.	Quantity	Spare part No	Description	Kit	Notes	New
	1129					
6	4	9997-0845-12	Screw			
7	4	9699-0028-02	Flat washer			
8	4	9683-0030-02	Lock washer			
9	4	9799-0831-02	Nut			
11	2	9699-0028-02	Flat washer			
12	2	9683-0030-02	Lock washer			
13	2	9987-5119-16	Screw			
14	1	1482-0557-01	Mounting plate			
16	1	9799-1031-02	.Nut			
17	1	9683-0040-02	.Lock washer			
19	1	1482-0596-01	.Spacer			
20	1	1482-0550-01	.Tension roller-rev			
21	1	9997-1025-16	.Screw			
22	1	1482-0307-02	.Spring			
23	1	9699-0035-02	.Flat washer			
24	1	9650-0010-04	.Lock ring			
25	1	1482-0560-01	Bushing			
26	1	1482-0467-01	Belt guide			
27	1	1482-0437-01	Pulley			
28	2	9915-0606-15	Set screw			
29	1	9600-0053-00	Key			
30	2	9915-0808-15	Set screw			
31	1	1482-0564-01	Engine belt pulley			
32	1	1482-0040-01	Key			
33	1	9898-0620-16	Screw			
34	1	1482-0545-01	Console			
35	1	9699-0028-02	Flat washer			
36	1	9683-0025-02	Lock washer			
37	1	9799-0631-02	Nut			
38	1	9683-0030-02	Lock washer			
39	1	9997-0820-16	Screw			
41	1	1482-0559-01	.Spring			
43	1	9650-0016-04	.Lock ring			
44	1	1482-0553-01	.Bushing			
45	1	1482-0522-01	.Wheel fork lock			
46	1	1482-0551-01	.Tension roller			
47	1	9683-0040-02	.Lock washer			
48	1	9997-1025-16	.Screw			
49	1	1482-0561-01	Belt tensioner assy			
76	1	1482-0248-01	Plastic plug			
77	1	1482-0554-01	Bushing			
78	2	9997-0620-16	Screw			
79	2	9683-0025-02	Lock washer			
80	1	1482-0308-01	Cover			
81	1	1482-0443-01	Gasket			
87	1	9650-0016-04	Lock ring			
88	1	9650-0010-04	Lock ring			
89	1	1482-0587-01	Selfadh.clamp			
90	1	9650-0016-04	Lock ring			
91	1	9650-0010-04	Lock ring			
100	1	1482-0572-01	Screw			
101	1	1482-0592-01	Change over lever			
102	1	9997-0645-12	Screw			
103	1	1482-0593-01	Clutch handle			
104	1	9997-0625-16	Screw			
105	1	9747-0631-02	Lock nut			
106	1	1482-0572-01	Screw			
107	1	9747-0631-02	Lock nut			
108	2	1482-0575-01	Handle grip			
109	2	1482-0571-01	Screw			
110	1	1482-0594-01	Front plater			
111	1	1482-0566-01	Screw			
112	1	1482-0595-01	Cable holder			
113	1	1482-0563-01	Clutch cable-forwar			
114	1	1482-0565-01	Clutch cable-revers			
136	1	1482-0562-01	Gear case assy			

Section: JB 921 TRANSMISSION

Pos.	Quantity	Spare part No	Description	Kit	Notes	New
	1129					
137	1	9594-0055-00	.Locating pin			
138	1	1482-0486-01	.Shaft w. gear			
139	1	9594-0015-00	.Locating pin			
140	1	1482-0451-01	.Sprocket			
141	1	1482-0473-01	.Needle bearing			
142	1	1482-0452-01	.Spacer			
143	1	1482-0450-01	.Chain-top			
144	1	9660-0200-00	.Spacer			
145	1	1482-0473-01	.Needle bearing			
146	1	1482-0454-01	.Chain-middle			
147	1	9589-1002-00	.Sprocket			
148	1	1482-0452-01	.Spacer			
149	1	9660-0200-00	.Spacer			
150	2	1482-0473-01	.Needle bearing			
151	1	1482-0485-01	.Needle bearing			
152	2	9915-1020-15	.Screw			
153	1	1482-0547-01	.Chain-lower			
154	1	9589-1003-00	.Sprocket			
155	1	1482-0485-01	.Needle bearing			
156	1	1482-0458-01	.Seal			
157	1	1482-0459-01	.Lock ring			
158	1	9549-0017-00	.Ball bearing			
159	1	1482-0481-01	.Spacer			
160	1	9939-0850-12	.Screw			
161	1	9699-0028-02	.Flat washer			
163	1	9939-0850-12	.Screw			
164	1	9699-0028-02	.Flat washer			
165	1	1482-0214-01	.Oil-seal			
166	1	1482-0482-01	.Spacer			
167	1	9549-0017-00	.Ball bearing			
168	1	1482-0459-01	.Lock ring			
169	1	1482-0458-01	.Seal			
170	1	1482-0486-01	.Shaft w. gear			
171	1	9699-0028-02	.Flat washer			
172	1	9747-0831-02	.Lock nut			
174	1	9699-0028-02	.Flat washer			
175	1	9747-0831-02	.Lock nut			
176	1	1482-0048-01	.Shaft			
177	1	1482-0214-01	.Oil-seal			
178	1	1482-0479-01	.Gasket			
179	1	1482-0480-01	.Oil drain plug			
213	1	9915-0808-15	Set screw			
214	1	1482-0556-01	Belt pulley			
215	1	9600-0016-00	Key			
216	1	1482-9002-01	V-belt reverse			
217	1	1482-9003-01	V-belt			
218	1	1482-9001-01	V-belt			
227	1	1482-0466-01	Belt tensioner			
999	1	1482-0536-01	Gear case oil (0.5		Texaco Multifak	