



## Section: FOOTE TRANSAXLE 4360-73

Pos.	Quantity	Spare part No	Description	Kit	Notes	New
	4360					
	-73					
0	1	1133-0820-01	Transaxle		Monark 12/40	
1	1	F000-5305-D0	Upper housing			
2	14	F000-1919-00	Screw			
3	2	F000-5112-00	Ball			
4	2	F000-3626-00	Spring			
5	2	F000-3623-00	Set screw			
6	1	F000-4731-00	Shifter			
7	1	F000-5024-00	Shifter boot			
8	1	F000-3724-00	Screw			
9	1	F000-5014-00	Gear, spur		27T	
10	1	F000-1106-00	.Retaining ring			
11	3	F000-4689-00	Kit-shim			
12	1	F000-3847-00	Lock nut			
13	2	F000-3876-00	.Washer			
14	1	F000-1746-00	.Key			
15	1	F000-4551-00	Kit, input shaft			
16	1	F000-3590-00	.Pinion, bevel		14T	
17	1	F000-3624-00	.Retaining ring			
18	1	F000-1090-00	Chain			
19	3	F000-1542-00	Flange bearing			
20	1	F000-5402-00	Gear		14T	
21	1	F000-5303-00	Shifter boot			
22	1	F000-4758-00	Kit-clutch keys			
23	1	F000-5120-00	Screw			
24	1	F000-5403-00	Intermediate shaft			
25	1	F000-1375-00	Woodruff key			
26	1	F000-3627-00	Retaining ring			
27	1	F000-3897-00	Sprocket		14T	
28	1	F000-3841-00	Spacer			
29	1	F000-4831-00	Gear		15T+35T	
30	1	F000-5027-00	Spacer			
31	1	F000-3867-00	Gear, spur		30T	
32	1	F000-3783-00	Gear, spur		25T	
33	1	F000-3907-00	Friction puck			
34	1	F000-5202-00	Gear, spur		19T	
35	1	F000-3628-00	Washer			
36	2	F000-1423-00	Washer		0.7 mm	
37	1	F000-3422-00	Spacer			
38	1	F000-4286-00	Gear, comb.		12T-35T	
39	1	F000-3967-00	Idler shaft			
40	1	F000-3901-00	Spacer			
41	1	F000-3815-00	Sprocket		10T	
42	1	F000-3853-00	Gear, bevel		42T	
43	2	F000-4691-00	Kit-shim			
44	1	F000-3882-00	Drive shaft			
45	1	F000-4831-00	Gear		15T-35T	
46	1	F000-3714-00	Spacer			
47	1	F000-3866-00	Gear, spur		20T	
48	1	F000-3719-00	Gear, spur		25T	
49	1	F000-5013-00	Gear, spur		23T	
50	1	F000-3683-00	Gear, spur		31T	
51	1	F000-1145-00	Washer			
52	2	F000-5130-00	Seal			
53	2	F000-3184-00	Washer		0.8 mm	
54	1	F000-3895-00	Axle-L.H.			
55	2	F000-3780-00	Gear, miter		15T	
56	2	F000-3656-00	Retaining ring			
57	1	F000-3839-00	Gear, spur		32T	
58	1	F000-3919-00	Cross shaft			
59	2	F000-3781-00	Gear, miter		15T	
60	1	F000-3896-00	Axle-R.H.			
61	1	F000-5304-F0	Lower housing			
62	1	F000-3920-00	Friction puck			
63	1	F000-3276-00	Brake disc			
64	1	F000-3758-00	Spacer			
65	1	F000-3916-00	Brake jaw			

## Section: FOOTE TRANSAXLE 4360-73

Pos.	Quantity	Spare part No	Description	Kit	Notes	New
------	----------	---------------	-------------	-----	-------	-----

4360  
-73

66	2	F000-3843-00	Dowel pin			
67	2	F000-5131-00	Screw			
68	1	F000-5284-00	Actuating lever			
69	1	F000-3760-00	Washer			
70	1	F000-3917-00	Bracket			
72	1	F000-5415-00	Flange bearing			
73	1	F000-5416-00	Oil seal			
99	1	F000-4300-00	Grease			

test