



Section: TORNADO TRANSMISSION

Pos.	Quantity	Spare part No	Description	Kit	Notes	New
	4218					
1	1	1111-2580-01	Front axle			
2	2	1111-2595-01	Bushing			
3	2	9699-0115-02	Washer			
4	2	1111-1456-01	Washer			
8	2	1111-2183-01	Spring			
9	4	9699-0100-02	Washer			
10	4	9946-0612-16	Screw			
20	2	1111-2664-01	Hub cap			
21	2	1111-2676-01	Wheel cup			
22	2	1111-2665-01	Wheel assy			
23	1	1111-9047-01	.Ball bearing kit			
24	2	1111-1184-01	..Bearing cone			
25	2	1111-2600-01	Gear wheel			
26	2	1111-2782-02	Wheel cover			
28	2	9836-9516-12	Screw			
29	2	1111-2922-01	Front support			
30	1	1111-2568-01	Transm.cover-yellow			
31	2	9848-8013-16	Screw			
35	1	1111-2564-01	Transmission assy		Se grupp 29	
36	1	F000-3475-00	.Key			
37	2	9659-0050-04	Lock ring			
38	2	1111-2382-01	Pin			
39	1	1111-2916-01	Belt pulley			
40	1	1111-9059-01	Drive belt			
41	1	9943-0510-16	Screw			
42	1	1111-2567-01	Spring holder			
43	1	1134-1023-00	Spring			
44	1	1111-2621-01	Spring stop			
45	1	1111-2433-02	Belt pulley		25 mm	
46	1	9915-0612-15	Screw			
49	1	9403-0115-70	Cover plug			
51	1	9579-0008-00	Cable holder			
57	1	1111-2018-01	Cable holder			
58	1	9836-9216-12	Screw			
59	1	1111-2965-02	Clutch control			
60	2	9747-0631-02	Lock nut			
61	1	9836-9512-12	Screw			
62	2	9948-0655-16	Screw			
63	1	1111-1987-02	Control knob-black			