



Section: 827-827T AUGER ASSY

| Pos. | Quantity | Spare part No | Description | Kit | Notes | New |
|------|----------|---------------|---------------------|-----|------------------|-----|
| | 2834 | | | | | |
| | 2835 | | | | | |
| 1 | 32 | 9795-3631-02 | Nut | | | |
| 2 | 32 | 9683-0030-02 | Lock washer | | | |
| 3 | 32 | 9699-0028-02 | Flat washer | | | |
| 4 | 29 | 9899-3622-16 | Screw | | | |
| 14 | 1 | 1812-0869-01 | Side plate-R.H. | | | |
| 15 | 1 | 1812-0868-01 | Side plate-L.H. | | | |
| 16 | 1 | 1812-1282-01 | Auger housing | | | |
| 17 | 1 | 1812-1278-01 | Gear box assy | | | |
| 19 | 1 | 1812-1274-01 | Auger-L.H. | | | |
| 20 | 1 | 1812-1275-01 | Auger-R.H. | | | |
| 25 | 2 | 1812-0347-01 | Bearing | | | |
| 26 | 2 | 1812-0397-01 | Spacer | | | |
| 27 | 1 | 1812-9005-01 | Shear bolt kit | | Inkl.pos. 28, 29 | |
| 28 | 2 | 1812-0531-01 | .Spacer | | | |
| 29 | 2 | 1812-0812-01 | .Locking nut | | | |
| 30 | 3 | 1812-1221-01 | Impeller stud | | | |
| 31 | 2 | 1812-1176-01 | Mounting bracket | | | |
| 32 | 8 | 9988-3719-16 | Screw | | | |
| 33 | 6 | 9683-0035-02 | Lock washer | | | |
| 34 | 6 | 9795-3731-02 | Nut | | | |
| 35 | 1 | 9743-3721-32 | Nut | | | |
| 36 | 1 | 1812-1288-01 | Brake arm stud | | | |
| 37 | 1 | 1812-1244-01 | Brake pad | | | |
| 38 | 1 | 1812-0401-01 | Pin | | | |
| 39 | 1 | 1812-1286-01 | Brake arm | | | |
| 40 | 1 | 1812-1162-01 | Return spring | | | |
| 41 | 1 | 1812-1344-01 | Jam nut | | | |
| 42 | 1 | 1812-1287-01 | Brake arm pivot bol | | | |
| 43 | 1 | 1812-1285-01 | Brake arm adj.bolt | | | |
| 44 | 1 | 1812-1167-01 | Key | | | |
| 45 | 1 | 1812-1229-01 | Ball bearing | | | |
| 46 | 1 | 1812-1250-01 | Retainer bearing | | | |
| 47 | 1 | 9699-0038-02 | Flat washer | | | |
| 48 | 2 | 9743-5421-32 | Nut | | | |
| 49 | 1 | 1812-1261-01 | Auger pulley | | | |
| 50 | 1 | 1812-1265-01 | Spacer impeller | | | |
| 51 | 2 | 1812-0831-01 | Height adjustor | | | |
| 52 | 4 | 1812-0387-01 | Screw | | | |
| 53 | 1 | 1812-1258-01 | Scraper bar | | | |
| 54 | 4 | 9988-3519-16 | Screw | | | |
| 55 | 8 | 9699-0026-02 | Flat washer | | | |
| 56 | 4 | 9743-3521-32 | Nut | | | |
| 57 | 3 | 9743-3621-32 | Nut | | | |
| 58 | 3 | 9899-3625-16 | Screw | | | |
| 59 | 1 | 1812-1333-01 | Chute rotate ring-i | | | |
| 60 | 1 | 1812-1336-01 | Chute rotate collar | | | |
| 61 | 1 | 1812-1332-01 | Chute rot. ring-out | | | |