



Section: 827E-1030E HANDLE CONTROLS

| Pos. | Quantity | Spare part No | Description | Kit | Notes | New |
|------|----------|---------------|---------------------|-----|-------|-----|
| | 2836 | | | | | |
| | 2843 | | | | | |
| 1 | 1 | 1812-1183-01 | Retainer cap | | | |
| 2 | 7 | 9699-0029-02 | Flat washer | | | |
| 3 | 1 | 1812-1168-01 | Handle | | | |
| 4 | 1 | 1812-1339-01 | Crank | | | |
| 5 | 1 | 1812-1184-01 | Shifter bracket | | | |
| 6 | 6 | 9988-3619-16 | Screw | | | |
| 7 | 10 | 9683-0030-02 | Lock washer | | | |
| 8 | 10 | 9795-3631-02 | Nut | | | |
| 9 | 1 | 1812-1297-01 | Clutch handle-L.H. | | | |
| 10 | 1 | 1812-1298-01 | Clutch handle-R.H. | | | |
| 11 | 2 | 1812-0955-01 | Handle grip | | | |
| 12 | 8 | 1812-0733-01 | Screw | | | |
| 13 | 2 | 1812-0821-01 | Carriage bolt | | | |
| 14 | 2 | 9743-3521-32 | Nut | | | |
| 15 | 2 | 1812-1186-01 | Panel bracket | | | |
| 16 | 2 | 1812-0520-01 | Protection | | | |
| 17 | 1 | 1812-1194-01 | Handle-upper | | | |
| 18 | 2 | 1812-0249-01 | Control wire | | | |
| 19 | 1 | 1812-1189-01 | Bail rod-L.H. | | | |
| 20 | 1 | 1812-0834-01 | Cam lock spring | | | |
| 21 | 1 | 1812-1188-01 | Bail rod-R.H. | | | |
| 22 | 2 | 1812-0396-01 | Retainer | | | |
| 23 | 1 | 1812-1280-01 | Pin latch | | | |
| 24 | 1 | 1812-1185-01 | Bracket cam retaine | | | |
| 25 | 1 | 9988-3764-12 | Screw | | | |
| 26 | 1 | 1812-1193-01 | Spacer | | | |
| 27 | 1 | 1812-1249-01 | Actuator shift | | | |
| 28 | 1 | 1812-0304-01 | Spring | | | |
| 29 | 1 | 9743-3721-32 | Nut | | | |
| 30 | 1 | 1812-1293-01 | Knob | | | |
| 31 | 2 | 9988-3645-16 | Screw | | | |
| 32 | 1 | 9599-0054-02 | Cutter pin | | | |
| 33 | 1 | 9699-0028-02 | Flat washer | | | |
| 34 | 1 | 1812-1242-01 | Speed control rod | | | |
| 35 | 2 | 9794-5131-02 | Nut | | | |
| 36 | 1 | 1812-0622-01 | Adaptor | | | |
| 37 | 1 | 1812-0303-01 | Ball joint | | | |
| 38 | 1 | 1812-1159-01 | Polyscrew | | | |
| 39 | 1 | 1812-1192-01 | Deflector lever | | | |
| 40 | 4 | 1812-0660-01 | Spring washer | | | |
| 41 | 1 | 1812-0254-01 | Spring | | | |
| 42 | 2 | 9743-3521-32 | Nut | | | |
| 43 | 1 | 1812-1210-01 | Spring | | | |
| 44 | 4 | 9683-0035-02 | Lock washer | | | |
| 45 | 2 | 9795-3731-02 | Nut | | | |
| 46 | 2 | 1812-0830-01 | Plastic stop | | | |
| 47 | 2 | 9988-3745-12 | Screw | | | |
| 48 | 2 | 9743-3721-32 | Nut | | | |
| 49 | 1 | 1812-0394-01 | Eyebolt | | | |
| 50 | 1 | 1812-0203-01 | Grommet | | | |
| 51 | 1 | 1133-0650-01 | Handle | | | |
| 52 | 1 | 1812-1294-01 | Control panel | | | |
| 53 | 1 | 1812-1335-01 | Chute rotate worm | | | |
| 54 | 1 | 1812-1316-01 | Universal pin | | | |
| 55 | 1 | 1812-1317-01 | Universal pivot blo | | | |
| 56 | 1 | 1812-1318-01 | Clevis pin | | | |
| 57 | 1 | 9599-0033-00 | Split pin | | | |
| 58 | 1 | 1812-1334-01 | Bracket-chute worm | | | |
| 59 | 4 | 9699-0026-02 | Flat washer | | | |
| 60 | 2 | 9988-3519-16 | Screw | | | |
| 61 | 2 | 9743-3521-32 | Nut | | | |
| 62 | 2 | 9743-3721-32 | Nut | | | |
| 63 | 1 | 1812-1195-01 | Lens cover | | | |
| 64 | 1 | 1812-1187-01 | Light bracket | | | |
| 65 | 1 | 1812-1196-01 | Light housing | | | |
| 66 | 1 | 1812-1245-01 | Light bulb | | | |

Section: 827E-1030E HANDLE CONTROLS

| Pos. | Quantity | Spare part No | Description | Kit | Notes | New |
|------|----------|---------------|-------------|-----|-------|-----|
|------|----------|---------------|-------------|-----|-------|-----|

2836

2843

| | | | | | | |
|----|---|--------------|---------------|--|--|--|
| 67 | 1 | 1812-1197-01 | Lamp holder | | | |
| 68 | 1 | 1812-1169-01 | Wire harness | | | |
| 69 | 2 | 1812-1171-01 | Washer | | | |
| 70 | 1 | 1812-1170-01 | Boot-eye bolt | | | |
| 71 | 1 | 1812-1172-01 | Boot adaptor | | | |
| 73 | 1 | 9795-3531-02 | Nut | | | |
| 74 | 2 | 1812-0385-01 | Screw | | | |
| 75 | 1 | 1812-0553-01 | Handle-lower | | | |

test