



Section: SP 340 CRANKCASE

Pos.	Quantity	Spare part No	Description	Kit	Notes	New
	4110					
1	1	1911-3581-01	Crankcase assy		Inkl. pos 12-14, 22	
2	1	1911-3534-01	Tank cap			
3	1	1911-3534-01	Tank cap			
4	1	1911-3539-01	Oil pump			
5	1	1911-3462-01	Spacer			
6	2	1911-3247-01	Screw			
7	1	1911-3368-01	Retainer			
8	1	1911-3225-01	Bar		14" (3/8"x0.050)	
9	1	1911-3295-01	Chain tension screw			
10	1	1911-3242-01	Screw			
11	1	1911-3387-01	Chain tensioner			
12	1	1911-3445-01	.Cap-oil supply			
13	1	1911-3369-01	.Reinforcement			
14	1	1911-3554-01	.Oil tube			
15	1	1911-3365-01	Bar plate			
16	1	1911-3233-01	Chain (50E)		91VG (3/8")	
17	1	1911-3541-01	Clutch housing-yell		Inkl. pos 20	
18	1	1911-3505-01	Fuel line			
19	1	1911-3150-01	Intake filter			
20	1	1911-3296-01	.Nut			
21	1	1911-3369-01	Reinforcement			
22	1	1911-3560-01	.Breather valve			
23	1	1911-3249-01	Screw			
24	1	1911-3519-01	Chain cover		14"	
25	1	1911-3557-01	Accessory bag			
26	1	8215-3207-01	Owner's manual			

test