



## Section: SP 370-SP 410 CRANKCASE

Pos.	Quantity	Spare part No	Description	Kit	Notes	New
	4113	4114				
1	1	1	1911-3583-01	Crankcase		
2	1	1	1911-3550-01	Tank cap		
3	1	1	1911-3550-01	Tank cap		
4	1	1	1911-3539-01	Oil pump		
5	1	1	1911-3462-01	Spacer		
6	2	2	1911-3247-01	Screw		
7	1	1	1911-3368-01	Retainer		
8	1	1	1911-3230-01	Bar	13" (0.325"x0.050)	
8		1	1911-3231-01	Bar	16" (0.325"x0.050)	
9	1	1	1911-3295-01	Chain tension screw		
10	1	1	1911-3242-01	Screw		
11	1	1	1911-3387-01	Chain tensioner		
12	1	1	1911-3445-01	Cap-oil supply		
13	1	1	1911-3369-01	Reinforcement		
14	1	1	1911-3563-01	Tube		
15	1	1	1911-3365-01	Bar plate		
16	1	1	1911-3238-01	Chain (56E)	95VP (0.325")	
16		1	1911-3239-01	Chain (64E)	95VP (0.325")	
17	1	1	1911-3547-01	Clutch housing-yell		
18	1	1	1911-3505-01	Fuel line		
19	1	1	1911-3150-01	Intake filter		
20	1	1	1911-3296-01	Nut		
21	1	1	1911-3369-01	Reinforcement		
22	1	1	1911-3560-01	Breather valve		
23	1	1	1911-3249-01	Screw		
24	1	1	1911-3336-01	Spike		
25	1	1	1911-3002-01	Screw		
26		1	1911-3520-01	Chain cover	16"	
26	1	1	1911-3519-01	Chain cover	13"	
27	1	1	1911-3556-01	Accessory bag		
28	1	1	8215-3204-01	Owner's manual		