



**STIGA**  
**1195**  
SPARE PARTS

## Section: SWEEPER ART.NR 13-0920-11 CHASSIS

| Pos. | Quantity | Spare part No | Description         | Kit | Notes              | New |
|------|----------|---------------|---------------------|-----|--------------------|-----|
|      | 0920     |               |                     |     |                    |     |
| 1    | 2        | 1134-4770-01  | Attachment assy     |     |                    |     |
| 2    | 1        | 1134-9026-01  | .Bearing bush kit   |     | Sats 4 st/kit of 4 |     |
| 3    | 2        | 9501-0502-00  | .Grease joint       |     |                    |     |
| 5    | 1        | 1134-2552-01  | Mounting frame      |     |                    |     |
| 6    | 4        | 9959-0816-16  | Screw               |     |                    |     |
| 7    | 2        | 9997-0814-02  | Screw               |     |                    |     |
| 9    | 10       | 9739-0831-22  | Nut                 |     |                    |     |
| 10   | 2        | 1134-2694-01  | Pivot wheel-rear    |     |                    |     |
| 18   | 2        | 9997-1030-16  | Screw               |     |                    |     |
| 19   | 2        | 9739-1031-22  | Nut                 |     |                    |     |
| 21   | 2        | 1134-2684-01  | Bearing             |     |                    |     |
| 23   | 1        | 1134-2564-01  | Shaft               |     |                    |     |
| 25   | 3        | 9595-0209-00  | Locating pin        |     |                    |     |
| 27   | 1        | 1134-4740-01  | Mounting            |     |                    |     |
| 28   | 1        | 1134-3959-01  | Spring attachment   |     |                    |     |
| 29   | 2        | 9945-0816-16  | Screw               |     |                    |     |
| 30   | 2        | 9997-1035-16  | Screw               |     |                    |     |
| 31   | 2        | 9739-1031-22  | Nut                 |     |                    |     |
| 32   | 1        | 1134-2756-01  | Wheel support front |     |                    |     |
| 33   | 2        | 9997-0840-16  | Screw               |     |                    |     |
| 35   | 3        | 9739-0631-22  | Nut                 |     |                    |     |
| 36   | 1        | 1134-2607-01  | Tube                |     |                    |     |
| 37   | 2        | 1134-2608-02  | Spacer              |     |                    |     |
| 38   | 1        | 9699-0042-02  | Flat washer         |     |                    |     |
| 39   | 1        | 1134-2604-01  | Pivot wheel bracket |     |                    |     |
| 40   | 1        | 9997-1212-02  | Screw               |     |                    |     |
| 42   | 1        | 9747-1231-02  | Lock nut            |     |                    |     |
| 43   | 1        | 1134-3569-01  | Lifting rod         |     |                    |     |
| 44   | 1        | 9403-0100-70  | Handle grip         |     |                    |     |
| 45   | 1        | 9997-0640-12  | Screw               |     |                    |     |
| 46   | 1        | 1134-2768-01  | Shaft               |     |                    |     |
| 48   | 1        | 9997-0845-12  | Screw               |     |                    |     |
| 49   | 1        | 9747-0831-02  | Lock nut            |     |                    |     |
| 52   | 1        | 9699-0069-02  | Flat washer         |     |                    |     |
| 55   | 1        | 1134-2578-01  | Compression spring  |     |                    |     |
| 56   | 2        | 9548-0015-00  | Bronze bearing      |     |                    |     |
| 57   | 2        | 1134-2629-01  | Lift link           |     |                    |     |
| 58   | 1        | 1134-0857-00  | Trippet             |     |                    |     |
| 61   | 1        | 1134-2630-01  | Link                |     |                    |     |
| 62   | 1        | 9405-0031-00  | Eye-bolt            |     |                    |     |
| 63   | 1        | 1134-0576-00  | Link key            |     |                    |     |
| 64   | 1        | 9747-0831-02  | Lock nut            |     |                    |     |
| 65   | 1        | 9699-0035-02  | Flat washer         |     |                    |     |
| 68   | 1        | 9598-0003-02  | Spring pin          |     |                    |     |
| 72   | 1        | 1134-2617-01  | Protection shield   |     |                    |     |
| 75   | 1        | 1134-2614-01  | Shield bracket      |     |                    |     |
| 76   | 1        | 1134-2618-01  | Bar                 |     |                    |     |
| 77   | 2        | 9959-0825-16  | Screw               |     |                    |     |
| 80   | 2        | 1134-2628-01  | Protection shield-L |     |                    |     |
| 81   | 2        | 9959-0612-16  | Screw               |     |                    |     |
| 86   | 1        | 1134-2608-01  | Spacer              |     |                    |     |
| 87   | 2        | 1611-0027-01  | Rim                 |     |                    |     |
| 88   | 1        | 9545-0108-00  | Tyre                |     |                    |     |
| 89   | 1        | 9545-0209-00  | Inner tube          |     |                    |     |
| 90   | 2        | 9549-0043-00  | Ball bearing        |     |                    |     |
| 93   | 6        | 9947-0616-16  | Screw               |     |                    |     |
| 95   | 3        | 9403-0044-70  | Plug                |     |                    |     |
| 96   | 3        | 1134-2609-01  | Knob                |     |                    |     |
| 97   | 1        | 1134-2559-01  | Mounting bracket    |     |                    |     |
| 101  | 1        | 9739-1031-22  | Nut                 |     |                    |     |
| 106  | 4        | 9959-0820-16  | Screw               |     |                    |     |
| 107  | 1        | 9997-0640-12  | Screw               |     |                    |     |
| 108  | 1        | 9997-1040-16  | Screw               |     |                    |     |