



Section: SB 40-SB 44-SB 52 BRUSH CUTTER DRIVE SHAFT

Pos.	Quantity	Spare part No	Description	Kit	Notes	New
		6115				
	4629	4630				
1	1	1	1911-3203-01		Handle assy	Inkl. pos 2 - 9
2	1	1	1911-3001-01		.Screw	
3	1	1	1911-3008-01		.Screw	
4	1	1	1911-3217-01		.Nut	
5	1	1	1911-3053-01		.Stop switch	
6	1	1	1911-3108-01		.Throttle lever	
7	1	1	1911-3109-01		.Safety lever	
8	1	1	1911-3089-01		.Spring	
9	1	1	1911-3090-01		.Spring	
10	1	1	1911-3146-01		Throttle wire	
11	1	1	1911-3133-01		Wire sheath	
12	1	1	1911-3061-01		Cable-red	
13	1	1	1911-3062-01		Earth cable-black	
14	1	1	1911-3722-01		Handle	
15	1	1	1911-3114-01		Knob-left	
16	1	1	1911-3000-01		Screw	
17	1	1	1911-3123-01		Wing nut	
18	1	1	1911-3192-01		Handle support assy	
19	1	1	1911-3658-01		.Screw	
20	1	1	1911-3091-01		Spring	
21	1	1	1911-3066-01		.Lock ring	
22	1	1	1911-3035-01		.Ball bearing	
23	1	1	1911-3188-01		Transmission hub as	Inkl. pos 19, 21 -
23	1	1	1911-3189-01		Transmission hub as	Inkl. pos 19, 21 -
24	1	1	1911-3011-01		Screw	
25	1	1	1911-3021-01		Nut	
26	4	4	1911-3012-01		Screw	
27	1	1	1911-3111-01		Shock absorber-rear	
28	1	1	1911-3171-01		Transmission housin	
29	3	3	1911-3110-01		Shock absorber-fron	
30	1	1	1911-3080-01		Handle fixing plate	
31	1	1	1911-3172-01		Housing support-fro	
31	1	1	1911-3173-01		Housing support-fro	
32	2	2	1911-3009-01		Screw	
33	2	2	1911-3217-01		Nut	
34	1	1	1911-3134-01		.Clutch	
35	1	1	1911-3083-01		.Bearing hub	
36	1	1	1911-3140-01		Transm. shaft assy	Inkl. pos 34 - 35
37	1	1	1911-3142-01		Transmission pipe	D = 28 mm
37	1	1	1911-3139-01		Transmission pipe	D = 26 mm
38	1	1	1911-3201-01		Safety cover assy	Inkl. pos 39 - 42
39	1	1	1911-3006-01		.Screw	
40	1	1	1911-3216-01		.Washer	
41	1	1	1911-3022-01		.Nut	
42	1	1	1911-3077-01		.Line cutter	
43	2	2	1911-3216-01		Washer	
44	2	2	1911-3009-01		Screw	
45	1	1	1911-3152-01		Harness	
46	1	1	1911-3166-01		Stone shield (saw)	
99	1	1	1911-3212-01		Protective goggles	Ej ill/not ill.