



Section: 1648H-TRH107 TRANSMISSION

Pos.	Quantity	Spare part No	Description	Kit	Notes	New
	8131					
	8138					
1	1	1132-0808-01	Pedal			
2	1	1132-0733-01	Pivot block			
3	2	1811-0175-01	Flange bearing			
4	1	1132-0861-01	Hydro pedal support			
5	1	9699-0104-02	Washer			
6	1	1132-0807-01	Control shaft			
7	1	1132-0735-01	Torsion spring			
8	1	1132-0009-01	Roll pin			
9	1	1132-0806-01	Speed control rod			
10	1	9988-3757-12	Screw			
11	12	9699-0029-02	Flat washer			
12	1	1132-0723-01	V-belt			
13	4	9743-3721-32	Nut			
14	1	1132-0448-01	Eye bolt			
15	2	1811-0752-01	Nylon bushing			
16	1	1132-0290-01	Clutch rod			
17	1	1132-0724-01	Clutch arm			
18	1	1132-0732-01	Adjusting screw			
19	1	9743-5421-32	Nut			
20	1	1132-0719-01	Compression spring			
21	1	1132-0730-01	Brake rod			
22	4	1811-0142-01	Roll pin			
23	1	1132-0519-01	Arm			
24	1	1132-0491-01	Brake lock rod			
25	1	1132-0798-01	Tank support			
26	4	9988-3670-12	Screw			
27	1	1132-0826-01	Brake pedal			
28	3	1811-0122-01	Cotter pin			
29	1	1132-0119-01	Foot rest			
30	6	9599-0070-02	Split pin			
31	1	1132-0517-01	Torsion spring			
32	2	1132-0059-01	Nylon bushing			
33	1	1132-0289-01	Idler arm			
34	2	1132-0906-01	Belt guide			
35	1	9988-3745-12	Screw			
36	1	1132-0835-01	Idler			
37	1	1132-0704-01	Roll pin			
38	1	1132-0834-01	Latch			
39	1	1132-0705-01	Pop rivet			
40	3	1132-0690-01	Screw			
41	1	9727-3541-22	Nut			
42	2	1132-0701-01	Retaining ring			
43	ERF	1132-0341-01	Washer			
44	2	1132-0580-01	Tire		20 x 10.00-8	
45	2	9545-0500-00	Valve			
46	2	1132-0561-01	Wheel disc			
47	1	1132-0722-01	Hydro sheave			
48	2	1132-0699-01	Key			
49	1	1132-0731-01	Adj. block			
50	1	1132-0737-01	Speed control arm			
51	1	1132-0004-01	Woodruff key			
52	1	1132-0736-01	Pivot shaft			
53	1	1132-0702-01	Retaining ring			
54	1	1811-0189-01	Key			
55	1	1811-0143-01	Roll pin			
56	1	1132-0833-01	Flat washer			
57	1	1132-0738-01	Fan			
58	1	9988-3525-16	Screw			
59	1	9683-0025-02	Lock washer			
60	1	1132-0734-01	Dowel pin			
61	1	9794-5231-02	Nut			
62	1	1132-0832-01	Ball joint			
63	1	1132-0763-01	Brake arm			
64	1	1132-0857-01	Guide			
65	2	9743-3521-32	Nut			
66	1	1811-0808-01	Washer			

Section: 1648H-TRH107 TRANSMISSION

Pos.	Quantity	Spare part No	Description	Kit	Notes	New
	8131					
	8138					
67	1	1132-0838-01	Interlock bracket			
68	1	1132-0710-01	Compression spring			
69	4	1811-0195-01	Screw			
70	4	1132-0691-01	Screw			
71	4	9727-3641-22	Nut			
72	1	1132-0758-01	Bracket			
73	1	1132-0299-01	Push on cap			
74	1	1132-0516-01	Idler bracket			
75	2	1132-0298-01	Set screw			
76	1	1132-0762-01	Brake link			
77	1	1132-0812-01	Belt guide-R.H.			
78	1	1132-0813-01	Belt guide-L.H.			
79	2	9988-3625-16	Screw			
80	1	1132-0759-01	Shaft support			
81	10	9699-0028-02	Flat washer			
82	2	1132-0811-01	Flange bearing			
83	4	9743-3621-32	Nut			
84	1	1132-0818-01	Jackshaft			
85	4	1811-0433-01	Lock nut			
86	4	1811-0138-01	Screw			
87	1	1132-0104-01	Idler pulley			
88	1	9699-0038-02	Flat washer			
89	1	1132-0055-01	Spacer			
91	2	9652-0015-04	Retaining ring			
92	1	1132-0416-01	Pivot block			
93	1	1132-0760-01	Fan shroud			
94	1	9683-0030-02	Lock washer			
95	1	1132-0802-01	Hose			
96	4	1132-0856-01	Hose clamp			
97	1	1132-0769-01	Oil reservoir			
98	ERF	1811-0529-01	Washer			
99	ERF	1132-0047-01	Flat washer			
100	2	9683-0035-02	Lock washer			
101	2	1132-0707-01	Washer			
102	1	1132-0827-01	Hydrostatic transax			
103	1	1132-0803-01	Hose			
104	1	9743-5321-32	Nut			
105	8	1132-0566-01	Wheel nut			
106	8	1132-0567-01	Wheel stud			
107	2	1132-0901-01	Wheel hub			