



Section: 1648H-TRM107-TRH107 ENGINE

Pos.	Quantity		Spare part No	Description	Kit	Notes	New
		8131					
	8119	8138					
1	1	1	1132-0262-01	Fuel tank pad			
2	1	1	1132-0825-01	Fuel tank gauge			
3	1	1	1132-0850-01	Fuel tank			
4	1	1	1132-0542-01	Fuel line			
5	2	2	1132-0475-01	Hose clamp			
6	1	1	1132-0658-01	Heat shield-R.H.			
7	1	1	1132-0657-01	Heat shield-L.H.			
8	2	2	1132-0712-01	Knob			
9	1	1	1132-0810-01	Throttle control			
10	1	1	1132-0809-01	Choke control			
11	8	8	1811-0138-01	Screw			
12	4	4	1811-0191-01	Nut			
13	1	1	1132-0549-01	Heat shield			
14	1	1	1132-0111-01	Fuel filter			
15	1	1	1132-0659-01	Heat shield			
17	4	4	9795-3631-02	Nut			
18	4	4	9683-0030-02	Lock washer			
19	1	1	1132-0129-01	Sealing strip			
20	5	5	1811-0350-01	Cableholder			
21	2	2	1132-0336-01	J-clip			
22	3	3	1132-0278-01	Cable hanger			
23	1	1	1132-0220-01	Elbow			
24	1	1	1132-0222-01	Pipe nipple			
25	1	1	1132-0221-01	Street elbow			
26	1	1	1132-0267-01	Special washer			
27	1	1	9683-0045-02	Washer			
28	1	1	1132-0680-01	Exhaust pipe			
29	1	1	1132-0266-01	Screw			
30	5	5	1132-0033-01	Nut			
31	1	1	1132-0660-01	Trim			
32	4	4	1811-0170-01	Screw			
33	1	1	9988-3651-12	Screw		51 mm	
34	3	3	9988-3638-12	Screw		38 mm	
35	1	1	1132-0360-01	Key			
36	1	1	1132-0296-01	Sheave			
36		1	1132-0191-01	Sheave			
37	1	1	1132-0685-01	Electric clutch			
38	1	1	1132-0679-01	Clutch retainer			
39	1	1	9699-0028-02	Flat washer			
40	1	1	9678-0009-02	Lock washer			
45	4	4	1132-0488-01	Screw			
56	4	4	1132-0689-01	Screw			
57	2	2	9727-3541-22	Nut			