



Section: GARDEN STEERING TRANSMISSION

| Pos. | Quantity | Spare part No | | | | Description | Kit | Notes | New |
|------|----------|---------------|------|------|--------------|---------------------|-----|---------------------|-----|
| | 2121 | | | 2126 | | | | | |
| | 2151 | 2131 | 2136 | 2156 | | | | | |
| 2 | 2 | 2 | 2 | 2 | 1134-1881-01 | Rim | | | |
| 3 | 2 | 2 | 2 | 2 | 9545-0113-00 | Tyre | | | |
| 3 | | | | | 9545-0205-00 | Inner tube | | Reservdel/spare par | |
| 4 | 4 | 4 | 4 | 4 | 9545-0500-00 | Valve | | | |
| 5 | 8 | 8 | 8 | 8 | 1134-0341-01 | Washer | | | |
| 6 | 2 | 2 | 2 | 2 | 1134-1348-01 | Screw | | | |
| 7 | 2 | 2 | 2 | 2 | 9743-3721-32 | Nut | | | |
| 9 | 8 | 8 | 8 | 8 | 1134-9024-01 | Bearing | | | |
| 10 | 2 | 2 | 2 | 2 | 1134-2648-01 | Rim | | | |
| 11 | 2 | 2 | 2 | 2 | 9545-0114-00 | Tyre | | | |
| 12 | | | | | 9545-0201-00 | Inner tube | | Reservdel/spare par | |
| 13 | 4 | 4 | 4 | 4 | 9650-0020-04 | Circlip | | | |
| 16 | 2 | 2 | 2 | 2 | 1134-1875-01 | Bushing | | | |
| 17 | 2 | 2 | 2 | 2 | 1134-1876-01 | Axle mounting | | | |
| 18 | 7 | 7 | 7 | 7 | 9739-0831-22 | Nut | | | |
| 19 | 4 | 4 | 4 | 4 | 9959-0820-16 | Screw | | | |
| 21 | 1 | 1 | 1 | 1 | 1134-2125-01 | Spindle-L.H. | | | |
| 21 | 1 | 1 | 1 | 1 | 1134-2125-02 | Spindle-R.H. | | | |
| 22 | 2 | 2 | 2 | 2 | 9501-0500-00 | Grease joint | | | |
| 23 | 1 | 1 | 1 | 1 | 1134-2950-01 | Steering kit | | | |
| 24 | 2 | 2 | 2 | 2 | 9570-0002-00 | Elbow link | | | |
| 25 | 2 | 2 | 2 | 2 | 9799-0831-02 | Nut | | | |
| 26 | 1 | 1 | 1 | 1 | 1134-2803-01 | Steering arm | | | |
| 27 | 1 | 1 | 1 | 1 | 9595-0258-00 | Locating pin | | | |
| 28 | 1 | 1 | 1 | 1 | 9599-0067-02 | Cotter pin | | | |
| 29 | 1 | 1 | 1 | 1 | 9699-0056-02 | Flat washer | | | |
| 30 | 2 | 2 | 2 | 2 | 1134-1901-01 | Bearing | | | |
| 31 | 1 | 1 | 1 | 1 | 1134-1424-01 | Steering column | | | |
| 32 | 1 | 1 | 1 | 1 | 1134-1967-01 | Steering wheel+colu | | | |
| 33 | 1 | 1 | 1 | 1 | 9595-0262-00 | .Locating pin | | | |
| 34 | 1 | 1 | 1 | 1 | 9699-0103-02 | .Flat washer | | 0.5 mm | |
| 34 | 1 | 1 | 1 | 1 | 9699-0114-02 | .Flat washer | | 1.0 mm | |
| 35 | 1 | 1 | 1 | 1 | 1134-1979-02 | Pedal | | | |
| 36 | 2 | 2 | 2 | 2 | 1134-1927-01 | Bearing | | | |
| 37 | 4 | 4 | 4 | 4 | 9898-0635-12 | Screw | | | |
| 38 | 5 | 4 | 4 | 5 | 9739-0631-22 | Nut | | | |
| 39 | 1 | 1 | 1 | 1 | 1134-1937-01 | Control lever | | | |
| 40 | 1 | 1 | 1 | 1 | 4231-0013-00 | Spring | | | |
| 43 | 1 | 1 | 1 | 1 | 1134-2138-01 | Eye bolt | | | |
| 44 | 1 | 1 | 1 | 1 | 1134-2124-01 | Brake rod | | | |
| 45 | 1 | 1 | 1 | 1 | 1134-1023-00 | Spring | | | |
| 46 | 4 | 4 | 4 | 4 | 9699-0090-02 | Flat washer | | | |
| 47 | 2 | 2 | 2 | 2 | 9595-0160-00 | Locating pin | | | |
| 48 | 1 | 1 | 1 | 1 | 9747-0831-02 | Lock nut | | | |
| 49 | 1 | 1 | 1 | 1 | 1131-1475-01 | Spring | | | |
| 50 | 2 | 2 | 2 | 2 | 1134-1889-01 | Eyebolt | | | |
| 51 | 2 | 2 | 2 | 2 | 9747-0631-02 | Lock nut | | | |
| 52 | 1 | 1 | 1 | 1 | 1134-1931-02 | Clutch rod | | | |
| 53 | 1 | 1 | 1 | 1 | 1134-2123-01 | Pedal | | | |
| 56 | 2 | 2 | 2 | | 1134-0269-00 | Pedal rubber | | Finland | |
| 57 | 2 | 2 | 2 | | 1134-1965-01 | Slip protection | | Finland | |
| 58 | 1 | 1 | 1 | 1 | 1134-1446-01 | Spring | | | |
| 59 | 1 | 1 | 1 | 1 | 1134-0054-01 | Spacer | | | |
| 60 | 1 | 1 | 1 | 1 | 1134-1631-02 | Tensioner arm | | | |
| 61 | 1 | 1 | 1 | 1 | 1134-9027-01 | Tension roller | | | |
| 62 | 1 | 1 | 1 | 1 | 1134-9018-01 | V-belt | | | |
| 63 | 1 | 1 | 1 | 1 | 9739-1031-22 | Nut | | | |
| 64 | 1 | 1 | 1 | 1 | 9997-1025-16 | Screw | | | |
| 65 | 1 | 1 | 1 | 1 | 1134-2661-01 | Belt guide | | | |
| 68 | 1 | 1 | 1 | 1 | 1134-0240-00 | Shoulder screw | | | |
| 69 | 1 | 1 | 1 | 1 | 9696-0013-01 | Bowed washer | | | |
| 70 | 1 | 1 | 1 | 1 | 9699-0037-02 | Washer | | | |
| 71 | 1 | 1 | 1 | 1 | 1134-1849-01 | Belt pulley | | | |
| 72 | 1 | 1 | 1 | 1 | 9600-0050-00 | Key | | | |
| 73 | 1 | 1 | 1 | 1 | 9650-0016-04 | Lock ring | | | |
| 74 | 1 | 1 | 1 | 1 | 1134-1694-03 | Differential assy | | | |

Section: GARDEN STEERING TRANSMISSION

| Pos. | Quantity | | | | | Spare part No | Description | Kit | Notes | New |
|------|----------|------|------|------|--------------|---------------------|-------------|---------|-------|-----|
| | 2121 | | | | 2126 | | | | | |
| | 2151 | 2131 | 2136 | 2156 | | | | | | |
| 75 | 1 | 1 | 1 | 1 | 1134-1691-02 | Sprocket | | | | |
| 76 | 4 | 4 | 4 | 4 | 9795-3631-02 | Nut | | | | |
| 77 | 1 | 1 | 1 | 1 | 9589-0010-03 | Chain | | | | |
| 78 | 1 | 1 | 1 | 1 | 9589-0504-00 | .Chain lock | | | | |
| 79 | 1 | 1 | 1 | 1 | 9500-9950-00 | Transmission assy | | | | |
| 80 | 1 | 1 | 1 | 1 | P000-7920-72 | .Retaining ring | | | | |
| 81 | 1 | 1 | 1 | 1 | P000-7861-15 | .Sprocket | | | | |
| 82 | 4 | 4 | 4 | 4 | 9988-3619-16 | Screw | | | | |
| 84 | 1 | 1 | 1 | 1 | 1134-1925-02 | Gear shifter | | | | |
| 85 | 1 | 1 | 1 | 1 | 1134-1981-01 | Shift lock | | | | |
| 86 | 1 | 1 | 1 | 1 | 9699-0060-02 | Flat washer | | | | |
| 87 | 1 | 1 | 1 | 1 | 9987-5016-16 | Screw | | | | |
| 90 | | | | 1 | 1134-1736-02 | Engine belt pulley | | | | |
| 90 | | | 1 | | 1134-2830-02 | Engine pulley | | | | |
| 90 | | 1 | | | 1134-2830-01 | Engine pulley | | | | |
| 90 | 1 | | | | 1134-1736-01 | Engine pulley | | | | |
| 91 | 1 | 1 | | | 1134-0444-01 | Spacer | | Finland | | |
| 91 | | | | 1 | 1134-1364-02 | Spacer ring | | | | |
| 91 | | | 1 | | 1134-1364-03 | Spacer | | | | |
| 92 | 1 | 1 | | | 9600-0014-00 | Key | | | | |
| 92 | | | 1 | 1 | 9600-0250-00 | Key | | | | |
| 93 | 1 | 1 | | | 9699-0035-02 | Flat washer | | | | |
| 94 | | | 1 | | 9987-5345-12 | Screw | | | | |
| 94 | 1 | | | | 9987-5232-16 | Bolt | | | | |
| 94 | | 1 | | | 9987-5251-12 | Screw | | | | |
| 94 | | | | 1 | 9987-5332-16 | Screw | | | | |
| 98 | 1 | | | | 1134-2485-01 | Oil drain pipe assy | | | | |
| 99 | 1 | | | | 9578-0020-00 | .Clamp | | | | |
| 100 | 1 | | | 1 | 9997-0616-16 | .Screw | | | | |
| 101 | 1 | | | | 1134-0995-02 | .Plug | | | | |
| 103 | 1 | | | | 1134-0997-02 | .Fibre gasket | | | | |
| 104 | 1 | | | | 9404-0022-00 | .O-ring | | | | |
| 105 | | | | 1 | 1134-2482-01 | Oil drain pipe assy | | | | |
| 108 | | | | 1 | 1134-0995-01 | .Plug | | | | |
| 109 | | | | 1 | 1134-0997-01 | .Fibre gasket | | | | |
| 110 | | | | 1 | 9404-0020-00 | .O-ring | | | | |
| 111 | | | | 1 | 1134-2478-01 | Angle-oil drain pip | | | | |
| 112 | | | | 1 | 1134-0994-01 | Tube clamp | | | | |
| 115 | 1 | 1 | 1 | 1 | 1134-2808-01 | Sleeve | | | | |