



Section: VILLA TRANSMISSION ENGINE

Pos.	Quantity	Spare part No	Description	Kit	Notes	New
		2816				
		2836	2828			
	2812	2856	2858			
1	5	5	5	9739-0831-22	Nut	
2	1	1	1	9600-0050-00	Key	
3		1	1	1134-0269-00	Pedal rubber	Finland, Frankrik
4	1	1	1	1134-2123-02	Clutch pedal	
7	1	1	1	1134-1927-01	Bearing	
15	1	1	1	1134-1949-01	Spring	
20	1	1	1	1134-1631-02	Tensioner arm	
21	1	1	1	9696-0013-01	Bowed washer	
22	1	1	1	9699-0037-02	Washer	
23	1	1	1	1134-0240-00	Shoulder screw	
24	5	5	5	9997-0840-16	Screw	
25	1	1	1	1134-0139-01	Belt guide	
26	1	1	1	1134-1849-01	Belt pulley	
27	1	1	1	1134-9008-01	V-belt	
29	1	1	1	9747-0831-02	Lock nut	
31	1	1	1	9650-0016-04	Lock ring	
32	1	1	1	1134-1633-01	Engine belt pulley	
35	1	1	1	1134-9027-01	Tension roller	
37	1	1	1	9739-1031-22	Nut	
39	1	1	1	9987-5332-16	Screw	
40	4	4	4	9699-0090-02	Flat washer	
42	1	1	1	1134-1364-02	Spacer ring	
43	1	1	1	9959-0825-16	Screw	
44	1	1	1	1134-1795-01	Belt stirrup	
46	1	1	1	1134-0054-01	Spacer	
47	1	1	1	9997-1025-16	Screw	
48	4	4	4	9739-0631-22	Nut	
49	2	2	2	9898-0635-12	Screw	
50	1	1	1	1134-1931-01	Clutch rod	
51	1	1	1	1134-1889-01	Eyebolt	
52	1	1	1	9747-0631-02	Lock nut	
53	2	2	2	9799-0831-02	Nut	
54	1	1	1	9595-0160-00	Locating pin	
55		1		1134-1965-01	Slip protection	Finland
59	1	1	1	9600-0250-00	Key	
60	1	1	1	1134-1694-03	Differential assy	
63	2	2	2	9959-0612-16	Screw	
64	2	2	2	9849-8009-16	Screw	
65	1	1	1	1134-1975-01	Gas control	
66	1	1	1	9403-0035-10	Handle	
68			1	1134-2350-01	Exhaust pipe	
69			1	1134-0433-00	Muffler gasket	
70			2	9988-3651-12	Screw	
71			1	1134-3245-02	Muffler	
72			1	9578-0011-00	Clamp	
73			1	1134-2462-01	Lock	
74			2	1134-0345-01	Spacer	
75			1	1134-2354-01	Heat guard	
76			2	9997-0612-16	Screw	
78			1	9500-9924-00	Pipe-silencer	
79			1	9578-0015-00	Clamp	
80			2	9799-0831-02	.Nut	
83			1	9959-0820-16	Screw	
84			1	1134-2352-01	Tow bar	
87			1	1134-2394-01	Heat guard	
88			2	9739-0831-22	Nut	