



Section: 350T-550T TRANSMISSION CASING

Pos.	Quantity	Spare part No	Description	Kit	Notes	New
	2118					
	2119					
50	1	1483-0317-01	Locking handle			
51	1	9699-0035-02	Flat washer			
52	2	9652-0009-04	Lock ring			
53	1	1483-0392-01	Belt cover			
54	1	1483-0152-01	Belt			
55	1	9651-0035-04	Lock ring			
56	2	9650-0015-04	Lock ring			
57	1	9549-0044-00	Ball bearing			
58	1	1483-0156-01	Tension pulley			
59	1	1483-0292-01	Lever,tensioner			
60	1	9997-0825-16	Screw			
61	6	9997-0616-16	Screw			
62	6	9683-0025-02	Lock washer			
63	1	9997-0825-16	Screw			
64	2	9683-0030-02	Lock washer			
65	2	1483-0155-01	Plate,pulley			
66	1	1483-0151-01	Pulley			
67	1	1483-0321-01	Engine pulley			
68	1	9600-0249-00	Key			
69	1	1483-0339-01	Key			
70	1	9997-0612-16	Screw			
71	1	1483-0154-01	Belt holder			
72	1	1483-0153-01	Belt holder			
73	1	1483-0200-01	Cover			
74	1	1483-0186-01	Grommet			
75	1	1483-0338-01	Wheel shaft collar			
76	4	9997-0612-16	Screw			
77	1	1483-0304-01	Adjusting board			
78	2	9987-5116-16	Screw			
79	1	1483-0404-01	Transmission case a			
80	1	1483-0404-01	Transmission case a			
81	1	1483-0147-01	Gasket			
82	1	1483-0149-01	Cover			
83	2	1483-0150-01	Cover			
84	2	1483-0176-01	Spring			
85	1	1483-0185-01	Oil cap			
86	1	9997-0812-16	Screw			
87	9	9799-0631-02	Nut			
88	2	9799-0831-02	Nut			
89	2	1483-0341-01	Gasket			
90	1	1483-0342-01	Oil seal			
91	1	1483-0343-01	Oil seal			
92	1	1483-0344-01	Gasket			
93	1	1483-0346-01	O-ring			
94	1	9997-0812-16	Screw			
95	1	1483-0347-01	Oil drain bolt			
96	2	9997-0612-16	Screw			
97	2	9699-0028-02	Flat washer			
98	1	1483-0348-01	Washer			
99	2	1483-0350-01	Insertion			
100	9	9997-0635-12	Screw			
101	1	9997-0840-16	Screw			
102	1	9997-0880-16	Screw			
175	1	1483-0318-01	Connecting plate			
176	1	9799-0831-02	Nut			
177	2	9683-0030-02	Lock washer			
178	2	9997-0825-16	Screw			
179	1	9699-0028-02	Flat washer			
183	2	1483-0356-01	Steel ball			