



Section: PRO 511S WHEEL SUSPENSION

Pos.	Quantity	Spare part No	Description	Kit	Notes	New
	8716					
1	2	1111-2108-01	Cover plate			
2	2	1111-2141-01	Cover plate			
3	1	9600-0014-00	Key			
4	2	1111-2109-01	Gear ring			
5	8	9699-0002-02	Flat washer			
6	8	9699-0025-02	Washer			
7	6	9943-0610-16	Screw			
8	8	9941-0410-16	Screw			
9	2	1111-2247-01	Wheel w/o bearing			
10	2	1111-2248-01	Wheel w/o bearing			
11	8	9549-0001-00	Ball bearing			
12	6	9699-0100-02	Washer			
13	4	1111-2183-01	Spring			
14	4	9997-0612-16	Screw			
15	4	1111-2077-01	Hub cap			
16	2	9548-0025-00	Bronze bearing			
17	2	9699-0069-02	Flat washer			
18	2	1111-2083-01	Gear wheel			
20	1	1111-2079-01	Front axle			
21	2	1111-2076-01	Clamp			
22	4	9943-0612-16	Screw			
24	2	9675-0012-02	Locking washer			
25	1	1111-2078-01	Tension rod			
26	1	1111-2139-01	Rear axle			
27	1	1111-1842-01	Spring			
28	1	1111-1844-01	Holder			
29	1	9943-0510-16	Screw			
36	1	1111-1839-01	Lever			
37	1	9403-0036-70	Lever knob			
38	1	1111-1519-02	Spacer			
39	1	9997-0830-16	Screw			
44	1	9739-0831-22	Nut			
56	1	9799-0831-02	Nut			
57	1	9997-0612-16	Screw			
58	1	9699-0060-02	Flat washer			
59	1	1111-2081-01	Belt pulley			
60	1	9600-0007-00	Key			
61	1	9595-0208-00	Locating pin			
62	1	1111-2097-01	Shaft			
63	2	1111-2382-01	Pin			
70	2	9943-0510-16	Screw			
71	1	1111-2128-01	Console			
75	1	1111-2082-01	Transmission cover			
76	2	9941-0530-16	Screw			
77	1	9943-0510-16	Screw			
80	1	1111-1993-05	Clutch cable			
81	1	1111-9052-01	Drive belt			
82	1	1111-2127-01	Belt pulley			
83	1	9907-0610-16	Screw			
89	1	1111-1637-01	Safety guard			
90	4	9846-7916-16	Screw			
91	1	1111-2130-01	Transmission assy			