



Section: 322 AUGER

Pos.	Quantity	Spare part No	Description	Kit	Notes	New
	1821					
1	1	1812-0194-01	Auger assy			
2	1	1812-0013-01	Support plate			
3	2	1812-0038-01	Tinnerman nut			
4	5	9743-3621-32	Nut			
5	2	1812-0020-01	Bearing			
9	4	1812-0089-01	Locating ring			
10	1	1812-0148-01	Shaft			
11	1	1812-0002-01	Auger housing			
20	2	1812-0124-01	Washer			
24	1	1812-0168-01	Clutch cable			
26	1	1812-0136-01	Engine cover			
27	1	1812-0151-01	Belt protection			
29	1	1812-0021-01	Key			
30	1	1812-0157-01	Screw			
36	2	9913-3609-15	Screw			
38	1	1812-0057-01	Washer			
39	1	1812-0175-01	Locking knob			
42	2	1812-0036-01	Nut			
44	2	1812-0156-01	Screw			
47	14	1812-0044-01	Screw			
48	4	1812-0045-01	Screw			
49	2	1812-0048-01	Screw			
54	5	9699-0038-02	Flat washer			
55	1	9683-0055-02	Lock washer			
59	1	1812-0059-01	Support plate			
64	2	1812-0138-01	Pin			
67	1	1812-0150-01	Bracket			
69	4	1812-0055-01	Washer			
72	1	1812-0027-01	Bracket			
76	2	1812-0130-01	Washer			
77	1	1812-0141-01	Spring			
79	2	9743-3721-32	Nut			
80	1	9988-3738-12	Screw			
81	1	1812-0142-01	Tensioning arm			
82	1	1812-0177-01	Tension roller			
84	1	1812-0096-01	Engine pulley			
85	1	1812-0145-01	Pulley			
86	1	1812-9007-01	V-belt			
91	2	1812-0008-01	Clevis joint			
92	1	1812-0137-01	Screw			
96	2	9699-0028-02	Flat washer			
97	2	1812-0067-01	Pin			
98	2	1812-0068-01	Pin			
100	1	1812-0074-01	Connector			
103	1	1812-0093-01	Shaft			
104	1	1812-0152-01	Gear wheel			
105	1	9899-3632-12	Screw			
106	2	1812-0090-01	Bearing holder			
107	1	9677-0009-02	Lock washer			
108	1	1812-0173-01	Deflector			
110	6	1812-0079-01	Pop rivet			
111	2	1812-0133-01	Pop rivet			
112	2	1812-0082-01	Eyelet			
113	1	1812-0191-01	Chute gear/ring			
115	1	1812-0172-01	Chute			
116	1	1812-0146-01	Scraper bar			
122	1	1812-0065-01	Spacer			
123	4	1812-0040-01	Screw			
124	1	1812-0066-01	Spacer			