



Section: GARDEN STEERING TRANSMISSION

Pos.	Quantity		Spare part No	Description	Kit	Notes	New
			2126				
	2121		2146				
	2151	2131	2136	2156			
2	2	2	2	2	1134-1881-01	Rim	
3	2	2	2	2	9545-0113-00	Tyre	
3					9545-0205-00	Inner tube	Reservdel/spare par
4	4	4	4	4	9545-0500-00	Valve	
5	8	8	8	8	1134-0341-01	Washer	
6	2	2	2	2	1134-1348-01	Screw	
7	2	2	2	2	9743-3721-32	Nut	
9	8	8	8	8	1134-9024-01	Bearing	
10	2	2	2	2	1134-2648-01	Rim	
11	2	2	2	2	9545-0114-00	Tyre	
12					9545-0201-00	Inner tube	Reservdel/spare par
13	4	4	4	4	9650-0020-04	Circlip	
16	2	2	2	2	1134-1875-01	Bushing	
17	2	2	2	2	1134-1876-01	Axle mounting	
18	7	7	7	7	9739-0831-22	Nut	
19	4	4	4	4	9959-0820-16	Screw	
21	1	1	1	1	1134-2125-01	Spindle-L.H.	
21	1	1	1	1	1134-2125-02	Spindle-R.H.	
22	2	2	2	2	9501-0500-00	Grease joint	
23	1	1	1	1	1134-2950-01	Steering kit	
24	2	2	2	2	9570-0002-00	Elbow link	
25	4	4	4	4	9799-0831-02	Nut	
26	1	1	1	1	1134-2803-01	Steering arm	
27	1	1	1	1	9595-0258-00	Locating pin	
28	1	1	1	1	9599-0067-02	Cotter pin	
29	1	1	1	1	9699-0056-02	Flat washer	
30	2	2	2	2	1134-1901-01	Bearing	
31	1	1	1	1	1134-1424-01	Steering column	
32	1	1	1	1	1134-1967-01	Steering wheel+colu	
33	1	1	1	1	9595-0262-00	.Locating pin	
34	1	1	1	1	9699-0103-02	.Flat washer	0.5 mm
34	1	1	1	1	9699-0114-02	.Flat washer	1.0 mm
35	1	1	1	1	1134-1979-02	Pedal	
36	2	2	2	2	1134-1927-01	Bearing	
37	4	4	4	4	9898-0635-12	Screw	
38	5	5	5	5	9739-0631-22	Nut	
39	1	1	1	1	1134-1937-01	Control lever	
40	1	1	1	1	4231-0013-00	Spring	
43	1	1	1	1	1134-2138-01	Eye bolt	
44	1	1	1	1	1134-2124-01	Brake rod	
45	1	1	1	1	1134-1023-00	Spring	
46	4	4	4	4	9699-0090-02	Flat washer	
47	2	2	2	2	9595-0160-00	Locating pin	
48	1	1	1	1	9747-0831-02	Lock nut	
49	1	1	1	1	1131-1475-01	Spring	
50	2	2	2	2	1134-1889-01	Eyebolt	
51	2	2	2	2	9747-0631-02	Lock nut	
52	1	1	1	1	1134-1931-02	Clutch rod	
53	1	1	1	1	1134-2123-01	Pedal	
56	2	2	2		1134-0269-00	Pedal rubber	Finland (FIN)
57	2	2	2		1134-1965-01	Slip protection	Finland (FIN)
58	1	1	1	1	1134-2952-01	Spring	
59	1	1	1	1	1134-0054-01	Spacer	
60	1	1	1	1	1134-1631-02	Tensioner arm	
61	1	1	1	1	1134-9027-01	Tension roller	
62	1	1	1	1	1134-9018-01	V-belt	= 9585-0120-00
63	1	1	1	1	9739-1031-22	Nut	
64	1	1	1	1	9997-1025-16	Screw	
65	1	1	1	1	1134-2661-01	Belt guide	
68	1	1	1	1	1134-0240-00	Shoulder screw	
69	1	1	1	1	9696-0013-01	Bowed washer	
70	1	1	1	1	9699-0037-02	Washer	
71	1	1	1	1	1134-1849-01	Belt pulley	
72	1	1	1	1	9600-0050-00	Key	
73	1	1	1	1	9650-0016-04	Lock ring	

Section: GARDEN STEERING TRANSMISSION

Pos.	Quantity					Spare part No	Description	Kit	Notes	New
						2126				
	2121					2146				
	2151	2131	2136	2156						
74	1	1	1	1	1134-1694-03	Differential assy				
75	1	1	1	1	1134-1691-02	Sprocket				
76	4	4	4	4	9795-3631-02	Nut				
77	1	1	1	1	9589-0010-03	Chain				
78	1	1	1	1	9589-0504-00	.Chain lock				
79	1	1	1	1	9500-9950-00	Transmission assy				
80	1	1	1	1	P000-7920-72	.Retaining ring				
81	1	1	1	1	P000-7861-15	.Sprocket				
82	4	4	4	4	9988-3619-16	Screw				
84	1	1	1	1	1134-1925-02	Gear shifter				
85	1	1	1	1	1134-1981-01	Shift lock				
86	1	1	1	1	9699-0060-02	Flat washer				
87	1	1	1	1	9987-5016-16	Screw				
90	1	1			1134-1736-01	Engine pulley				
90			1	1	1134-1736-02	Engine belt pulley				
91			1	1	1134-1364-02	Spacer ring				
92	1	1			9600-0014-00	Key				
92			1	1	9600-0250-00	Key				
93	1	1			9699-0035-02	Flat washer				
94	1	1			9987-5232-16	Bolt				
94			1	1	9987-5332-16	Screw				
98	1	1			1134-2485-01	Oil drain pipe assy				
99	1	1			9578-0020-00	.Clamp				
100	1	1		1	9997-0616-16	.Screw				
101	1	1			1134-0995-02	.Plug				
103	1	1			1134-0997-02	.Fibre gasket				
104	1	1			9404-0022-00	.O-ring				
105			1	1	1134-2482-01	Oil drain pipe assy				
108			1	1	1134-0995-01	.Plug				
109			1	1	1134-0997-01	.Fibre gasket				
110			1	1	9404-0020-00	.O-ring				
111			1	1	1134-2478-01	Angle oil drain pip				
112			1	1	1134-0994-01	Tube clamp				
115	1	1	1	1	1134-2808-01	Sleeve				