



## Section: PRO 48

Pos.	Quantity	Spare part No	Description	Kit	Notes	New
	8428					
1	1	1111-1468-01	Blade holder assy			
3	1	9600-0014-00	Key			
4	2	1111-1731-02	Friction disc			
5	1	1111-1462-01	Washer			
6	1	1111-1489-01	Washer			
7	1	9987-5245-12	Blade bolt			
8	1	9699-0035-02	Flat washer			
10	4	1111-0817-04	Wheel w/o bearing			
11	8	9549-0015-00	Ball bearing			
12	4	1111-0466-00	Seal grease			
13	4	1111-1138-01	Spring			
14	4	9997-0612-16	Screw			
15	4	1111-1506-01	Hub cap			
17	4	9699-0037-02	Washer			
18	4	9699-0100-02	Washer			
20	1	1111-2149-01	Front axle			
21	2	1111-1504-01	Retainer			
22	2	9947-0616-16	Screw			
24	2	9675-0012-02	Locking washer			
25	1	1111-1829-01	Rod			
26	1	1111-2150-01	Rear axle			
27	1	1111-1842-01	Spring			
28	1	1111-1844-01	Holder			
29	1	9943-0510-16	Screw			
30	1	1111-1483-01	Handle attachm.-LH			
31	1	1111-1484-01	Handle attachm.-RH			
32	2	1111-1485-01	Plug			
33	4	9942-0820-16	Screw			
34	1	1111-1500-01	Adjusting plate			
36	1	1111-1839-01	Lever			
37	1	9403-0036-70	Lever knob			
38	1	1111-1519-02	Spacer			
39	1	9997-0830-16	Screw			
42	1	9739-0831-22	Nut			
43	4	9959-0816-16	Screw			
44	4	9799-0831-02	Nut			
45	1	1111-2134-01	Handlebar-lower par			
46	1	1111-2529-03	Handlebar-upper par			
47	1	9699-0035-02	Flat washer			
48	1	1482-0163-01	Locking knob			
49	1	1111-2018-01	Cable holder			
50	1	1111-2456-01	Chassis-yellow			
53	3	9678-0009-02	Lock washer			
55	3	9997-0835-12	Screw			
56	4	9799-0831-02	Nut			
57	3	9683-0030-02	Lock washer			
59	1	9836-9216-12	Screw			
60	1	1111-0933-02	Rubber guard			
62	1	1111-1626-01	Attachment plate			
63	4	1151-0300-02	Rivet			
65	1	1111-1624-01	Plate			
66	1	1111-2366-01	Gas control			
68	2	9948-0645-16	Screw			
69	2	9747-0631-02	Lock nut			
70	1	1111-1605-01	Blade bar assy			
71	1	1111-9049-01	.Blade kit			
72	2	9997-0816-16	..Screw			
73	2	9747-0831-02	..Lock nut			