



## Section: PARK SEAT

Pos.	Quantity	Spare part No	Description	Kit	Notes	New
	1218					
	1258	1318	1418			
	1638	1358	1458			
	5219	5319	5419			
1	1	1	1	1134-2541-01	Seat	
2	2	2	2	1134-2961-01	Seat adapter	
3	2	2	2	9898-0820-16	Screw	
4	4	4	4	9988-3616-16	Screw	
5	4	4	4	9675-0017-02	Lock washer	
6	1	1	1	1134-3618-01	Seat bracket-R.H.	
10	1	1	1	1134-3618-02	Seat bracket-L.H.	
11	2	2	2	9699-0062-02	Flat washer	
12	2	2	2	1134-1711-01	Knob	
13	1	1	1	1134-1652-01	Spring shackle	
14	1	1	1	1134-0050-00	Seat rod	
18	2	2	2	1134-1650-01	Tie bar	
20	1	1	1	1134-0493-00	Spring nut	
21	1	1	1	1134-0015-00	Seat spring	
28	1	1	1	1134-2846-01	Tube	
30	1	1	1	1134-1883-01	Axle	
31	1	1	1	1134-0022-00	Control rod	
32	2	2	2	9672-0004-02	Lock washer	
36	1	1	1	1134-2163-01	Rod	
37	1	1	1	1134-2166-01	Spacer	
40	1	1	1	1134-1801-01	Adjustable seat par	Tillbehör/Accessory
41	4	4	4	9795-3631-02	.Nut	
42	4	4	4	9699-0028-02	.Flat washer	
44	2	2	2	9675-0017-02	.Lock washer	
45	1	1	1	1134-1687-03	.Seat attachment-R.	
46	1	1	1	1134-1687-04	.Seat attachment-L.	
48	1	1	1	1134-2454-01	Shaft	
49	2	2	2	9672-0006-02	Lock washer	
50	1	1	1	1134-2847-01	Shaft	

TEST