



STIGA
213B
SPARE PARTS

Section: TURBO 46-460S WHEEL SUSPENSION

| Pos. | Quantity | | Spare part No | Description | Kit | Notes | New |
|------|----------|------|---------------|--------------|-----|---------------------|------------------|
| | | 6425 | 6518 | | | | |
| | 6225 | 6437 | 6535 | | | | |
| 1 | 1 | 1 | 1 | 1111-2146-01 | | Front axle | |
| 2 | 2 | 2 | 2 | 1111-1067-02 | | .Bushing | |
| 3 | 2 | 2 | 2 | 1111-1706-01 | | Clamp | |
| 4 | 4 | 4 | 4 | 9943-0512-16 | | Screw | |
| 5 | 1 | 1 | 1 | 1111-2148-01 | | Rear axle | |
| 6 | 2 | 2 | 2 | 1111-1072-01 | | Clamp rear | |
| 8 | 1 | 1 | 1 | 1111-1074-01 | | Spring-height adjus | |
| 9 | 1 | 1 | 1 | 1111-1357-02 | | Lever | |
| 10 | 1 | 1 | 1 | 9997-0612-16 | | Screw | |
| 11 | 1 | 1 | 1 | 9739-0631-22 | | Nut | |
| 12 | 1 | 1 | 1 | 1111-1068-01 | | Tension rod | |
| 13 | 2 | 2 | 2 | 9675-0008-02 | | Locking washer | |
| 15 | 4 | 4 | 4 | 9997-0612-16 | | Screw | |
| 16 | | 4 | 4 | 9699-0037-02 | | Washer | |
| 17 | 2 | 4 | 2 | 1111-1180-03 | | Wheel cover | |
| 18 | 4 | 4 | 4 | 1111-1138-01 | | Spring | |
| 19 | 2 | | 2 | 1111-1180-04 | | Wheel cover | |
| 20 | 4 | 4 | 4 | 1111-2665-01 | | Wheel assy | |
| 21 | 1 | 1 | 1 | 1111-9047-01 | | .Ball bearing kit | |
| 21A | 2 | 2 | 2 | 1111-1184-01 | | ..Bearing cone | |
| 22 | 4 | 4 | 4 | 9699-0100-02 | | Washer | |
| 23 | 4 | 4 | 4 | 1111-1181-01 | | Hub cap | |
| 24 | 2 | 2 | 2 | 1111-1683-01 | | Spring | |
| 25 | 2 | 2 | 2 | 1111-1016-01 | | Locking handle | |
| 26 | 2 | 2 | 2 | 9595-0235-00 | | Locating pin | |
| 27 | 2 | 2 | 2 | 1111-1087-02 | | Tensioning rod | |
| 28 | 2 | 2 | 2 | 9739-0831-22 | | Nut | |
| 29 | 4 | 4 | 4 | 9942-0816-16 | | Screw | |
| 30 | 2 | 2 | 2 | 1111-1078-01 | | Handle attachment | |
| 31 | 2 | 2 | 2 | 1111-1019-01 | | Adjusting plate | |
| 32 | 2 | 2 | 2 | 9997-0816-16 | | Screw | |
| 33 | 2 | 2 | 2 | 9747-0831-02 | | Lock nut | |
| 34 | 2 | 2 | 2 | 1111-0035-01 | | .Locking knob | |
| 34 | 1 | 1 | 1 | 1111-9030-02 | | Handle bolt kit | |
| 35 | 2 | 2 | 2 | 1111-0178-00 | | .Reinforcement | |
| 36 | 2 | 2 | 2 | 9699-0025-02 | | .Washer | |
| 37 | 2 | 2 | 2 | 9899-3551-12 | | .Screw | |
| 38 | 1 | 1 | 1 | 1111-2018-01 | | Cable holder | |
| 39 | 1 | 1 | 1 | 9836-9216-12 | | Screw | |
| 40 | 1 | 1 | 1 | 1111-1076-01 | | Handle-lower part | |
| 41 | 1 | 1 | 1 | 1111-2003-01 | | Handlebar | |
| 44 | 1 | | | 1111-1414-01 | | Side protection-R.H | |
| 44 | 1 | | | 1111-1413-01 | | Side protection-L.H | |
| 48 | | 1 | | 1111-2367-05 | | Gas control | 6473 |
| 48 | 1 | 1 | 1 | 1111-2365-02 | | Gas control | 6225, 6425, 6518 |
| 48 | | 1 | | 1111-2367-03 | | Gas control | 6535 |
| 71 | 1 | | 1 | 1111-9055-01 | | Gear wheel kit | |
| 72 | 2 | | 2 | 9594-0009-00 | | .Locating pin | |
| 73 | 2 | | 2 | 1111-1456-01 | | Washer | |
| 75 | 1 | | 1 | 1111-2010-01 | | Attachment plate | |
| 76 | 1 | | 1 | 9849-7909-16 | | Screw | |
| 77 | 1 | | 1 | 1111-1197-02 | | Clutch cable | |
| 78 | 1 | | 1 | 9739-0631-22 | | Nut | |
| 79 | 1 | | 1 | 1482-0160-01 | | Spring | |
| 80 | 1 | | 1 | 1111-1998-01 | | Control handle | |
| 81 | 2 | 2 | 2 | 9948-0645-16 | | Screw | |
| 82 | 2 | | 2 | 9799-0631-02 | | Nut | |
| 82 | | 2 | | 9747-0631-02 | | Lock nut | |