



Section: PARK 12 ENGINE BRAKE SYSTEM

Pos.	Quantity	Spare part No	Description	Kit	Notes	New
	1218					
	1258	1318				
	1638	1358				
	5219	5319				
1	2	3	9997-0835-12		Screw	
2	1	1	9997-0865-12		Screw	
3	1	1	9600-0250-00		Key	
4	6	6	9739-0831-22		Nut	
5	1	1	1134-0433-00		Muffler gasket	
6	1		1134-2013-01		Exhaust pipe	
6		1	1134-2718-01		Exhaust pipe	
7	2		1134-0345-00		Spacer for silencer	
7		2	1134-1565-01		Spacer	
8	1	1	1134-2462-01		Lock	
9	2		9988-3632-12		Screw	
9		2	9988-3651-12		Screw	
10	1	1	1134-2733-01		Heat protection	
11	1		9997-0850-16		Screw	
12	2	2	9942-0612-16		Screw	
13	1		1134-3243-01		Silencer	
13		1	1134-3244-01		Silencer	
14	1	1	9578-0011-00		Clamp	
15	2	2	9799-0831-02		.Nut	
16	1	1	1134-2212-01		Oil drain pipe assy	
17	1	1	9404-0020-00		.O-ring	
18	1	1	1134-0995-01		.Plug	
19	1	1	1134-0997-01		.Fibre gasket	
22	1	1	1134-2941-01		Protection strip	
23	1	1	1134-2886-01		Fuel tank	
24	1	1	1134-2877-02		.Fuel tank cap	
25	1	1	9997-0812-02		Screw	
26	1	1	9747-0831-02		Lock nut	
27	1		1134-2170-02		Brake pedal (R. H.)	
27		1	1134-3450-01		Brake pedal (L. H.)	
28	1	1	1134-9024-01		.Bearing	
30	1	1	1134-1975-09		Gas control	
31	1	1	9403-0035-10		Handle	
32	2	2	9849-8013-16		Screw	
33	3	3	9959-0820-16		Screw	
34	1	1	1134-0245-00		Shoulder screw	
36	1		1134-2151-01		Stop	
36		1	1134-2151-02		Stop	
37	1	1	1134-1184-02		Bracket	
38	1	1	9646-0036-22		Rivet	
39	1	1	9675-0008-02		Locking washer	
40		1	1134-2030-10		Brake cable	
40	1		1134-3573-02		Brake cable	
44	1	1	1134-1242-02		Spring	
45	1	1	1131-1506-00		Spring	
46	1		1134-2045-01		Brake stop	
47	2		9942-0820-16		Screw	
50	1	1	9500-9924-00		Pipe-silencer	
52	1	1	1134-2998-01		Hose clamp	
53	1	1	1131-1497-01		Spring	
54	1	1	1134-2035-02		Petrol tube	
55	1	1	9578-0015-00		Clamp	
56	2	1	9799-0831-02		.Nut	
57	1	1	9578-0016-00		Clamp	
58	1	1	1134-0269-00		Pedal rubber	