



Section: TURBO 530S-530SE TRANSMISSION

Pos.	Quantity	Spare part No	Description	Kit	Notes	New
	8518					
	8619					
1	1	1111-2563-01	Transmission assy			
2	1	9947-0616-16	Screw			
3	2	1111-2421-01	Clamp			
4	4	9943-0512-16	Screw			
5	1	1111-2446-01	Rear axle			
6	2	1111-2337-01	Bearing			
7	4	9943-0610-16	Screw			
9	1	1111-2444-02	Lever			
10	1	9997-0612-16	Screw			
11	1	9739-0631-22	Nut			
13	1	1111-2445-01	Grip			
14	1	9836-9530-12	Screw			
15	5	9943-0612-16	Screw			
17	2	9699-0060-02	Flat washer			
18	2	1111-2183-01	Spring			
19	2	1111-2108-01	Cover plate			
20	2	1111-2345-01	Rear wheel			
21	4	9549-0001-00	Ball bearing			
22	4	9699-0100-02	Washer			
23	2	1111-2077-01	Hub cap			
26	1	1111-2462-01	Drive shaft			
27	1	9595-0208-00	Locating pin			
28	2	9699-0069-02	Flat washer			
29	2	1111-2464-01	Gear wheel			
32	2	1111-2109-01	Gear ring			
33	8	9699-0002-02	Flat washer			
34	8	9943-0410-16	Screw			
36	1	9907-0610-16	Screw			
37	1	9600-0014-00	Key			
38	1	1111-2433-01	Engine belt pulley			
39	1	1111-9057-01	V-belt			
40	1	1111-2747-01	Tension roller			
41	2	1111-2465-01	Sleeve			
42	1	9943-0630-16	Screw			
43	1	9739-0631-22	Nut			
44	1	1111-2746-01	Belt pulley			
45	1	1111-2466-01	Spacer			
46	1	1111-2422-01	Lever			
47	1	9997-0630-12	Screw			
48	1	1111-2423-01	Spacer			
49	1	9943-0620-16	Screw			
52	1	1111-2469-01	Attachment			
54	1	1111-2484-01	Variat. control cab			
55	1	1111-2420-01	Transm.cover-yellow			
56	4	9943-0520-16	Screw			
57	1	1111-2486-01	Clutch cable			
62	1	1111-2480-01	Cover plate			
63	1	9849-7909-16	Screw			
64	1	1111-2474-01	Control handle-L.H.			
65	1	1111-2299-02	Shaft			
66	2	1111-2296-01	Bracket			
67	2	1111-2304-02	Plastic tube			
68	2	9595-0160-00	Locating pin			
70	1	1111-2467-01	Panel			
71	1	9948-0655-16	Screw			
72	1	1111-2183-01	Spring			
73	1	1111-2428-01	Lever			
74	1	9799-0831-02	Nut			
75	1	9403-0036-70	Lever knob			
76	1	1111-2181-02	Sleeve			
77	1	1111-2090-02	Spacer			
78	1	9747-0631-02	Lock nut			