



## Section: 12/39 4WS REAR WHEEL STEERING

Pos.	Quantity	Spare part No	Description	Kit	Notes	New
	8713					
1	2	1133-0497-01	Bracket			
2	4	9988-3664-12	Screw			
3	4	9699-0028-02	Flat washer			
4	4	9743-3621-32	Nut			
5	4	1133-0057-01	Screw			
7	2	1133-0555-01	Bracket			
8	2	1133-0468-01	Pivot bracket			
9	4	1133-0467-01	Bearing			
10	2	1133-0464-01	U-joint			
11	2	1133-0461-01	Hub			
12	2	1133-0471-01	Pin			
13	4	1133-0463-01	Steering hinge pin			
14	2	1133-0462-01	Bushing			
15	2	1133-0047-01	Washer			
16	2	1133-0466-01	Bushing			
17	4	1133-0630-01	Pin			
18	8	9988-3625-16	Screw			
19	16	9699-0028-02	Flat washer			
20	8	9743-3621-32	Nut			
21	1	1133-0716-01	Draglink rod			
22	1	1133-0505-01	Steering pivot			
23	1	1133-0465-01	Bolt			
24	1	9699-0035-02	Flat washer			
25	1	1133-0492-01	Spacer			
26	2	1133-0469-01	Flat washer			
27	1	9699-0078-02	Washer			
28	1	9987-5125-16	Screw			
29	1	1133-0486-01	Arm roller swing			
30	1	1133-0493-01	Cam yoke roller			
31	1	1133-0494-01	Shoulder bolt			
32	1	9743-5421-32	Nut			
33	1	1133-0717-01	Shoulder bolt			
34	1	9699-0030-02	Flat washer			
35	1	9743-5221-32	Nut			
36	1	1133-0506-01	Steering pivot shaf			
38	1	1133-0504-01	Tie rod		L = 203 mm	
39	1	1133-0652-01	Nut (lh thread)			
40	1	1133-0502-01	Tie end rod			
41	1	9743-3721-32	Nut			
42	1	1133-0496-01	Tie end rod			
44	1	1133-0503-01	Tie rod		L = 241mm	
45	1	1133-0652-01	Nut (lh thread)			
46	1	1133-0502-01	Tie end rod			
47	1	9743-3721-32	Nut			
48	1	1133-0496-01	Tie end rod			
49	1	9987-5245-12	Blade bolt			
50	1	9743-5221-32	Nut			
51	1	1133-0498-01	Steering arm-R.H.			
52	1	1133-0499-01	Steering arm-L.H.			
53	4	1133-0472-01	Screw			
54	2	9987-5232-16	Bolt			
55	2	9683-0035-02	Lock washer			
56	2	9743-5221-32	Nut			