



Section: MULTICLIP S-SE TRANSMISSION

Pos.	Quantity		Spare part No	Description	Kit	Notes	New
		3415	3814				
		3635	3615	3914			
1	1	1	1	1111-2910-01	Wheel mounting-RH		
2	1	1	1	1111-2911-01	Wheel mounting-LH		
3	2	2	2	1111-2909-01	.Bearing		
4	1	1	1	1111-2549-01	.Plastic knob		
5	2	2	2	1111-1456-01	Washer		
6	2	2	2	1111-2561-01	Cover plate		
7	2	2	2	1111-2382-01	Pin		
8	2	2	2	1111-2635-01	Gear wheel		
9	2	2	2	9699-0100-02	Washer		
10	2	2	2	9997-0812-16	Screw		
16	2	2	2	9699-0037-02	Washer		
17	2	2	2	1111-1138-01	Spring		
18	2	2	2	1111-2665-01	Wheel assy		
19	1	1	1	1111-9047-01	.Ball bearing kit		
20	2	2	2	1111-1184-01	.Bearing cone		
21	2	2	2	9699-0100-02	Washer		
22	2	2	2	9997-0812-16	Screw		
23		2	2	1111-2664-01	Hub cap		
24		2	2	1111-2676-01	Wheel cup		
25	2			1111-1181-01	Hub cap		
30		1	1	1111-2633-01	Front cover-yellow		
30	1	1		1111-2633-02	Front cover-black		
31	1	1	1	9943-0530-16	Screw	30 mm	
32	2	2	2	9943-0540-16	Screw	40 mm	
33	2	2	2	9739-0531-22	Nut		
40	1	1	1	1111-9060-01	Drive belt		
41	1	1	1	1111-2127-01	Belt pulley		
42	1	1	1	9911-0612-16	Set screw		
43	1	1	1	1111-2565-01	Belt pulley		
44	2	2	2	9659-0050-04	Lock ring		
45	1	1	1	1111-2641-01	Transmission assy		
46	1	1	1	F000-3475-00	.Key		
47	1	1	1	1111-2636-01	Cable holder		
48	1	1	1	9943-0510-16	Screw		
49	1	1	1	1134-1023-00	Spring		
50	1	1	1	1111-2621-01	Spring stop		
55			2	9836-9520-12	Screw		
56			1	9400-0186-00	Starting switch ass		
57			1	1134-2848-01	.Ignition key		
58			1	1111-2707-01	Housing		
59			1	1111-2705-01	Cover		
60			1	1111-2562-02	...Harness		
65	1	1	1	1111-2551-03	Clutch control		
66	2	2	2	9747-0631-02	Lock nut		
67	2	2	2	9948-0655-16	Screw		
68	1	1	1	9595-0160-00	Locating pin		
69			2	9865-0580-16	Screw		
70			2	9693-0004-02	Washer		
71			1	1111-2733-01	Cover		
72			1	9400-0218-00	Battery		
73			1	9400-0219-00	Charger		
74			2	9739-0531-22	Nut		
75	1	1	1	1111-2018-01	Cable holder		
76	1	1	1	9836-9216-12	Screw		
77			1	9579-0008-00	Cable holder		
78	1	1	1	1111-1987-02	Control knob-black		