



STIGA
480
SPARE PARTS

Section: TORNADO TRANSMISSION

| Pos. | Quantity | | Spare part No | Description | Kit | Notes | New |
|------|----------|------|---------------|-------------|--------------|---------------------|-----------------|
| | 4215 | 4414 | 4318 | 4719 | | | |
| 1 | 1 | 1 | 1 | 1 | 1111-2580-01 | Front axle | |
| 2 | 2 | 2 | 2 | 2 | 1111-2595-01 | Bushing | |
| 3 | 2 | 2 | 2 | 2 | 9699-0115-02 | Washer | |
| 4 | 2 | 2 | | | 1111-1456-01 | Washer | |
| 5 | | | 2 | 2 | 1111-2108-01 | Cover plate | |
| 6 | | | 4 | 4 | 9943-0610-16 | Screw | |
| 7 | | | 2 | 2 | 1111-2083-02 | Gear wheel | |
| 8 | 2 | 2 | 2 | 2 | 1111-2183-01 | Spring | |
| 9 | 4 | 4 | 4 | 4 | 9699-0100-02 | Washer | |
| 10 | 4 | 4 | 4 | 4 | 9997-0612-16 | Screw | |
| 11 | | | 8 | 8 | 9841-0410-16 | Screw | |
| 15 | | | 2 | 2 | 1111-2109-01 | Gear ring | |
| 16 | | | 2 | 2 | 1111-2346-01 | Wheel w/o bearing | |
| 17 | | | 4 | 4 | 9549-0001-00 | Ball bearing | |
| 18 | | | 2 | 2 | 1111-2077-01 | Hub cap | |
| 19 | 2 | | | | 1111-1181-01 | Hub cap | 4215-51,4215-91 |
| 20 | 2 | 2 | | | 1111-2664-01 | Hub cap | 4215-11 |
| 21 | 2 | 2 | | | 1111-2676-01 | Wheel cup | 4215-11 |
| 22 | 2 | 2 | | | 1111-2665-01 | Wheel assy | |
| 23 | 1 | 1 | | | 1111-9047-01 | .Ball bearing kit | |
| 24 | 2 | 2 | | | 1111-1184-01 | ..Bearing cone | |
| 25 | 2 | 2 | | | 1111-2600-01 | Gear wheel | |
| 26 | 2 | 2 | | | 1111-2782-02 | Wheel cover | |
| 27 | 2 | 2 | 2 | 2 | 1111-2596-01 | Spacer | |
| 29 | 1 | 1 | 1 | 1 | 1111-2922-01 | Front support | |
| 30 | 1 | 1 | 1 | 1 | 1111-2568-01 | Transm.cover-yellow | |
| 30 | 1 | | | | 1111-2568-02 | Transm.cover-black | |
| 31 | 2 | 2 | 2 | 2 | 9848-8013-16 | Screw | |
| 35 | 1 | 1 | 1 | 1 | 1111-2564-01 | Transmission assy | |
| 36 | 1 | 1 | 1 | 1 | F000-3475-00 | .Key | |
| 37 | 2 | 2 | 2 | 2 | 9659-0050-04 | Lock ring | |
| 38 | 2 | 2 | 2 | 2 | 1111-2382-01 | Pin | |
| 39 | 1 | 1 | 1 | 1 | 1111-2565-01 | Belt pulley | |
| 40 | 1 | 1 | 1 | 1 | 1111-9059-01 | Drive belt | |
| 41 | 1 | 1 | 1 | 1 | 9943-0510-16 | Screw | |
| 42 | 1 | 1 | 1 | 1 | 1111-2567-01 | Spring holder | |
| 43 | 1 | 1 | 1 | 1 | 1134-1023-00 | Spring | |
| 44 | 1 | 1 | 1 | 1 | 1111-2621-01 | Spring stop | |
| 45 | 1 | 1 | 1 | 1 | 1111-2433-02 | Belt pulley | 25 mm |
| 46 | 1 | 1 | 1 | 1 | 9915-0612-15 | Screw | |
| 48 | | 1 | | | 9578-0010-00 | Cable clip | |
| 49 | 1 | | 1 | | 9403-0115-70 | Cover plug | |
| 50 | | 1 | | | 9403-0116-70 | Grommet | |
| 51 | 1 | 2 | 1 | 2 | 9579-0008-00 | Cable holder | |
| 52 | | 2 | | 2 | 9747-0531-02 | Nut | |
| 53 | | 2 | | 2 | 9693-0004-02 | Washer | |
| 54 | | 1 | | 1 | 9400-0218-00 | Battery | |
| 55 | | 1 | | 1 | 1111-2669-01 | Battery clamp | |
| 56 | | 1 | | 1 | 9400-0219-00 | Charger | |
| 57 | 1 | 1 | 1 | 1 | 1111-2018-01 | Cable holder | |
| 58 | 1 | 1 | 1 | 1 | 9836-9216-12 | Screw | |
| 59 | 1 | 1 | 1 | 1 | 1111-2551-01 | Clutch control | |
| 60 | 2 | 2 | 2 | 2 | 9747-0631-02 | Lock nut | |
| 61 | 1 | 1 | 1 | 1 | 9595-0160-00 | Locating pin | |
| 62 | 2 | 2 | 2 | 2 | 9948-0655-16 | Screw | |
| 63 | 1 | 1 | 1 | 1 | 1111-1987-02 | Control knob-black | |
| 65 | | 1 | | 1 | 1111-2707-01 | Housing | |
| 66 | | 1 | | 1 | 1111-2705-01 | Cover | |
| 67 | | 1 | | 1 | 9836-9520-12 | Screw | |
| 68 | | 1 | | 1 | 9400-0186-00 | Starting switch ass | |
| 69 | | 1 | | 1 | 1134-2848-01 | .Ignition key | |
| 70 | | 1 | | 1 | 1111-2674-01 | Harness | |