



## Section: PARK 12-13HST-16HST POWER TAKE OFF

Pos.	Quantity	Spare part No	Description	Kit	Notes	New
		1171				
		1172				
		1168 1358 1458				
		1442 1443 1446				
1	3	5	3	9739-0831-22	Nut	
2	1	1	1	1134-0143-00	Stop washer	
3	1	1	1	1134-2453-01	Locking pawl	
4	1	1	1	9695-0002-00	Washer	
5	1	1	1	1131-1497-01	Spring	
8	1	1	1	1134-0027-01	Control lever	
8	1	1	1	1134-1396-02	Control lever	1442,1443,1446
9	1	1	1	1134-3573-01	Pto cable	
10	1	1	1	1134-1972-01	Disengaging lever	
11	2	2	2	9699-0025-02	Washer	
12	1	1	1	1134-0583-00	Plastic knob	
15	1	1	1	1134-0022-00	Control rod	
16	2	2	2	9672-0004-02	Lock washer	
17	1	1	1	1134-0153-00	Handle	
19	1	1	1	9847-8016-16	Screw	
23	1	1	1	1131-1506-00	Spring	
25	1	1	1	1134-1565-01	Spacer	
26	1	1	1	1134-1242-02	Spring	
27	1	1	1	1134-2018-01	Tensioning arm	
28	1	1	1	9997-1030-16	Screw	
30	1	1	1	1134-9027-01	Tension roller	
31	1	1	1	9799-1031-02	Nut	
32	1	1		1134-2020-01	Engine pulley	
32			1	1134-3394-01	Engine pulley	
32A	1	1	1	9997-1450-16	Puller-belt pulley	Tillbehör/accessory
33	1	1	1	9959-0820-16	Screw	
34	1	1	1	9997-0850-16	Screw	
35	1	1	1	9699-0056-02	Flat washer	
36	1	1	1	1134-0052-00	Bearing spacer	
37	1	1	1	1134-1769-02	Belt pulley assy	
38	2	2	2	9651-0040-04	.Retaining ring	
40	1	1	1	1134-0051-09	.Spacer	
41	2	2	2	9549-0019-00	.Ball bearing	
43	1	1	1	9699-0109-02	Flat washer	
44	1	1	1	1134-0222-00	Washer	
45	1	1	1	9959-1025-16	Screw	
46	1	1	1	1134-1730-01	Tension wheel arm	
47	2	2	2	1134-1888-01	Spacer	
48	1	1	1	1134-1770-01	Tension roller	
52	1	1	1	1134-1893-01	Spring attachment	
53	2	2	2	9699-0062-02	Flat washer	
54	1	1	1	9997-0865-12	Screw	
55	1	1	1	1134-1322-01	Spring	
56	1	1	1	9987-5338-12	Screw	
57	1	1	1	1134-9012-01	V-belt	= 9585-0056-00
60	1	1	1	1134-3654-01	Finger guard	
61	2	2	2	9739-0631-22	Nut	
62	2	2	2	9959-0612-16	Screw	
63	1	1	1	1134-2381-01	Belt guide	
64	2	2	2	9942-0816-16	Screw	
66		1		1134-3400-01	Angle plate	
67		2		9959-0816-16	Screw	
91	1	1	1	9739-1031-22	Nut	
92	1	1	1	1134-0041-03	Collar	
93	1	1	1	9997-1070-12	Screw	