



Section: TORNADO 51S-51SE TRANSMISSION

Pos.	Quantity	Spare part No	Description	Kit	Notes	New
	4215					
	4228 4219					
1	1	1	1111-2580-01		Front axle	
2	2	2	1111-2595-02		Bushing	
3	2	2	9699-0115-02		Washer	
8	2	2	1111-3060-01		Spring	
9	4	4	9699-0100-02		Washer	
10	4	4	9943-0612-16		Screw	
20	2	2	1111-3085-01		Hub cap-yellow	
22	2	2	1111-2665-01		Wheel assy	
23	1	1	1111-9047-01		.Ball bearing kit	
24	2	2	1111-1184-01		..Bearing cone	
25	2	2	1111-2600-02		Gear wheel	
26	2	2	1111-2561-01		Cover plate	
28	2	2	9836-9516-12		Screw	
29	2	2	1111-2922-01		Front support	
30	1	1	1111-2568-01		Transm.cover-yellow	
31	2	2	9848-8013-16		Screw	
35	1	1	1111-3056-01		Transmission assy	
36	1	1	1111-3047-01		.Belt pulley	
37	1	1	9594-0055-00		.Locating pin	
38	2	2	1111-2382-01		Pin	
40	1	1	1111-9063-01		V-belt	
43	1	1	1111-3060-01		Spring	
45	1	1	1111-2915-01		Engine belt pulley	
46	1	1	9910-0612-16		Set screw	
49	1		9403-0115-70		Cover plug	
50		1	9403-0116-70		Grommet	
51	1	2	9579-0008-00		Cable holder	
52		2	9747-0531-02		Nut	
53		2	9693-0004-02		Washer	
54		1	9400-0218-00		Battery	
55		1	1111-2669-01		Battery clamp	
56		1	9400-0219-00		Charger	
57	1	1	1111-2018-01		Cable holder	
58	1	1	9836-9216-12		Screw	
59	1	1	1111-2965-02		Clutch control	
60	2	2	9747-0631-02		Lock nut	
61	1	1	9836-9512-12		Screw	
62	2	2	9948-0655-16		Screw	
63	1	1	1111-1987-02		Control knob-black	
65		1	1111-2707-01		Housing	
66		1	1111-2705-01		Cover	
67		1	9836-9520-12		Screw	
68		1	9400-0186-00		Starting switch ass	
69		1	1134-2848-01		.Ignition key	
70		1	1111-2674-01		Harness	