



## Section: 320 AUGER

Pos.	Quantity	Spare part No	Description	Kit	Notes	New
	1211					
480	1	1133-0994-01	Auger housing			
481	4	9988-3519-16	Screw			
482	4	9699-0026-02	Flat washer			
483	4	1812-0812-01	Locking nut			
486	1	9988-3516-16	Screw			
487	1	1133-0993-01	Stop bracket			
488	1	9699-0078-02	Washer			
489	1	1812-0812-01	Locking nut			
490	1	1133-0999-01	Scraper blade			
491	3	1133-1022-01	Rivet			
492	1	9988-3519-16	Screw			
493	1	9727-3541-22	Nut			
510	1	1133-1019-01	Flange bearing			
511	2	9988-3525-16	Screw			
512	2	9699-0026-02	Flat washer			
513	2	9727-3541-22	Nut			
520	1	1133-0966-01	Auger assy			
520A	4	1133-0964-01	Auger blade		Pos 520-2	
520B	20	1133-0940-01	Rivet		Pos 520-6	
520C	2	1133-0960-01	Centre blade		Pos 520-8	
529	1	1133-1027-01	Retainer-bearing			
530	1	1812-1383-01	Ball bearing			
531	1	1133-1000-01	Retainer plate			
532	2	9988-3516-16	Screw			
533	2	9699-0026-02	Flat washer			
534	2	1812-0812-01	Locking nut			
541	1	1812-1400-01	Pulley			

test