



Section: MULTICLIP 46S-46SE TRANSMISSION

Pos.	Quantity	Spare part No	Description	Kit	Notes	New
	3615					
	3628 3629 3639					
1	1	1	1	1111-2900-01	Wheel mounting-R.H.	
2	1	1	1	1111-2901-01	Wheel mounting-L.H.	
3	2	2	2	9548-0014-00	.Bronze bearing	
4	1	1	1	1111-2549-01	.Plastic knob	
5	2	2	2	1111-3065-01	Spacer	
6	2	2	2	1111-2561-01	Cover plate	
7	2	2	2	1111-2382-01	Pin	
8	2	2	2	1111-2635-02	Gear wheel	
9	2	2	2	9699-0100-02	Washer	
10	2	2	2	9943-0612-16	Screw	
16	2	2	2	9699-0037-02	Washer	
17	2	2	2	1111-1138-01	Spring	
18	2	2	2	1111-2665-01	Wheel assy	
19	1	1	1	1111-9047-01	.Ball bearing kit	
20	2	2	2	1111-1184-01	.Bearing cone	
21	2	2	2	9699-0100-02	Washer	
22	2	2	2	9943-0612-16	Screw	
23	2	2	2	1111-3085-01	Hub cap-yellow	
23	2	2		1111-3085-03	Hub cap-white	11-3628-81,11-3629-
30	1	1	1	1111-2633-01	Front cover-yellow	
30	1	1		1111-2633-02	Front cover-black	11-3628-81,11-3629-
31	1	1	1	9943-0530-16	Screw	L = 30 mm
32	2	2	2	9943-0540-16	Screw	L = 40 mm
33	2	2	2	9739-0531-22	Nut	
40	1	1	1	1111-9062-01	V-belt	
41	1	1	1	1111-2915-01	Engine belt pulley	
42	1	1	1	9910-0612-16	Set screw	
45	1	1	1	1111-3055-01	Transmission assy	
46	1	1	1	1111-3047-01	.Belt pulley	
47	1	1	1	9594-0055-00	.Locating pin	
49	1	1	1	1111-3060-01	Spring	
55		2		9836-9520-12	Screw	
56		1		9400-0186-00	Starting switch ass	
57		1		1134-2848-01	.Ignition key	
58		1		1111-2707-01	Housing	
59		1		1111-2705-01	Cover	
60		1		1111-2562-02	Harness	
65	1	1	1	1111-2965-03	Clutch control	
66	2	2	2	9747-0631-02	Lock nut	
67	2	2	2	9948-0655-16	Screw	
68	1	1	1	9836-9512-12	Screw	
69		2		9865-0580-16	Screw	
70		2		9693-0004-02	Washer	
71		1		1111-2733-01	Cover	
72		1		9400-0218-00	Battery	
73		1		9400-0219-00	Charger	
74		2		9739-0531-22	Nut	
75	1	1	1	1111-2018-01	Cable holder	
76	1	1	1	9836-9216-12	Screw	
77	1	1	1	9579-0008-00	Cable holder	
78	1	1	1	1111-1987-02	Control knob-black	