



Section: 1130e AUGER

Pos.	Quantity	Spare part No	Description	Kit	Notes	New
	2844					
480	1	1812-1261-01	Auger pulley			
482	1	1812-1167-01	Key			
483	1	9699-0038-02	Flat washer			
484	1	9743-5421-32	Nut			
485	1	1812-1397-01	Spacer			
490	1	1812-1250-01	Retainer bearing			
491	1	1812-1383-01	Ball bearing			
493	3	9988-3619-16	Screw			
499	3	9795-3631-02	Nut			
500	1	1812-1448-01	Auger housing			
509	2	1812-1430-01	Plug			
510	1	1812-1451-01	Scraper blade			
511	3	9899-3622-16	Screw			
514	5	9795-3631-02	Nut			
520	1	1812-1440-01	Auger-L.H.			
521	1	1812-1439-01	Auger-R.H.			
522	1	1812-9006-01	Shear bolt kit			
524	3	1812-0811-01	.Locking nut			
525	2	1812-0347-01	Bearing			
526	2	1812-0397-01	Spacer			
527	4	9988-3625-16	Screw			
536	2	9899-3622-16	Screw			
540	2	1812-1426-01	Height adjust skid			
541	4	9899-3622-16	Screw			
542	4	9699-0028-02	Flat washer			
543	4	9683-0030-02	Lock washer			
544	4	9795-3631-02	Nut			

test