



Section: 320 DISCHARGE CHUTE CHUTE ROD

Pos.	Quantity	Spare part No	Description	Kit	Notes	New
	1211					
580	1	1133-0987-01	Chute ring			
581	4	1133-1014-01	Screw			
582	4	1133-1018-01	Chute guide			
590	1	1133-1004-01	Lower chute			
591	2	9988-3513-16	Screw			
592	2	9727-3541-22	Nut			
600	1	1133-0967-01	Upper chute			
601	1	1133-0969-01	Hinge wire			
602	1	9899-3632-12	Screw			
603	1	9699-0028-02	Flat washer			
604	1	1133-0932-01	T-knob			
605	1	9795-3631-02	Nut			
606	1	1133-1023-01	Screw			
607	1	9699-0028-02	Flat washer			
608	1	9743-3621-32	Nut			
850	1	1133-0989-01	Upper chute rod			
851	1	9699-0035-02	Flat washer			
852	1	9599-0054-02	Cotter pin			
853	1	1133-0973-01	Curved spring washe			
855	1	9699-0035-02	Flat washer			
856	1	1133-0959-01	Knob			
857	1	1812-0396-01	Retainer			
860	1	1812-0394-01	Eyebolt			
861	1	1812-0203-01	Grommet			
863	1	9683-0035-02	Lock washer			
864	1	9743-3721-32	Nut			
870	1	1133-0975-01	Chute rotation brkt			
871	2	9899-3622-16	Screw			
872	2	9699-0028-02	Flat washer			
873	2	9683-0030-02	Lock washer			
874	2	9795-3631-02	Nut			