



Section: PARK SENATOR HAND CONTROLS

Pos.	Quantity	Spare part No	Description	Kit	Notes	New
6112						
1	1	1134-4156-01	Panel bracket-inner			
2	2	9897-0820-16	Screw			
3	2	9739-0831-22	Nut			
5	1	1134-4065-01	Control shaft			
6	1	1134-4079-01	Spring			
7	1	1134-4080-03	Control sleeve			
8	2	9959-0820-16	Screw			
9	1	1134-4077-01	Throttle control			
10	1	1134-4078-01	Knob			
11	1	1134-0240-00	Shoulder screw			
12	2	1134-4242-01	Spacer washer			
13	1	9694-0001-00	Washer			
14	1	9739-0831-22	Nut			
15	1	1134-4197-01	Throttle cable			
16	1	1134-3240-01	Wire clamp			
17	1	9943-0516-16	Screw			
18	1	1134-4072-01	Control lever			
19	1	1134-2551-01	Knob			
20	1	1134-3573-03	PTO cable			
21	1	1134-4217-01	Switch bracket			
22	2	9893-0616-16	Screw			
23	1	9400-0285-01	Switch			
24	2	9840-7716-16	Screw			
25	1	1134-4066-01	Panel bracket-front			
26	2	9893-0616-16	Screw			
27	1	1134-3986-01	Front plate			
28	4	9893-0616-16	Screw			
29	1	1134-4069-01	Control lever			
30	1	1134-2551-01	Knob			
31	1	1134-4074-01	Intermediate washer			
32	1	1134-4150-01	Gear shifter tube			
33	1	1134-4149-01	Plastic cap			
34	1	1134-4148-01	Lock plate			
35	1	1134-2766-06	Control cable			
36	1	9570-0001-00	Elbow link			
37	2	9739-0531-22	Nut			
38	1	1134-3981-01	Dashboard			
39	4	9946-0525-16	Screw			
40	1	1134-4154-01	Cover			
41	6	1134-4129-01	Cover			
42	1	1134-4093-01	Ignition switch			
43	1	1134-4097-01	Cap			
44	2	1134-4096-01	Ignition key			
45	1	1134-4095-01	Nut			
46	1	1134-4100-01	Plug			
47	1	1134-4233-01	Switch			
48	2	9840-7716-16	Screw			
49	1	1134-4217-01	Switch bracket			
50	2	9893-0616-16	Screw			