



Section: PARK SENATOR-PRESIDENT ENGINE

Pos.	Quantity	Spare part No	Description	Kit	Notes	New
	6112					
	6113					
1	1	1134-4222-02	Seal ring		H = 15 mm	
3A	2	9997-0840-16	Screw		L = 40 mm	
3B	1	9997-0845-12	Screw		L = 45 mm	
3C	1	9997-0870-16	Screw		L = 70 mm	
4	4	9739-0831-22	Nut			
5	1	1134-4110-01	Exhaust pipe			
6	2	1134-1565-01	Spacer			
7	1	1134-0433-00	Muffler gasket			
8	1	1134-2462-01	Lock			
9	2	9988-3651-12	Screw			
10	1	9578-0011-00	Clamp			
11	1	1134-3244-01	Silencer			
12	1	9959-0820-16	Screw			
13	1	9739-0831-22	Nut			
14	1	1134-4046-02	Muffler guard-black			
15	4	9959-0820-16	Screw			
16	4	9739-0831-22	Nut			
17	1	1134-2212-01	Oil drain pipe assy			
18	1	1134-0995-01	.Plug			
19	1	9404-0020-00	.O-ring			
20	1	1134-0997-01	.Fibre gasket			
21	1	1134-4178-01	Engine pulley			
22	1	9600-0250-00	Key			
23	1	9987-5338-12	Screw			
24	1	1134-2733-01	Heat protection			
25	2	9893-0616-16	Screw			
26	1	1134-4030-01	Fuel tank			
27	2	1134-4273-02	Tank bracket			
28	2	1134-2941-01	Protection strip			
29	4	9893-0616-16	Screw			
30	4	9739-0631-22	Nut			
31	1	1134-4356-01	Tank rod			
32	1	9747-0831-02	Lock nut			
33	1	1134-4063-01	Fuel cap			
34	1	1134-3224-01	Fuel shut-off valve			
35	1	1134-3225-01	Grommet			
36	1	1134-2975-07	Fuel hose			
37	2	9578-0023-02	Hose clamp			
38	1	9579-0003-00	Cable holder			
41	1	9404-0025-01	O-ring			
42	1	1134-4411-01	Fuel tank insert			