



Section: JB 20 HANDLE ROTORS

Pos.	Quantity	Spare part No	Description	Kit	Notes	New
	1020					
1	1	1482-0925-01	Switch			
2	2	1482-0947-01	Plast grip			
3	1	1482-0918-01	Rotor outer-R.H.			
4	1	1482-0919-01	Rotor inner-R.H.			
5	1	1482-0920-01	Rotor inner-L.H.			
6	1	1482-0921-01	Rotor outer-L.H.			
7	4	1482-0712-01	Hair pin			
8	1	9997-0885-12	Screw			
9	2	1482-0945-01	Support wheel			
10	1	1482-0916-01	Depth skid/wheel su			
11	1	1482-0917-01	Cotter bolt			
12	1	9598-0002-02	Pin lock			
13	2	9699-0028-02	Flat washer			
14	2	9757-0821-02	Cap nut			
15	2	1482-0943-01	Bushing			
16	1	1482-0922-01	Handlebar			
17	2	1482-0576-01	Wing nut			
18	2	1482-0903-01	Bolt			
19	1	1482-0923-01	Handle tube			
20	2	9997-0812-02	Screw			
21	4	1482-0906-01	Washer			
22	2	9747-0831-02	Lock nut			
23	1	1482-0924-01	Handle tube			
24	2	1482-0942-01	Bushing			
25	1	1482-0905-01	Screw			
26	1	1482-0946-01	Cable			
27	1	1482-0926-01	Throttle control			
28	1	9799-0531-02	Nut			

test