



Section: ST 475 EL. TRIMMER

| Pos. | Quantity | Spare part No | Description | Kit | Notes | New |
|------|----------|---------------|------------------|-----|-------|-----|
| | 1140 | | | | | |
| 1 | 1 | 1911-1032-01 | Motor housing | | | |
| 2 | 1 | 1911-1031-01 | Handle | | | |
| 3 | 1 | 1911-1028-01 | Link cover | | | |
| 4 | 1 | 1911-1040-01 | Pivoting piece | | | |
| 5 | 1 | 1911-1030-01 | Sealing cap | | | |
| 6 | 1 | 1911-1027-01 | Support handle | | | |
| 8 | 1 | 1911-1036-01 | Button | | | |
| 9 | 1 | 1911-1041-01 | Rod | | | |
| 10 | 1 | 1911-1029-01 | Spacer ring | | | |
| 11 | 1 | 1911-1038-01 | Pivot bolt | | | |
| 12 | 1 | 1911-1039-01 | Cap | | | |
| 13 | 1 | 1911-1042-01 | Release button | | | |
| 14 | 1 | 1911-1043-01 | Pivot arm | | | |
| 15 | 1 | 1911-1026-01 | Guard | | | |
| 17 | 1 | 1911-1059-01 | Cable | | | |
| 18 | 1 | 1911-1061-01 | Condensor | | | |
| 19 | 1 | 1911-1068-01 | Connection cable | | | |
| 20 | 1 | 1911-1066-01 | Grommet | | | |
| 21 | 1 | 1911-1060-01 | Switch | | | |
| 22 | 1 | 1911-1049-01 | Tube | | | |
| 23 | 1 | 1911-1056-01 | Spring | | | |
| 24 | 1 | 1911-1057-01 | Spring | | | |
| 25 | 1 | 1911-1058-01 | Spring | | | |
| 26 | 14 | 1911-1105-01 | Screw | | | |
| 27 | 1 | 1911-1050-01 | Screw | | | |
| 28 | 1 | 1911-0820-01 | Screw | | | |
| 29 | 1 | 1911-1048-01 | Cuttinghead assy | | | |
| 29A | 1 | 1911-1044-01 | .Spool holder | | | |
| 29B | 1 | 1911-9021-01 | .Spool with line | | | |
| 29C | 1 | 1911-1045-01 | .Spool cover | | | |
| 29D | 1 | 1911-1046-01 | .Lever | | | |
| 30 | 1 | 1911-1064-01 | Ring | | | |
| 31 | 1 | 1911-1055-01 | Blade | | | |