



Section: SP 370-SP 410 STARTER

| Pos. | Quantity | Spare part No | Description | Kit | Notes | New |
|------|----------|---------------|-------------|-----|-------|-----|
|------|----------|---------------|-------------|-----|-------|-----|

4113 4114

| | | | | | | |
|----|---|---|--------------|---------------------|------------------|--|
| 1 | 1 | 1 | 1911-3548-01 | Starter assy-yellow | Inkl. pos 2 - 11 | |
| 2 | 1 | 1 | 1911-3130-01 | .Starter cord | | |
| 3 | 1 | 1 | 1911-3479-01 | .Starter handle | | |
| 4 | 3 | 3 | 1911-3001-01 | .Screw | | |
| 5 | 1 | 1 | 1911-3176-01 | .Starter spring | | |
| 6 | 1 | 1 | 1911-3372-01 | .Bushing | | |
| 7 | 1 | 1 | 1911-3096-01 | .Disc | | |
| 8 | 1 | 1 | 1911-3483-01 | .Starter pulley | | |
| 9 | 2 | 2 | 1911-3480-01 | .Starter hook | | |
| 10 | 1 | 1 | 1911-3484-01 | .Guide-starter hook | | |
| 11 | 1 | 1 | 1911-3423-01 | .Retainer | | |

test