


Genuine Spare Parts





Spareparts
Joist

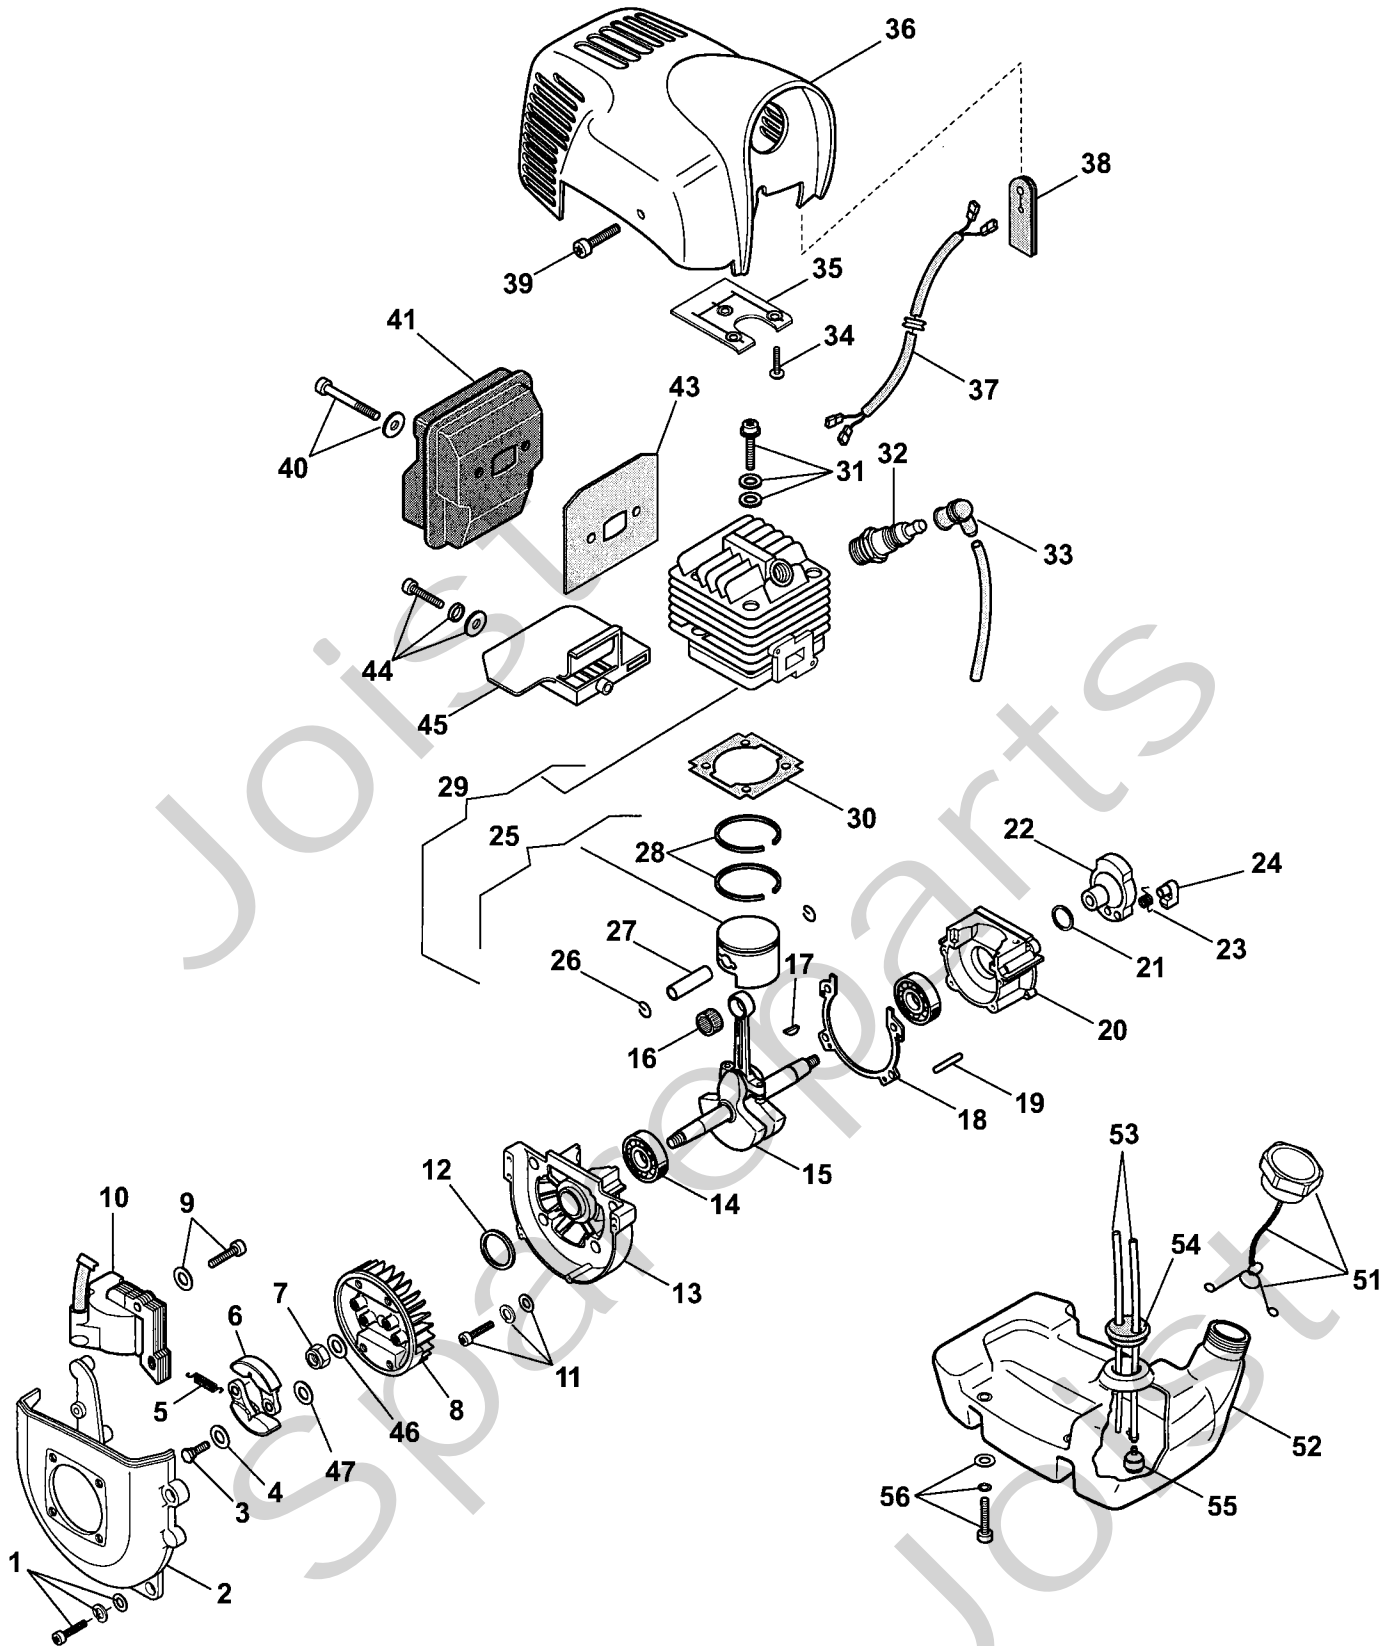


Utgåva Issue 2006-12	Bildnr Picture No 1968A	ST 225J- SB 25J ST 290- ST 291 SB 27J- SB 29J MOTOR	ST 225J- SB 25J ST 290- ST 291 SB 27J- SB 29J ENGINE	Sida Page 276
----------------------------	-------------------------------	--	---	---------------------

Pos. Fig.	Antal/Quantity			Art nr Part No	Benämning	Description	Sats Kit	Anmärkning Notes
	1025 6109	1029 1031 6116 6117						
1	4	4		1911-4334-01	Skrivsats.....	Screw set.....		
2	1	1		1911-4284-01	Stödhus.....	Transm.support case.....		
3	2	2		1911-4310-01	Skruv.....	Screw.....		
4	2	2		1911-4308-01	Bricka.....	Washer.....		
5	1	1		1911-4309-01	Fjäder.....	Spring.....		
6	2	2		1911-4307-01	Koppling.....	Clutch unit.....		
7	1	1		1911-4358-01	Mutter.....	Nut.....		
8	1	1		1911-4277-01	Svånghjul.....	Flywheel.....		
9	2	2		1911-4337-01	Skrivsats.....	Screw set.....		
10	1	1		1911-4276-01	Elektronikspole.....	Electronic coil.....		
11	4	4		1911-4335-01	Skrivsats.....	Screw set.....		
12	1	1		1911-4283-01	Tätningring.....	Seal ring.....		
13	1	1		1911-4280-01	Vevhus-främre.....	Crankcase-front.....		
14		2		1911-4324-01	Kullager.....	Ball bearing.....		
X 14	2			6981110	Kullager.....	Ball bearing.....		
15	1	1		1911-4291-01	Vevaxel.....	Crankshaft.....		
16	1	1		1911-4292-01	Nållager.....	Needle bearing.....		
17	1	1		1911-4323-01	Kil.....	Key.....		
18	1	1		1911-4282-01	Packning.....	Gasket.....		
19	3	3		1911-4342-01	Centrerstift.....	Centering pin.....		
20	1	1		1911-4281-01	Vevhus-bakre.....	Crankcase-rear.....		
21	1	1		1911-4283-01	Tätningring.....	Seal ring.....		
22	1	1		1911-4306-01	Startkopp.....	Starter cup.....		
23	1	1		1911-4345-01	Fjäder.....	Spring.....		
24	1	1		1911-4305-01	Startspärr.....	Starter hook.....		
25	1	1		1911-4287-01	• Kolv.....	• Piston.....		Inkl. pos 26 - 28
26	2	2		1911-4290-01	•• Låsring.....	•• Lock ring.....		
27	1	1		1911-4289-01	•• Kolvbult.....	•• Piston pin.....		
28	2	2		1911-4288-01	•• Kolvring.....	•• Piston ring.....		
29	1	1		1911-4278-01	Cylinder-kolv kpl.....	Cylinder-piston assy.....		Inkl. pos 25
30	1	1		1911-4279-01	Cylinderpackning.....	Cylinder gasket.....		
31	4	4		1911-4334-01	Skrivsats.....	Screw set.....		
32	1	1		1911-4331-01	Tändstift.....	Spark plug.....		
33	1	1		1911-4298-01	Tändstiftshatt.....	Spark plug cover.....		
X 34	3	3		6981285	Skruv.....	Screw.....		
35	1	1		1911-4319-01	Skydd.....	Guard.....		
36	1	1		1911-4341-01	Motorkåpa-gul.....	Engine cover-yellow.....		
37	2	2		1911-4297-01	Kabel.....	Switch wire.....		
38	1	1		1911-4296-01	Kabelhållare.....	Cable retainer.....		
39	2	2		1911-4325-01	Skruv.....	Screw.....		
40	2	2		1911-4336-01	Skrivsats.....	Screw set.....		
41	1	1		1911-4315-01	Ljuddämpare.....	Muffler.....		
43	1	1		1911-4316-01	Ljuddämparskydd.....	Muffler shield.....		
44	1	1		1911-4337-01	Skrivsats.....	Screw set.....		
45	1	1		1911-4318-01	Skydd.....	Guard.....		
46	1	1		1911-4343-01	Bricka.....	Washer.....		
X 47	2	2		1911-4430-01	Bricka.....	Washer.....		
X 51	1	1		1911-4424-01	Tanklock.....	Fuel tank cap.....		
52	1	1		1911-4311-01	Bränsletank.....	Fuel tank.....		
53	2	2		1911-4313-01	Bränsleslang.....	Fuel hose.....		
54	1	1		1911-4314-01	Gummihylsa.....	Grommet.....		
55	1	1		1911-4254-01	Bränslefilter.....	Intake filter.....		
56	4	4		1911-4327-01	Skrivsats.....	Screw set.....		

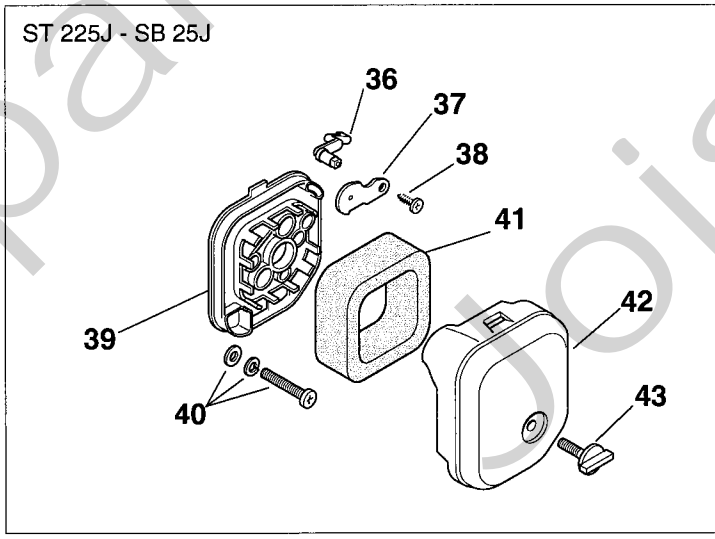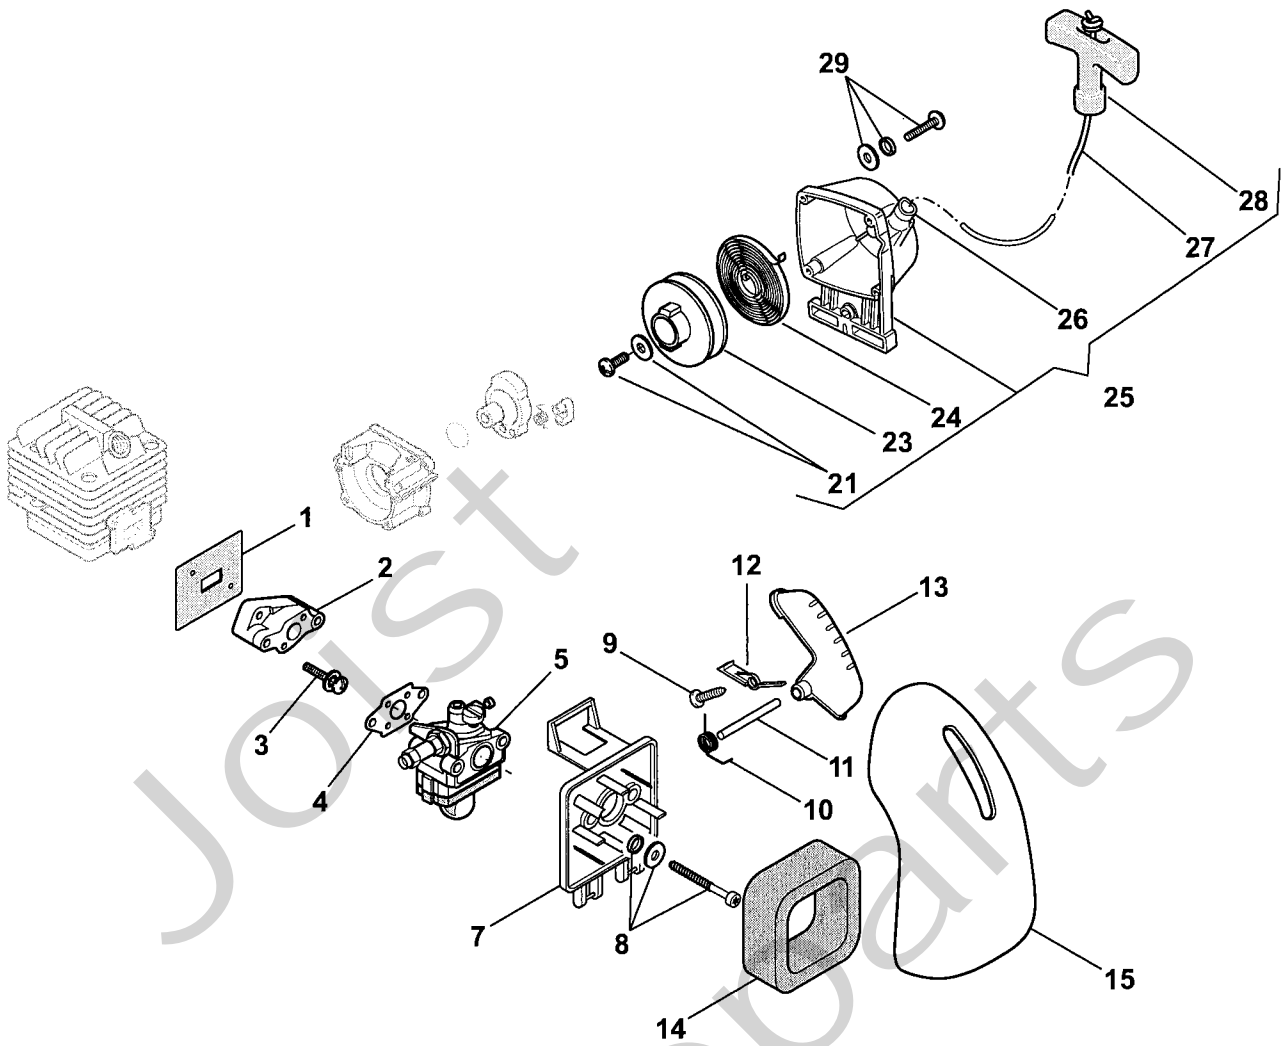

Utgåva Issue 2006- 12	Bildnr Picture No 1969A	ST 225J- SB 25J ST 290- ST 291 SB 27J- SB 29J FÖRGASARE	ST 225J- SB 25J ST 290- ST 291 SB 27J- SB 29J CARBURETTOR	Sida Page 278
-----------------------------	-------------------------------	--	--	---------------------

Pos. Fig.	Antal/Quantity			Art nr Part No	Benämning	Description	Sats Kit	Anmärkning Notes
	1025 6109	1029 1031 6116 6117						
	1	1		1911- 4286- 01	Packning.....	Gasket.....		
	2	1		1911- 4285- 01	Insugningsrör.....	Intake manifold.....		
X	3	2		1911- 4428- 01	Skruvsats.....	Screw set.....		
	4	1		1911- 4293- 01	Packning- membransats.....	Gasket- diaphragm kit.....		
	5	1		1911- 4122- 01	Förgasare kpl.....	Carburettor assy.....		WYJ- 393
X	5	1		1911- 4449- 01	Förgasare kpl.....	Carburettor assy.....		WYJ- 398A
	7	1		1911- 4294- 01	Lufffilterhållare.....	Air filter holder.....		
	8	2		1911- 4330- 01	Skruvsats.....	Screw set.....		
X	9	2		6981269	Skruv.....	Screw.....		
	10	1		1911- 4320- 01	Fjäder.....	Spring.....		
	11	1		1911- 4321- 01	Stift.....	Pin.....		
	12	1		1911- 4322- 01	Hållare.....	Retainer.....		
	13	1		1911- 4332- 01	Tryckknapp.....	Button.....		
	14	1		1911- 4295- 01	Lufffilter.....	Air filter.....		
	15	1		1911- 4340- 01	Filterlock- gul.....	Filter cover- yellow.....		
	21	1		1911- 4326- 01	• Skruvsats.....	• Screw set.....		
	23	1		1911- 4301- 01	• Linhjul.....	• Starter pulley.....		
	24	1		1911- 4300- 01	• Returfjäder.....	• Rewind spring.....		
X	25	1		1911- 4529- 01	Start kpl.....	Starter assy.....		Inkl. pos 21 - 28
	26	1		1911- 4303- 01	• Linguide.....	• Rope guide.....		
	27	1		1911- 4304- 01	• Startsnöre.....	• Starter cord.....		
	28	1		1911- 4302- 01	• Starthandtag.....	• Starter handle.....		
	29	4	4	1911- 4337- 01	Skruvsats.....	Screw set.....		
	36	1		1911- 4352- 01	Chokearm.....	Choke lever.....		
	37	1		1911- 4351- 01	Chokespjäll.....	Choke valve.....		
X	38	1		1911- 4429- 01	Skruv.....	Screw.....		
	39	1		1911- 4346- 01	Lufffilterhus.....	Filter housing.....		
	40	2		1911- 4329- 01	Skruvsats.....	Screw set.....		
	41	1		1911- 4295- 01	Lufffilter.....	Air filter.....		
	42	1		1911- 4349- 01	Filterlock.....	Filer cover.....		
	43	1		1911- 4347- 01	Skruv.....	Screw.....		

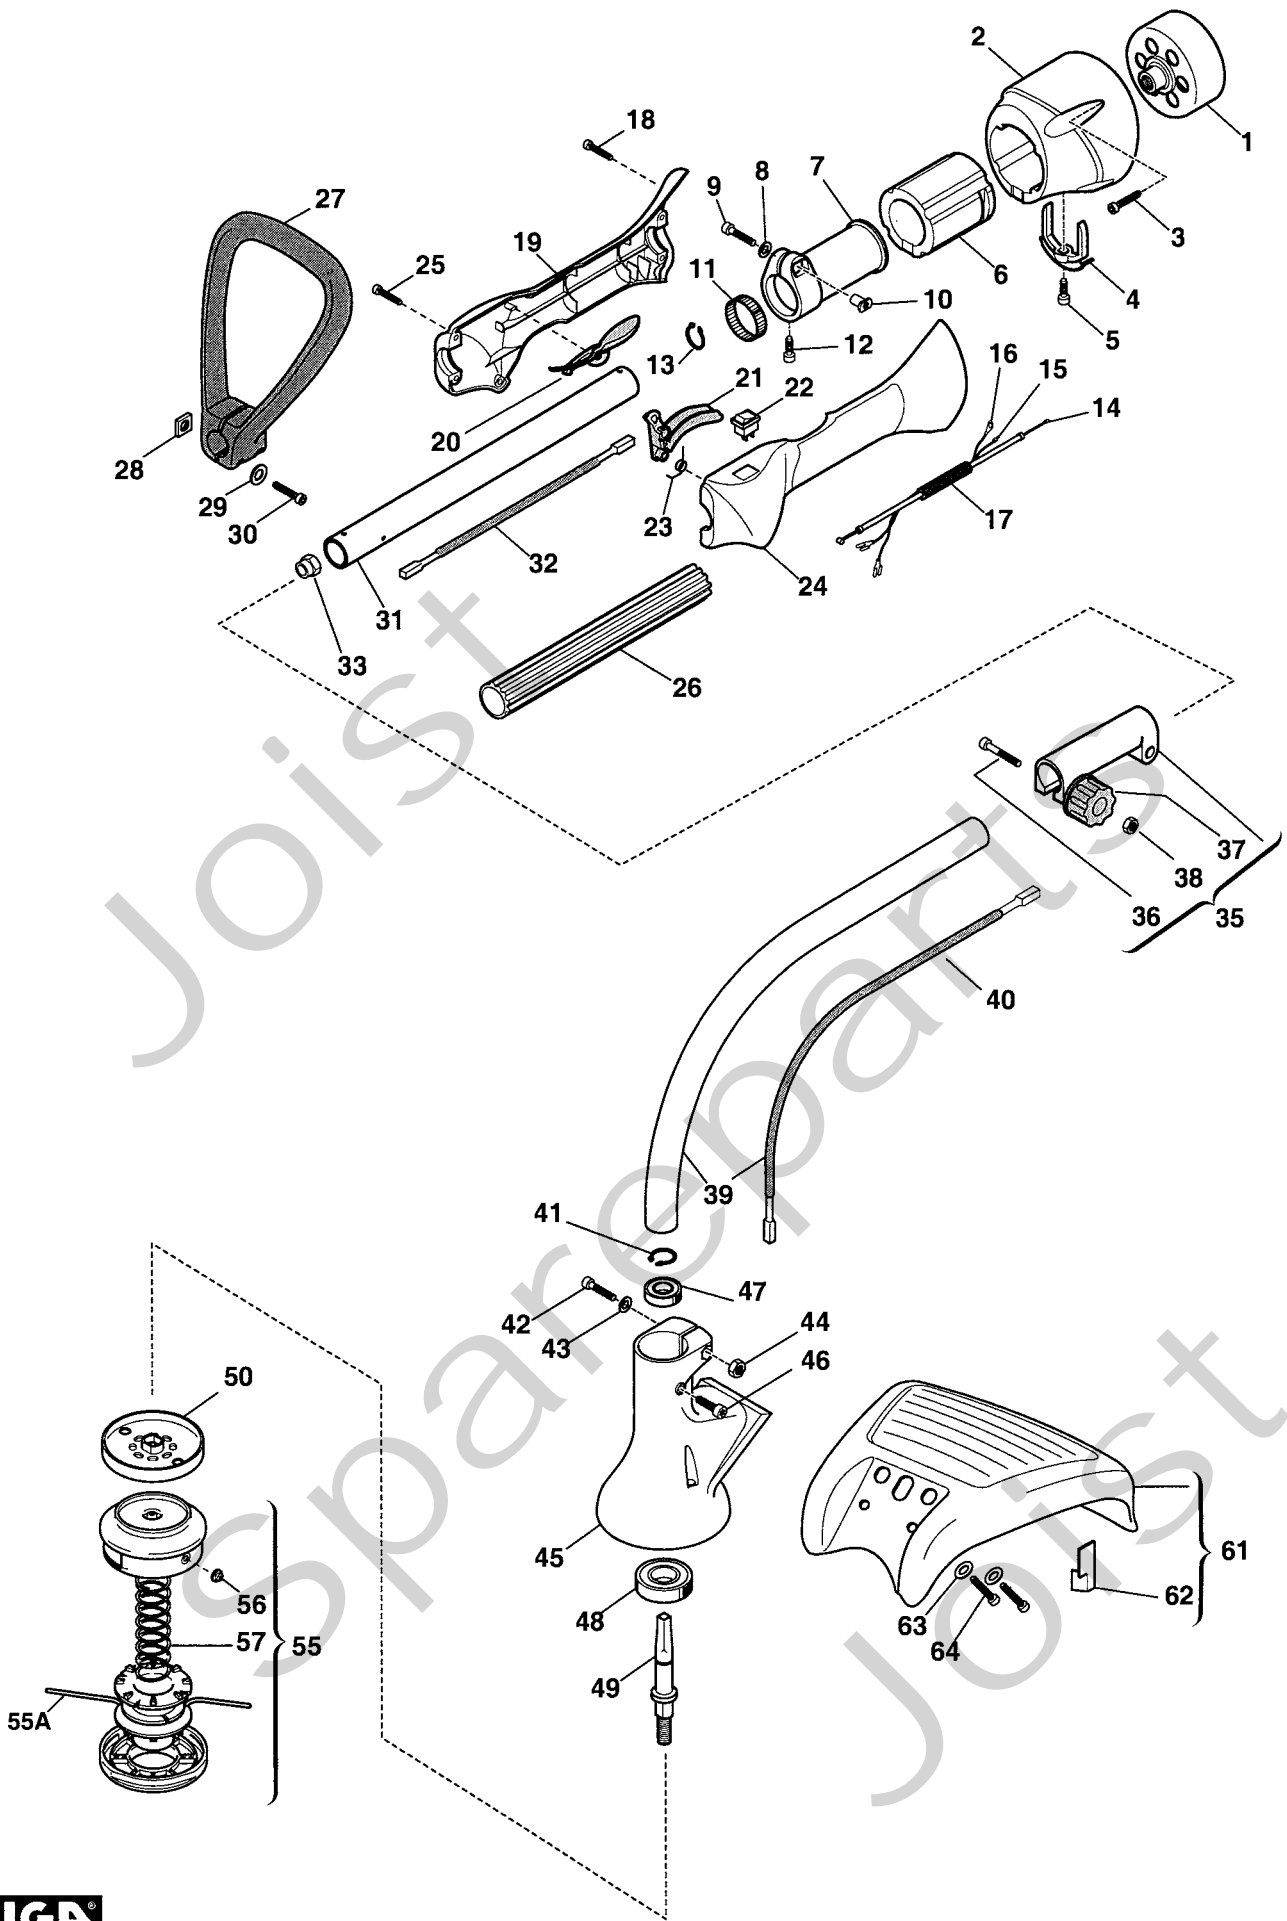

Utgåva Issue		Bildnr Picture No		ST 291 TRIMMER		ST 291 TRIMMER		Sida Page	
2006- 12		2146						268	
Pos. Fig.	Antal/Quantity			Art nr Part No	Benämning	Description	Sats Kit	Anmärkning Notes	
	1031 -11								
X	1	1		1911-4205-01	Kopplingstrumma.....	Clutch drum.....			
	2	1		1911-4189-01	Transmissionsstöd.....	Transmission support.....			
X	3	4		1911-4438-01	Skruv.....	Screw.....			
	4	1		1911-4154-01	Gaffel.....	Fork.....			
	5	1		1911-3002-01	Skruv.....	Screw.....			
	6	1		1911-4155-01	Hylsa.....	Grommet.....			
	7	1		1911-4188-01	Stöd.....	Support.....			
X	8	1		1911-4463-01	Bricka.....	Washer.....			
X	9	1		1911-4435-01	Skruv.....	Screw.....			
X	10	1		1911-4513-01	Bussning.....	Bushing.....			
X	11	1		1911-4507-01	Reduktion.....	Reduction.....			
X	12	1		1911-4505-01	Skruv.....	Screw.....			
X	13	1		1911-4509-01	Låsring.....	Snap ring.....			
	14	1		1911-4137-01	Gaswire.....	Throttle wire.....			
	15	1		1911-4127-01	Kabel.....	Cable.....			
	16	1		1911-4132-01	Jordkabel.....	Ground cable.....			
X	17	1		1911-4164-01	Kabelhölje.....	Wire sheath.....			
	18	1		1911-4434-01	Skruv.....	Screw.....			
	19	1		1911-4184-01	Handtag- hö.....	Handgrip- RH.....			
	20	1		1911-4170-01	Säkerhetsspärr.....	Safety lever.....			
	21	1		1911-4169-01	Gasreglage.....	Throttle lever.....			
X	22	1		1911-4508-01	Brytare.....	Switch.....			
	23	1		1911-4173-01	Fjäder.....	Spring.....			
X	24	1		1911-4185-01	Handtag- vä.....	Handgrip- LH.....			
	25	4		1911-4433-01	Skruv.....	Screw.....			
	26	1		1911-4152-01	Värmeisolering.....	Heat insulator.....			
	27	1		1911-4165-01	Handtag- främre.....	Handle- front.....			
X	28	2		1911-4504-01	Mutter.....	Nut.....			
X	29	2		1911-4464-01	Bricka.....	Washer.....			
X	30	2		1911-4436-01	Skruv.....	Screw.....			
X	31	1		1911-4522-01	Transmissionsrör.....	Transmission tube.....			
X	32	1		1911-4440-01	Drivaxel.....	Transmission shaft.....			
X	33	1		1911-4483-01	Axelhylsa.....	Shaft sleeve.....			
X	35	1		1911-4519-01	Rörkoppling kpl.....	Joint.....		Inkl. pos 36 - 38	
	36	1		9997-0640-12	• Skruv.....	• Screw.....			
X	37	1		1911-4480-01	• Låsraff.....	• Knob.....			
	38	1		1911-4231-01	• Mutter.....	• Nut.....			
X	39	1		1911-4524-01	Transmissionsrör.....	Transmission tube.....		Inkl. pos 40	
X	40	1		1911-4442-01	• Drivaxel.....	• Transmission shaft.....			
X	41	1		1911-4509-01	Låsring.....	Snap ring.....			
X	42	1		1911-4437-01	Skruv.....	Screw.....			
X	43	1		1911-4462-01	Bricka.....	Washer.....			
X	44	1		1911-4502-01	Mutter.....	Nut.....			
	45	1		1911-4125-01	Transmissionshus.....	Gear case.....			
X	46	1		1911-4434-01	Skruv.....	Screw.....			
	47	1		1911-4113-01	Kullager.....	Ball bearing.....			
X	48	1		1911-4506-01	Kullager.....	Ball bearing.....			
	49	1		1911-4115-01	Axel.....	Head shaft.....			
X	50	1		1911-4510-01	Ringmutter- övre.....	Ring nut- upper.....			
	55	1		1911-4149-01	Skärhuvud kpl.....	Nylon head assy.....			
	55A	1		1911-9008-04	Skärtråd (2.4 mm).....	Cutting line (2.4 mm).....		0.45 kg (90 m)	
	55A	1		1911-9008-08	Skärtråd (2.4 mm).....	Cutting line (2.4 mm).....		15 m	
X	56	2		1911-4512-01	• Bussning.....	• Bushing.....			
	57	1		1911-4174-01	• Fjäder.....	• Spring.....			
	61	1		1911-4216-01	Skyddskåpa kpl.....	Safety cover assy.....		Inkl. pos 62	
X	62	1		1911-4511-01	• Kniv.....	• Line cutter.....			
X	63	2		1911-4465-01	Bricka.....	Washer.....			
X	64	2		1911-4433-01	Skruv.....	Screw.....			
	99	1		1911-3212-01	Skyddsglasögon.....	Protective goggles.....		Tillbehör/accessory	