 


Genuine Spare Parts




Spareparts Joist

Utgåva Issue		Bildnr Picture No		SPR 350 MC 340T CHASSI	SPR 350 MC 340T CHASSIS	Sida Page		
Pos. Fig.	Antal/Quantity			Art nr Part No	Benämning	Description	Sats Kit	Anmärkning Notes
	4117	MC 340T						
3	2	2		1911-3015-01	Bricka	Washer		
23	6	6		1911-3456-01	Stötdämpare	Shock absorber		
24	5	5		1911-3261-01	Skruv	Screw		
31	10	10		1911-3273-01	Bricka	Washer		
35	1	1		1911-3388-01	•• Sprint	•• Pin		
36	1	1		1911-3599-01	• Handskydd kpl	• Hand guard assy		Inkl. pos 35, 37
37	1	1		1911-3523-01	•• Kedjelänk	•• Chain connection		
38	1	1		1911-3270-01	Bricka	Washer		
39	1	1		1911-3279-01	Mutter	Nut		
40	2	2		1911-3392-01	Bussning	Bushing		
43	1	1		1911-3383-01	Pivotaxel	Pivot pin		
44	1	1		1911-3509-01	Bromsarm	Brake lever		
48	1	1		1911-3402-01	Fjäder	Spring		
49	1	1		1911-3269-01	Bricka	Washer		
50	1	1		1911-3249-01	Skruv	Screw		
51	1	1		1911-3382-01	Pinnbult	Stud		
52	1	1		1911-3267-01	Bricka	Washer		
53	1	1		1911-3323-01	Elastisk plugg	Elastic plug		
54	1	1		1911-3341-01	Bromsband	Brake band		
56	1	1		1911-3544-01	Kopplingshus- gul	Clutch housing- yellow		Inkl. pos 35 - 37
X 56	1	1		4252443	Kopplingshus- röd	Clutch housing- red		Inkl. pos 35 - 37
61	2	2		1911-3378-01	Svärdmutter	Bar nut		
63	2	2		1911-3265-01	Skruv	Screw		
64	1	1		1911-3249-01	• Skruv	• Screw		
65	1	1		1911-3016-01	• Bricka	• Washer		
85	4	4		1911-3007-01	Skruv	Screw		
86	1	1		1911-3071-01	• Bricka	• Washer		
87	1	1		1911-3377-01	Sexkantsinsats	Hexagonal insert		
91	2	2		1911-3253-01	Skruv	Screw		
92	1	1		1911-3385-01	Spärrpinne	Pin		
93	1	1		1911-3475-01	Spärrknapp	Knob		
94	1	1		1911-3400-01	Spärrfjäder	Spring		
95	4	4		1911-3252-01	Skruv	Screw		
97	1	1		1911-3448-01	Säkerhetsspärr	Safety lever		
98	1	1		1911-3598-01	Handtag kpl	Handle assy		
99	1	1		1911-3401-01	Returfjäder	Spring		
100	1	1		1911-3446-01	Gasarm	Throttle lever		
101	1	1		1911-3245-01	Skruv	Screw		
102	1	1		1911-3386-01	Klämma	Clip		
103	1	1		1911-3251-01	Skruv	Screw		
105	1	1		1911-3266-01	Bricka	Washer		
109	1	1		1911-3447-01	Gasreglage	Throttle lever		
111	1	1		1911-3517-01	Gaswire	Throttle wire		
112	1	1		1911-3326-01	Ytterhölje- gaswire	Throttle cable sheath		
116	5	5		1911-3009-01	Skruv	Screw		
125	1	1		1911-3570-01	Handtag	Handrail		
158	1	1		9747-0531-02	• Mutter	• Nut		
160	1	1		1911-3469-01	• Inlägg- starthandtag	• Insert- starter handle		
161	1	1		1911-3468-01	• Starthandtag	• Starter handle		
162	1	1		1911-3053-01	Stoppkontakt	Stop switch		
163	2	2		1911-3322-01	Jordkabel	Ground cable		
165	1	1		1911-3130-01	• Startsnöre	• Starter cord		
166	1	1		1911-3527-01	• Linhjul	• Starter pulley		
167	1	1		1911-3176-01	• Startfjäder	• Starter spring		
168	1	1		1911-3096-01	• Skiva	• Disc		
187	1	1		1911-3600-01	Start kpl- gul	Starter assy- yellow		
X 187	1	1		8561793/1	Start kpl- röd	Starter assy- red		
196	1	1		1911-3224-01	Svärd	Bar		12" (3/8"x0.050)
197	1	1		1519-9001-44	Kedja (44E)	Chain (44E)		91VG (3/8")
198	1	1		1911-3519-01	Kedjeskydd	Chain cover		14"
199	1	1		1911-3557-01	Tbh- påse	Accessory bag		

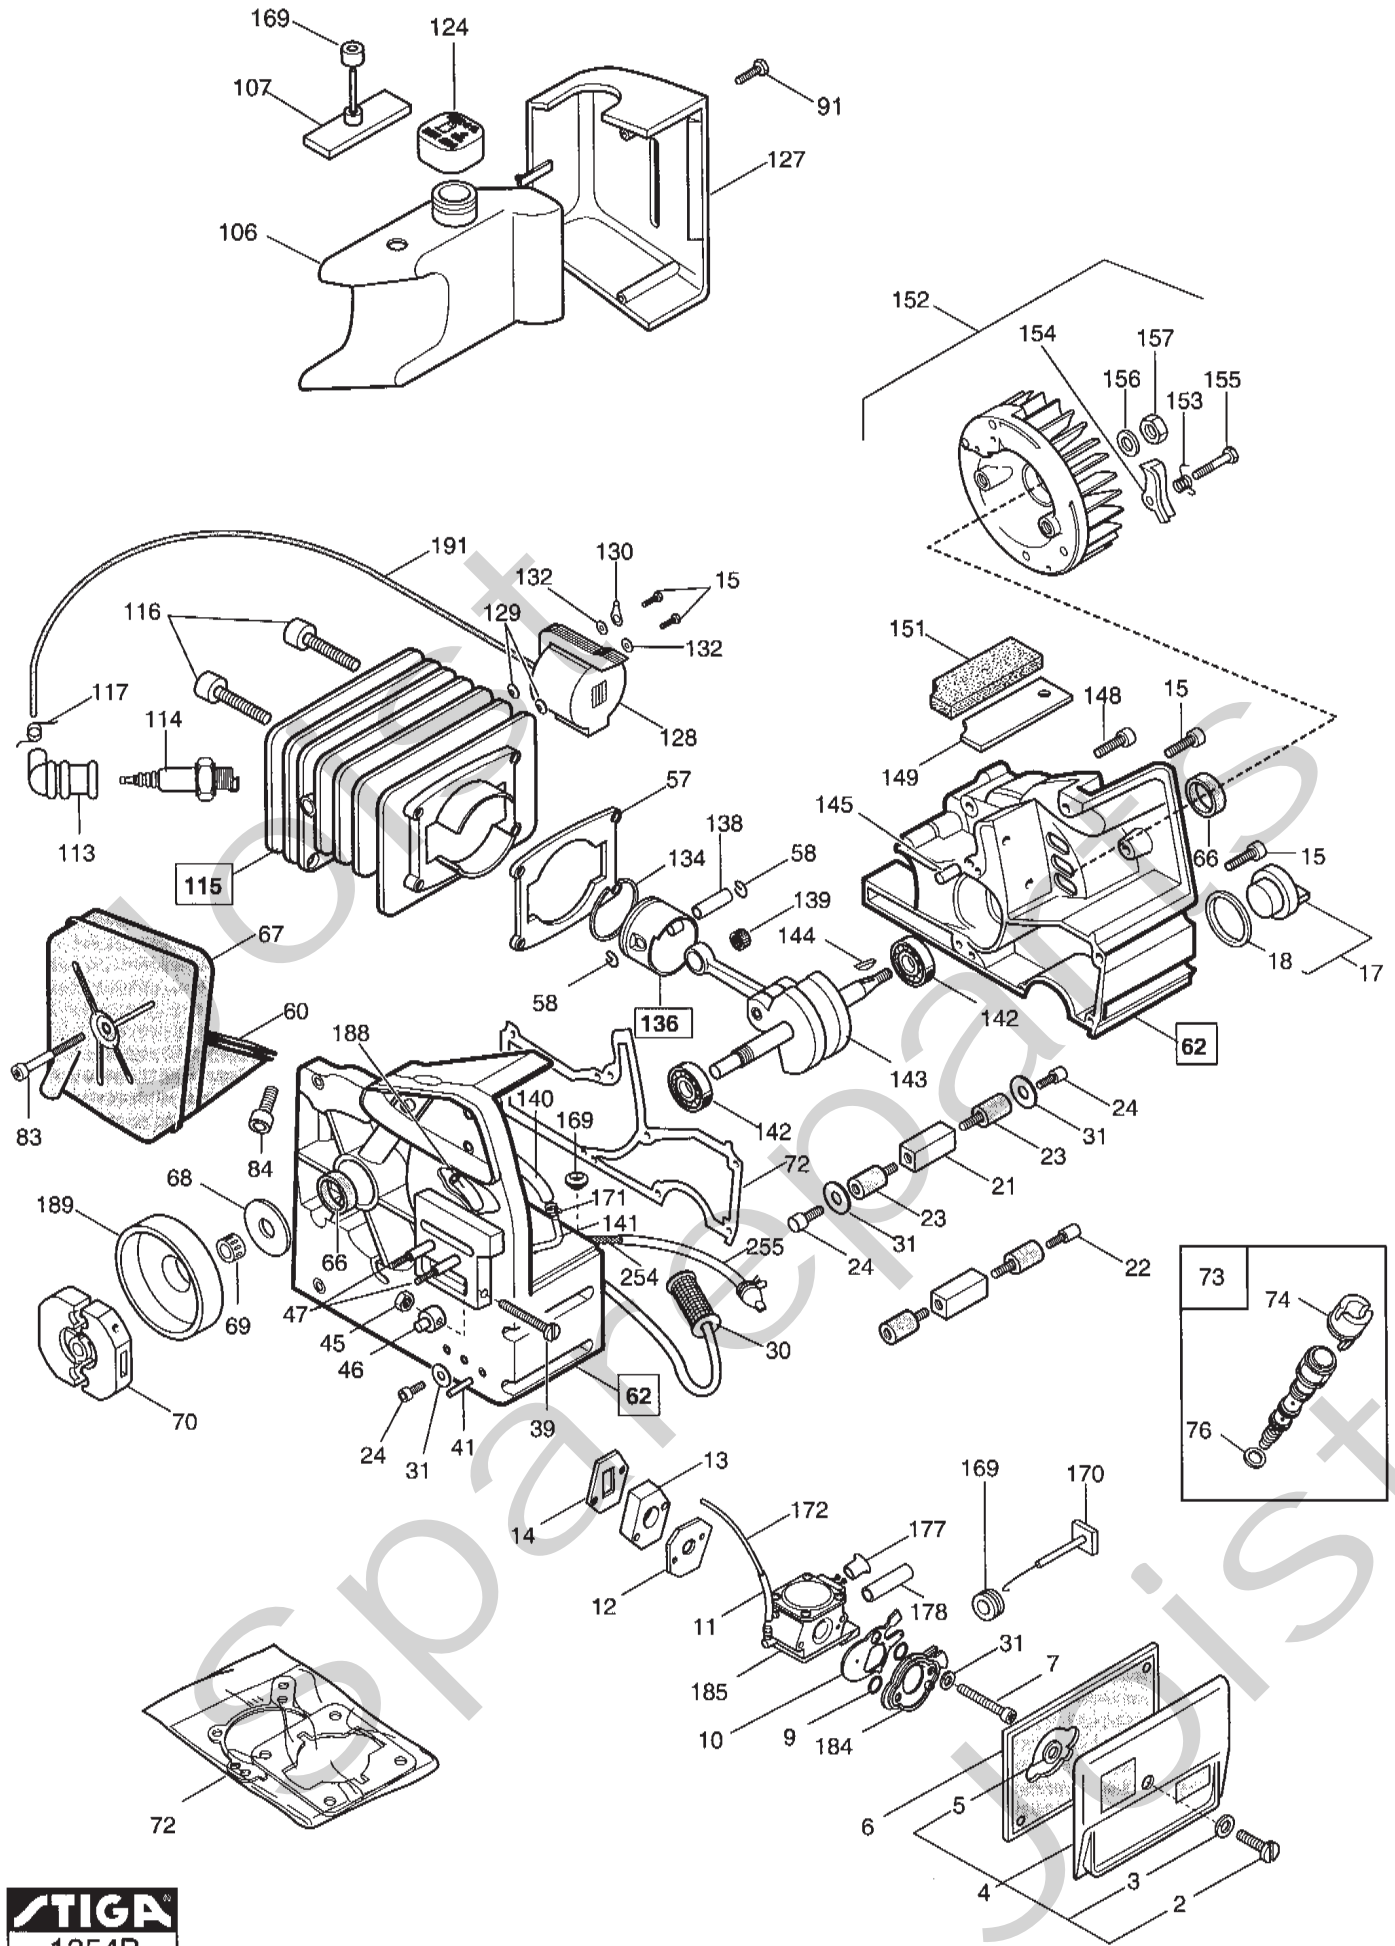


STIGA
1354B
 SPARE PARTS

Utgåva Issue		Bildnr Picture No		SPR 350 MC 340T MOTOR	SPR 350 MC 340T ENGINE	Sida Page	
2005-12		1354B				328	
Pos. Fig.	Antal/Quantity		Art nr Part No	Benämning	Description	Sats Kit	Anmärkning Notes
	4117	MC 340T					
2	1	1	1911-3243-01	• Skruv	• Screw		
3	2	2	1911-3015-01	• Bricka	• Washer		
4	1	1	1911-3601-01	Luftfilterlock kpl.....	Air filter cover assy		Inkl. pos 2, 3, 5
5	1	1	1911-3429-01	• Packning.....	• Gasket		
6	1	1	1911-3493-01	Luftfilter	Air filter		
7	2	2	1911-3014-01	Skruv	Screw		
9	2	2	1911-3339-01	Bricka	Washer		
10	1	1	1911-3342-01	Chokespjäll	Choke valve		
11	1	1	1911-3501-01	Slang	Tube		
12	1	1	1911-3443-01	• Förgasarpackning	• Carburettor gasket		
13	1	1	1911-3521-01	Stöd	Support		
14	1	1	1911-3437-01	• Packning.....	• Gasket		
15	8	8	1911-3259-01	Skruv	Screw		
17	1	1	1911-3526-01	Oljetanklock kpl	Oil tank cap assy		Inkl. pos 18
18	1	1	1911-3428-01	• Tätningring	• Tank cap seal.....		
21	2	2	1911-3376-01	Stöd	Support		
22	1	1	1911-3292-01	Skruv	Screw		
23	6	6	1911-3456-01	Stötdämpare	Shock absorber		
24	5	5	1911-3261-01	Skruv	Screw		
30	1	1	1911-3529-01	Oljefilter	Oil filter		
31	4	4	1911-3273-01	Bricka	Washer		
39	1	1	1911-3246-01	Skruv	Screw		
41	1	1	1911-3324-01	Fjäderpinne	Spring pin		
45	1	1	1911-3022-01	Mutter	Nut		
46	1	1	1911-3387-01	Kedjespännare	Chain tensioner		
47	2	2	1911-3281-01	Pinnbult	Stud		
57	1	1	1911-3438-01	• Packning.....	• Gasket		
58	2	2	1911-3068-01	• Låsring	• Lock ring		
60	1	1	1911-3436-01	• Packning.....	• Gasket		
62	1	1	1911-3591-01	Vevhus kpl	Crankcase assy		
66	2	2	1911-3043-01	Tätningring	Seal ring		
67	1	1	1911-3508-01	Ljuddämpare	Muffler		
68	1	1	1911-3340-01	Drevbricka	Sprocket washer		
69	1	1	1911-3299-01	Nållager	Needle bearing		
70	1	1	1911-3522-01	Koppling kpl	Clutch assy		
72	1	1	1911-3611-01	Packningssats	Gasket set		Inkl. 12, 14, 57, 60
73	1	1	1911-3607-01	Oljepump kpl	Oil pump assy		Inkl. pos 74, 76
74	1	1	1911-3474-01	• Bussning.....	• Bushing		
76	3	3	1911-3431-01	• Tätningring	• Seal		
83	1	1	1911-3263-01	Skruv	Screw		
84	2	2	1911-3013-01	Skruv	Screw		
91	2	2	1911-3253-01	Skruv	Screw		
106	1	1	1911-3585-01	Bränsletank kpl	Fuel tank assy		Inkl. pos 124
107	1	1	1911-3621-01	Bränslefilter	Fuel intake filter		
113	1	1	1911-3470-01	Tändstiftshatt.....	Spark plug cover		
114	1	1	9400-0258-00	Tändstift	Spark plug		Champion CJ7Y
115	1	1	1911-3594-01	Cylinder kpl.....	Cylinder assy		Inkl 58,134,136,138
116	5	5	1911-3009-01	Skruv	Screw		
117	1	1	1911-3421-01	Fjäder	Spring		
124	1	1	1911-3515-01	• Tanklock	• Fuel tank cap		
127	1	1	1911-3569-01	Tankkåpa	Fuel tank cover		
128	1	1	1911-3312-01	Elektronikspole	Electronic coil		
129	2	2	1911-3271-01	Bricka	Washer		
130	1	1	1911-3335-01	Jordanslutning.....	Ground terminal		
132	2	2	1911-3272-01	Bricka	Washer		
134	1	1	1911-3047-01	• Kolvring	• Piston ring		
136	1	1	1911-3593-01	• Kolv kpl.....	• Piston assy.....		Inkl. pos 58,134,138
138	1	1	1911-3306-01	• Kolvbult	• Piston pin		
139	1	1	1911-3300-01	• Nållager	• Needle bearing		
140	1	1	1911-3502-01	Gummislang	Rubber tube		
141	1	1	1911-3373-01	Anslutning	Connection		
142	2	2	1911-3297-01	Kullager	Ball bearing		
143	1	1	1911-3584-01	Vevaxel kpl	Crankshaft assy.....		Inkl. pos 139

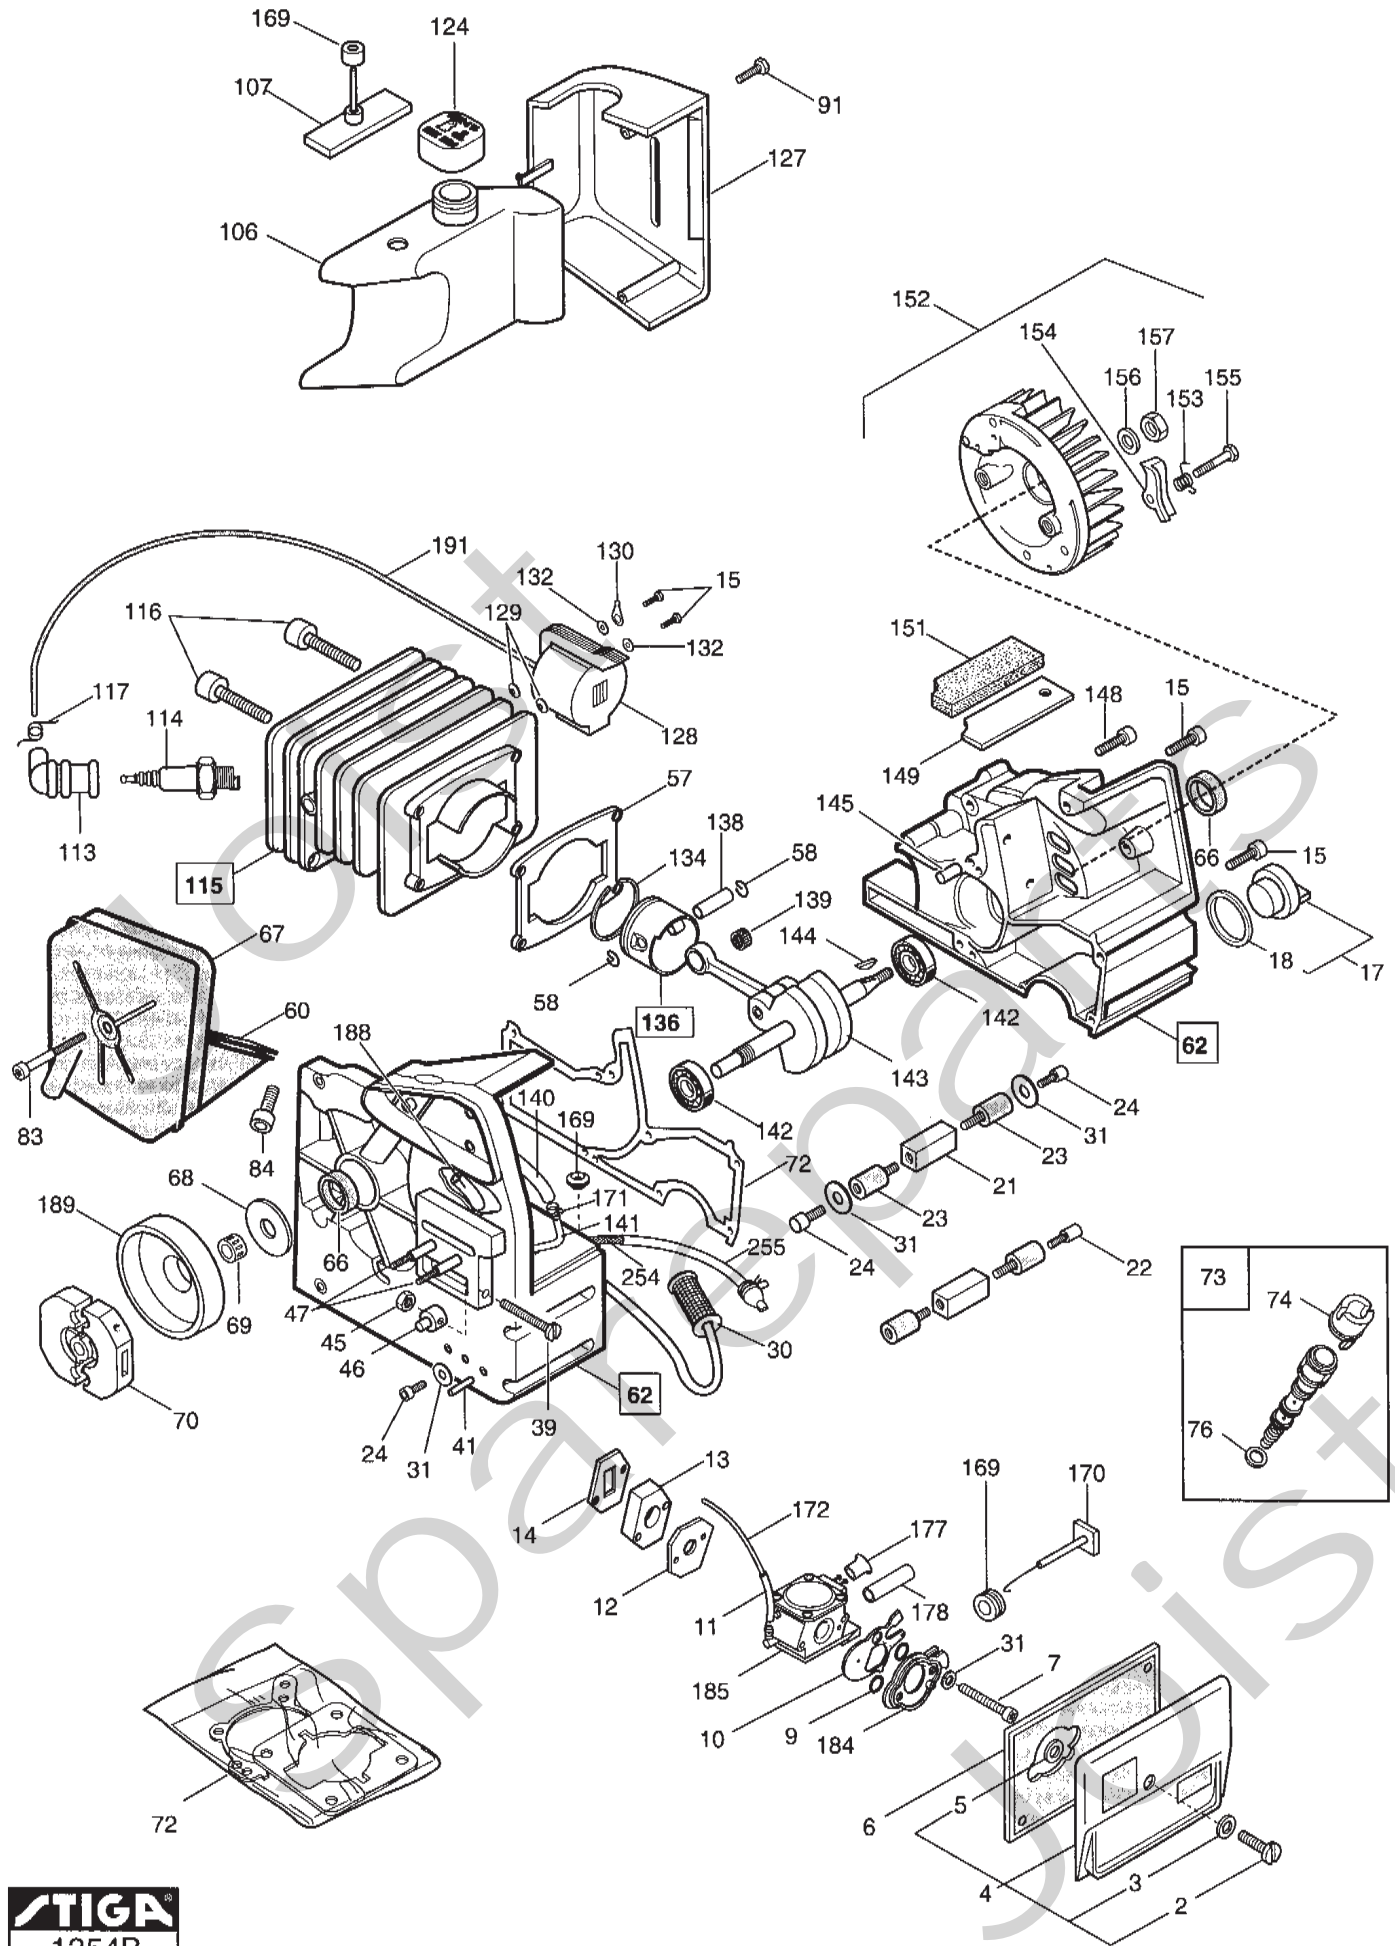 

STIGA
1354B
 SPARE PARTS

Utgåva Issue		Bildnr Picture No		SPR 350 MC 340T MOTOR	SPR 350 MC 340T ENGINE	Sida Page	
2005-12		1354B				330	
Pos. Fig.	Antal/Quantity		Art nr Part No	Benämning	Description	Sats Kit	Anmärkning Notes
	4117	MC 340T					
144	1	1	1911-3048-01	Svånghjulskil	Flywheel key		
145	2	2	1911-3307-01	Styrpinne	Pin		
148	3	3	1911-3258-01	Skruv	Screw		
149	1	1	1911-3473-01	Förgasarskydd	Carb. protection		
151	1	1	1911-3439-01	Packning	Gasket		
152	1	1	1911-3516-01	Svånghjul kpl	Flywheel assy		Inkl. pos 153 - 155
153	2	2	1911-3398-01	• Fjäder	• Spring		
154	2	2	1911-3466-01	• Startspärr	• Starter hook		
155	2	2	1911-3282-01	• Skruv	• Screw		
156	1	1	1911-3268-01	Bricka	Washer		
157	1	1	1911-3280-01	Mutter	Nut		
169	3	3	1911-3463-01	Gummihylsa	Grommet		
170	1	1	1911-3528-01	Chokearm	Choke lever		
171	2	2	1911-3327-01	Slangklämma	Clamp		
172	1	1	1911-3500-01	Slang	Tube		
177	1	1	1911-3464-01	Gummipackning	Rubber gasket		
178	1	1	1911-3499-01	Rör- tomgångsjust	Guide tube- idle		
184	1	1	1911-3566-01	Insugningsfläns	Intake flange		
185	1	1	1911-3555-01	Förgasare kpl	Carburettor assy		Walbro WT272
188	2	2	1911-3374-01	Oljeslangförbindning	Oil tube connection		
189	1	1	1911-3507-01	Kedjedrev	Sprocket		
191	1	1	1911-3055-01	Tändstiftskabel	Spark plug cable		
254	1	1	1911-3373-01	Anslutning	Connection		
255	1	1	1911-3536-01	Oljeslang	Oil tube		

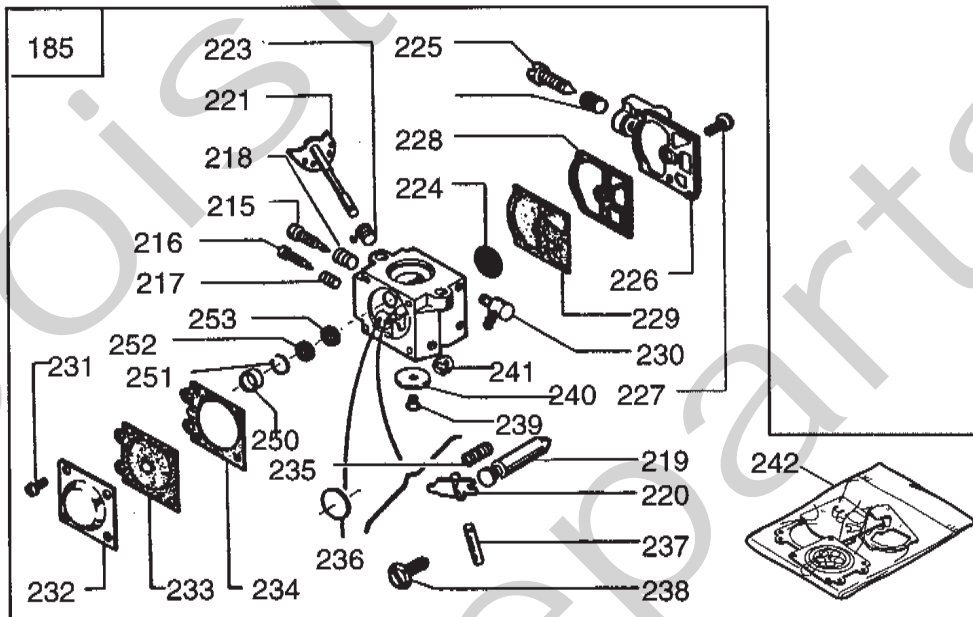 

Utgåva Issue		Bildnr Picture No		SPR 350 MC 340T FÖRGASARE		SPR 350 MC 340T CARBURETTOR		Sida Page	
2005- 12		1355						332	
Pos. Fig.	Antal/Quantity			Art nr Part No	Benämning	Description	Sats Kit	Anmärkning Notes	
	4117	MC 340T							
185	1	1		1911-3555-01	Förgasare kpl.....	Carburettor assy			
215	1	1		1911-3290-01	• Justerskruv- max	• Mixture screw- high			
216	1	1		1911-3288-01	• Justerskruv- tomgång.....	• Mixture screw- idle			
217	1	1		1911-3404-01	• Fjäder.....	• Spring			
218	1	1		1911-3405-01	• Fjäder.....	• Spring			
219	1	1		1911-3375-01	• Nålventil.....	• Inlet needle.....			
220	1	1		1911-3337-01	• Ventilarm	• Control lever.....			
221	1	1		1911-3389-01	• Spjällarm	• Throttle shaft.....			
223	1	1		1911-3410-01	• Fjäder.....	• Spring			
224	1	1		1911-3495-01	• Nät.....	• Screen.....			
225	1	1		1911-3291-01	• Tomgångsskruv	• Idle speed screw			
226	1	1		1911-3424-01	• Lock.....	• Cover			
227	4	4		1911-3285-01	• Skruv.....	• Screw			
230	1	1		1911-3346-01	• Nippel	• Fitting			
231	4	4		1911-3284-01	• Skruv	• Screw			
232	1	1		1911-3333-01	• Lock.....	• Cover			
235	1	1		1911-3403-01	• Fjäder.....	• Spring			
236	1	1		1911-3343-01	• Plugg.....	• Welch plug			
237	1	1		1911-3384-01	• Sprint.....	• Pin.....			
238	1	1		1911-3286-01	• Skruv	• Screw			
239	1	1		1911-3283-01	• Skruv	• Screw			
240	1	1		1911-3345-01	• Gasspjäll.....	• Throttle shutter			
241	1	1		1911-3329-01	• Hållare	• Retainer.....			
242	1	1		1911-3612-01	• Membran- packningsats...	• Diaphragm- gasket set		Inkl. 228,229,233,234	
250	1	1		1911-3391-01	• Plugg.....	• Plug.....			
251	1	1		1911-3332-01	• Hållare	• Retainer.....			
252	1	1		1911-3494-01	• Filter	• Filter			
253	1	1		1911-3390-01	• Ventil	• Valve			