 



Genuine Spare Parts




Joist
Spareparts
Joist

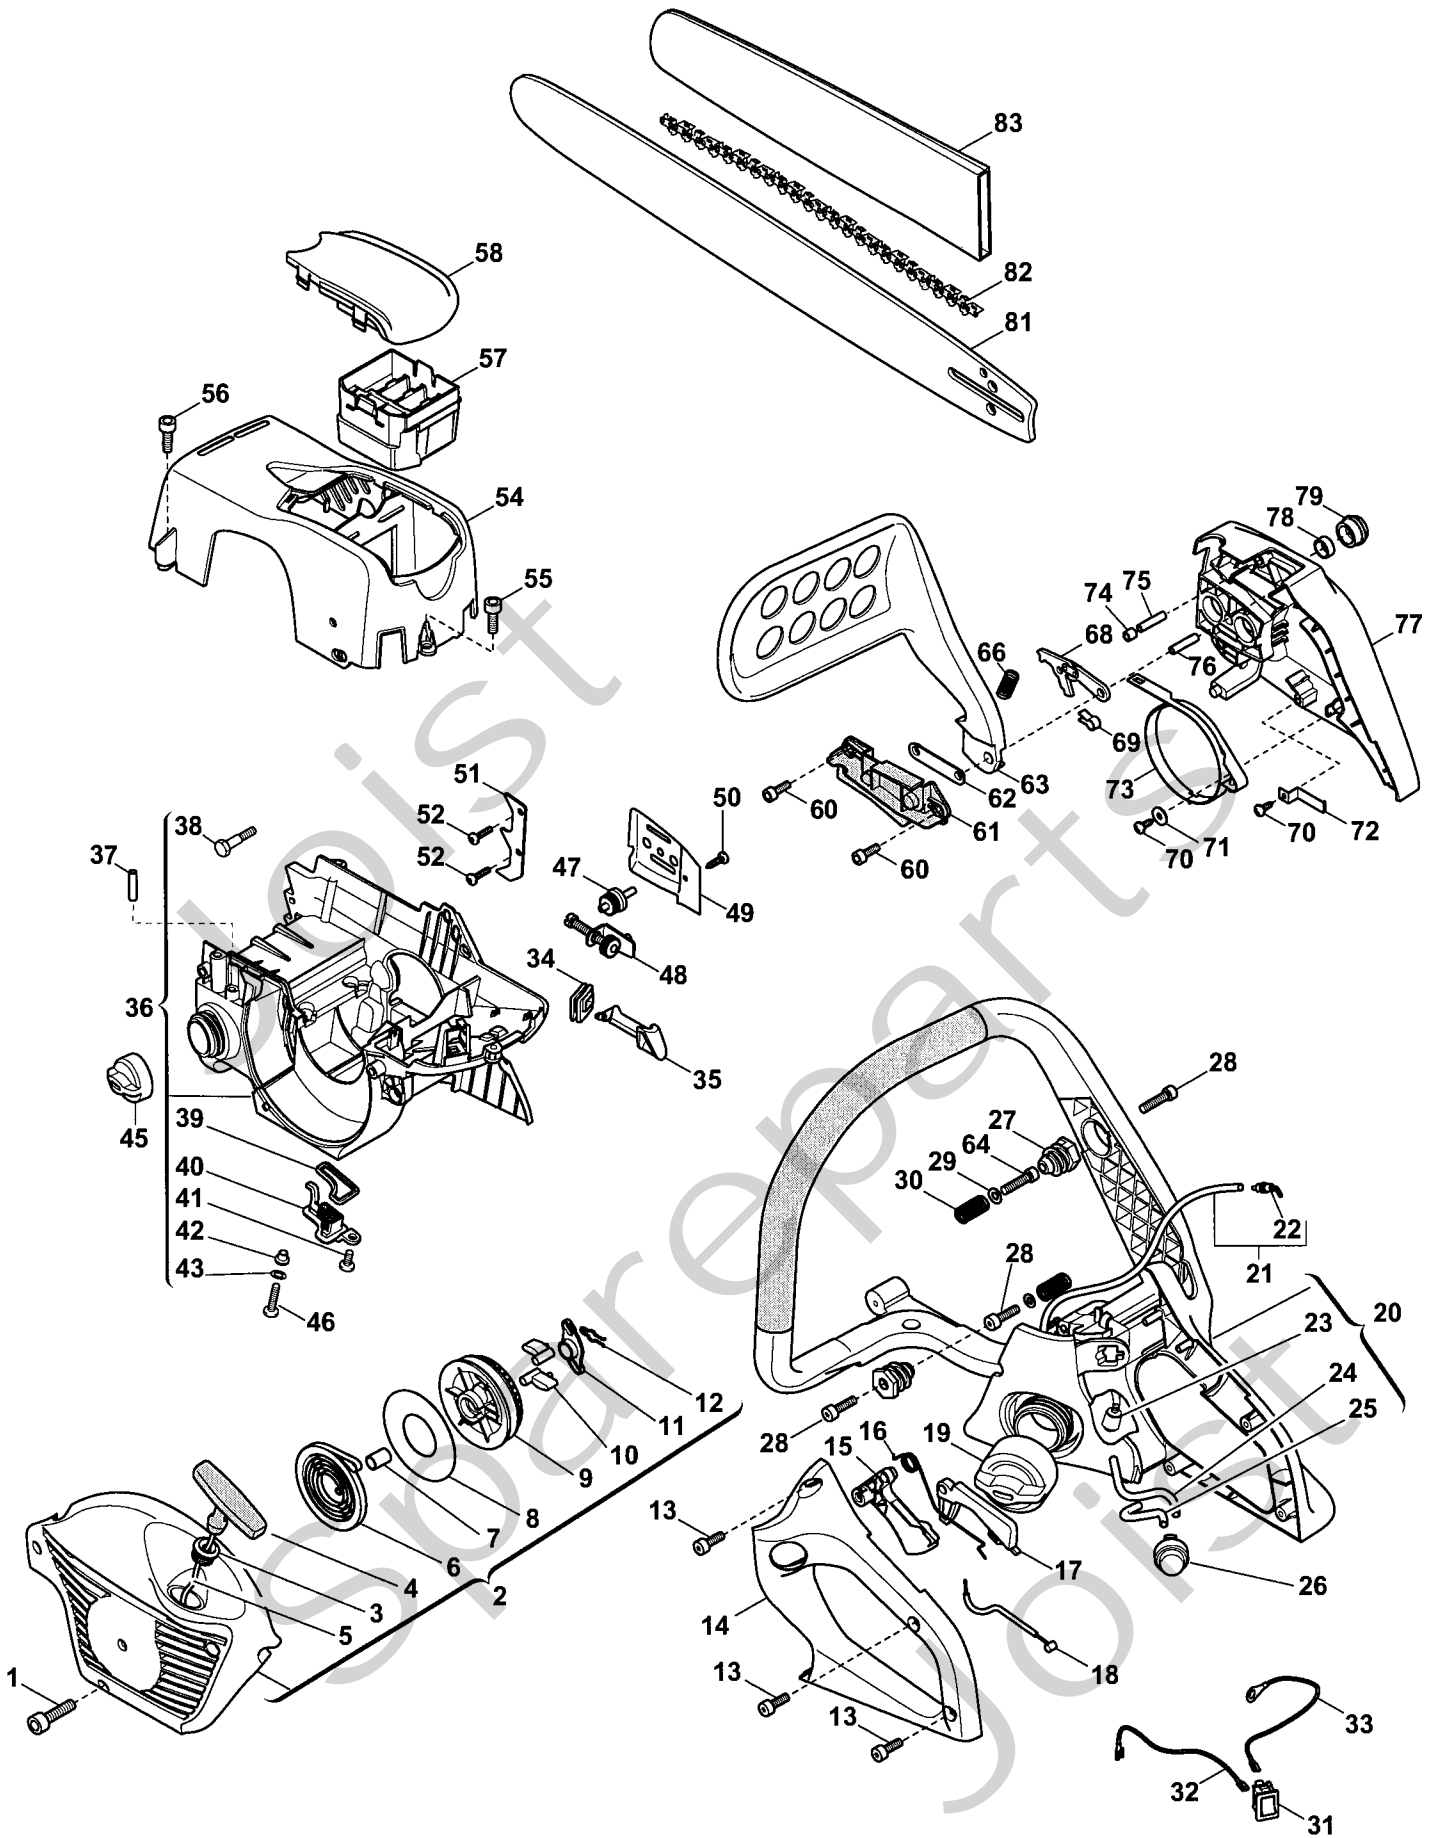

Utgåva Issue		Bildnr Picture No		SP 440- SP 480 CHASSI		SP 440- SP 480 CHASSIS		Sida Page	
2006- 12		1974A						368	
Pos. Fig.	Antal/Quantity			Art nr Part No	Benämning	Description	Sats Kit	Anmärkning Notes	
	4141 -11 -21	4148 -11 -31							
1	3	3		1911-3001-01	Skruv	Screw			
2	1	1		1911-4209-01	Start kpl- gul	Start assy- yellow		Inkl. pos 3 - 12	
3	1	1		1911-4240-01	• Bussning	• Bushing			
4	1	1		1911-3472-01	• Starthandtag	• Starter handle			
5	1	1		1911-3130-01	• Startsnöre	• Starter cord			
6	1	1		1911-3176-01	• Startfjäder	• Starter spring			
7	1	1		1911-3372-01	• Bussning	• Bushing			
8	1	1		1911-3096-01	• Skiva	• Disc			
9	1	1		1911-3483-01	• Linhjul	• Starter pulley			
10	2	2		1911-3480-01	• Startspärr	• Starter hook			
11	1	1		1911-3484-01	• Fäste- startspärr	• Guide- starter hook			
12	1	1		1911-3423-01	• Hållare	• Retainer			
13	4	4		1911-3002-01	Skruv	Screw			
14	1	1		1911-4147-01	Handtagskåpa	Handle cover			
15	1	1		1911-3453-01	Gasreglage	Throttle lever			
16	1	1		1911-3417-01	Fjäder	Spring			
17	1	1		1911-3454-01	Säkerhetsspärr	Safety lever			
18	1	1		1911-4136-01	Gaswire	Throttle cable			
19	1	1		1911-4220-01	Tanklock	Fuel tank cap			
20	1	1		1911-4212-01	Handtag kpl	Handle assy		Inkl. pos 23 - 25	
21	1	1		1911-3558-01	Bränslerör	Fuel tube		Inkl. pos 22	
22	1	1		1911-3560-01	• Andningsventil	• Breather valve			
23	1	1		1911-3621-01	• Bränslefilter	• Fuel intake filter			
24	1	1		1911-4194-01	• Primerslang	• Air purge line			
25	1	1		1911-4249-01	• Primerslang	• Air purge line			
26	1	1		1911-4114-01	Primer	Primer			
27	3	3		1911-4191-01	Plugg	Welch plug			
28	5	5		1911-3001-01	Skruv	Screw			
29	3	3		1911-3015-01	Bricka	Washer			
30	3	3		1911-4175-01	Fjäder	Spring			
31	1	1		1911-3053-01	Stoppkontakt	Stop switch			
32	1	1		1911-4131-01	Stoppkabel	Stop wire			
33	1	1		1911-3321-01	Jordkabel	Ground cable			
34	1	1		1911-4157-01	Hylsa	Grommet			
35	1	1		1911-4171-01	Chokearm	Choke lever			
36	1	1		1911-4207-01	Vevhus kpl	Crankcase assy		Inkl. pos 38 - 43	
37	1	1		1911-3563-01	Oljeslang	Tube			
38	2	2		1911-3240-01	• Svärdskruv	• Bar screw			
39	1	1		1911-4160-01	• Packning	• Gasket			
40	1	1		1911-4179-01	• Oljefilter	• Oil filter			
41	1	1		1911-3001-01	• Skruv	• Screw			
42	4	4		1911-4120-01	• Bussning	• Bushing			
43	4	4		1911-3015-01	• Bricka	• Washer			
45	1	1		1911-4221-01	Tanklock	Tank cap			
46	4	4		1911-3009-01	Skruv	Screw			
47	1	1		1911-4178-01	Bult	Pin			
48	1	1		1911-4192-01	Kedjesträckare	Chain tensioner			
49	1	1		1911-4167-01	Svärdplatta	Bar plate			
50	1	1		1911-3249-01	Skruv	Screw			
51	1	1		1911-3856-01	Spikjärn	Spike			
52	2	2		1911-3002-01	Skruv	Screw			
54	1	1		1911-4142-01	Cylinderkåpa- gul	Cylinder cover- yellow			
55	1	1		1911-3002-01	Skruv	Screw			
56	2	2		1911-3001-01	Skruv	Screw			
57	1	1		1911-4153-01	Lufffilter	Air filter			
58	1	1		1911-4145-01	Lock	Cover			
60	2	2		1911-3002-01	Skruv	Screw			
61	1	1		1911-4146-01	Bromskåpa	Cover			
62	1	1		1911-3361-01	Bromsplåt	Brake plate			
63	1	1		1911-4215-01	Handskydd	Hand guard			
64	1	1		1911-3007-01	Skruv	Screw			
66	1	1		1911-4421-01	Fjäder	Spring			
68	1	1		1911-3540-01	Kedjebromsarm	Chain brake lever			

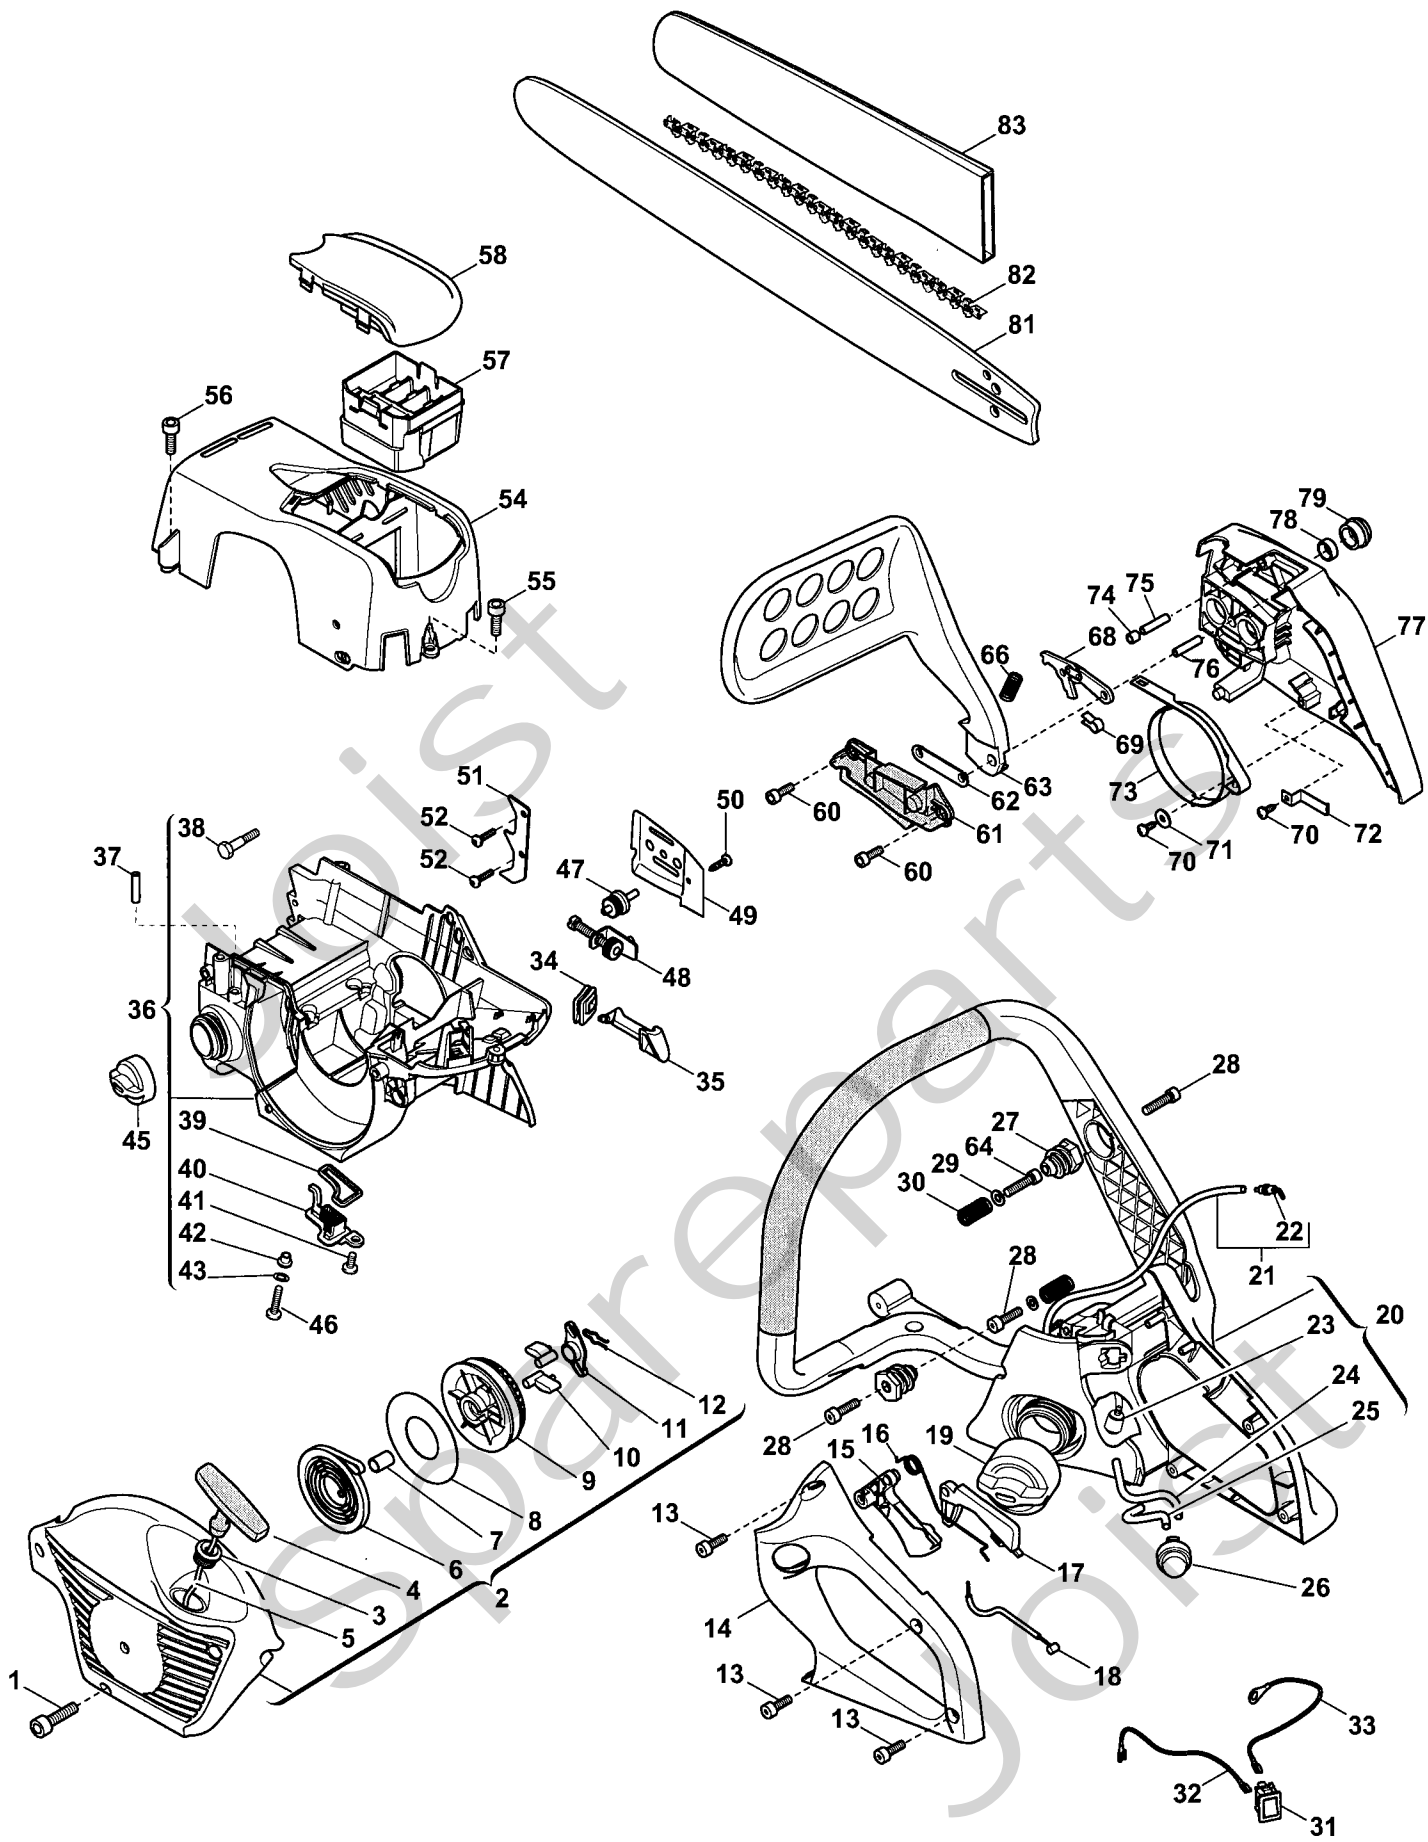 

Utgåva Issue		Bildnr Picture No		SP 440- SP 480 CHASSI		SP 440- SP 480 CHASSIS		Sida Page	
2006- 12		1974A						370	
Pos. Fig.	Antal/Quantity			Art nr Part No	Benämning	Description	Sats Kit	Anmärkning Notes	
	4141 -11 -21	4148 -11 -31							
69	1	1		1911- 3366- 01	Fjäder.....	Spring			
70	2	2		1911- 3249- 01	Skruv.....	Screw			
71	1	1		1911- 3269- 01	Bricka	Washer.....			
72	1	1		1911- 4241- 01	Plåt	Plate			
73	1	1		1911- 4177- 01	Bromsband	Brake band			
74	1	1		1911- 4229- 01	Bussning	Bushing			
75	1	1		1911- 4108- 01	Nål	Needle			
76	1	1		1911- 3309- 01	Pinne	Pin			
77	1	1		1911- 4126- 01	Kopplingshus- gul.....	Clutch housing- yellow.....			
78	2	2		1911- 4243- 01	Bussning	Bushing.....			
79	2	2		1911- 3296- 01	Mutter.....	Nut			
81	1	1		1911- 4197- 01	Svärd	Bar		16" (0.325"x0.050)	
81	1	1		1911- 4198- 01	Svärd	Bar		18" (0.325"x0.050)	
81	1	1		1911- 4199- 01	Svärd	Bar		13" (0.325"x0.050)	
82	1	1		1519- 9002- 56	Kedja (56E).....	Chain (56E).....		95VP (0.325")	
82	1	1		1519- 9002- 66	Kedja (66E).....	Chain (66E).....		95VP (0.325")	
82	1	1		1519- 9002- 72	Kedja (72E).....	Chain (72E).....		95VP (0.325")	
83	1	1		1911- 3519- 01	Kedjeskydd	Chain cover		13"	
83	1	1		1911- 3520- 01	Kedjeskydd	Chain cover		16"	
83		1		1911- 4250- 01	Kedjeskydd	Chain cover		18"	

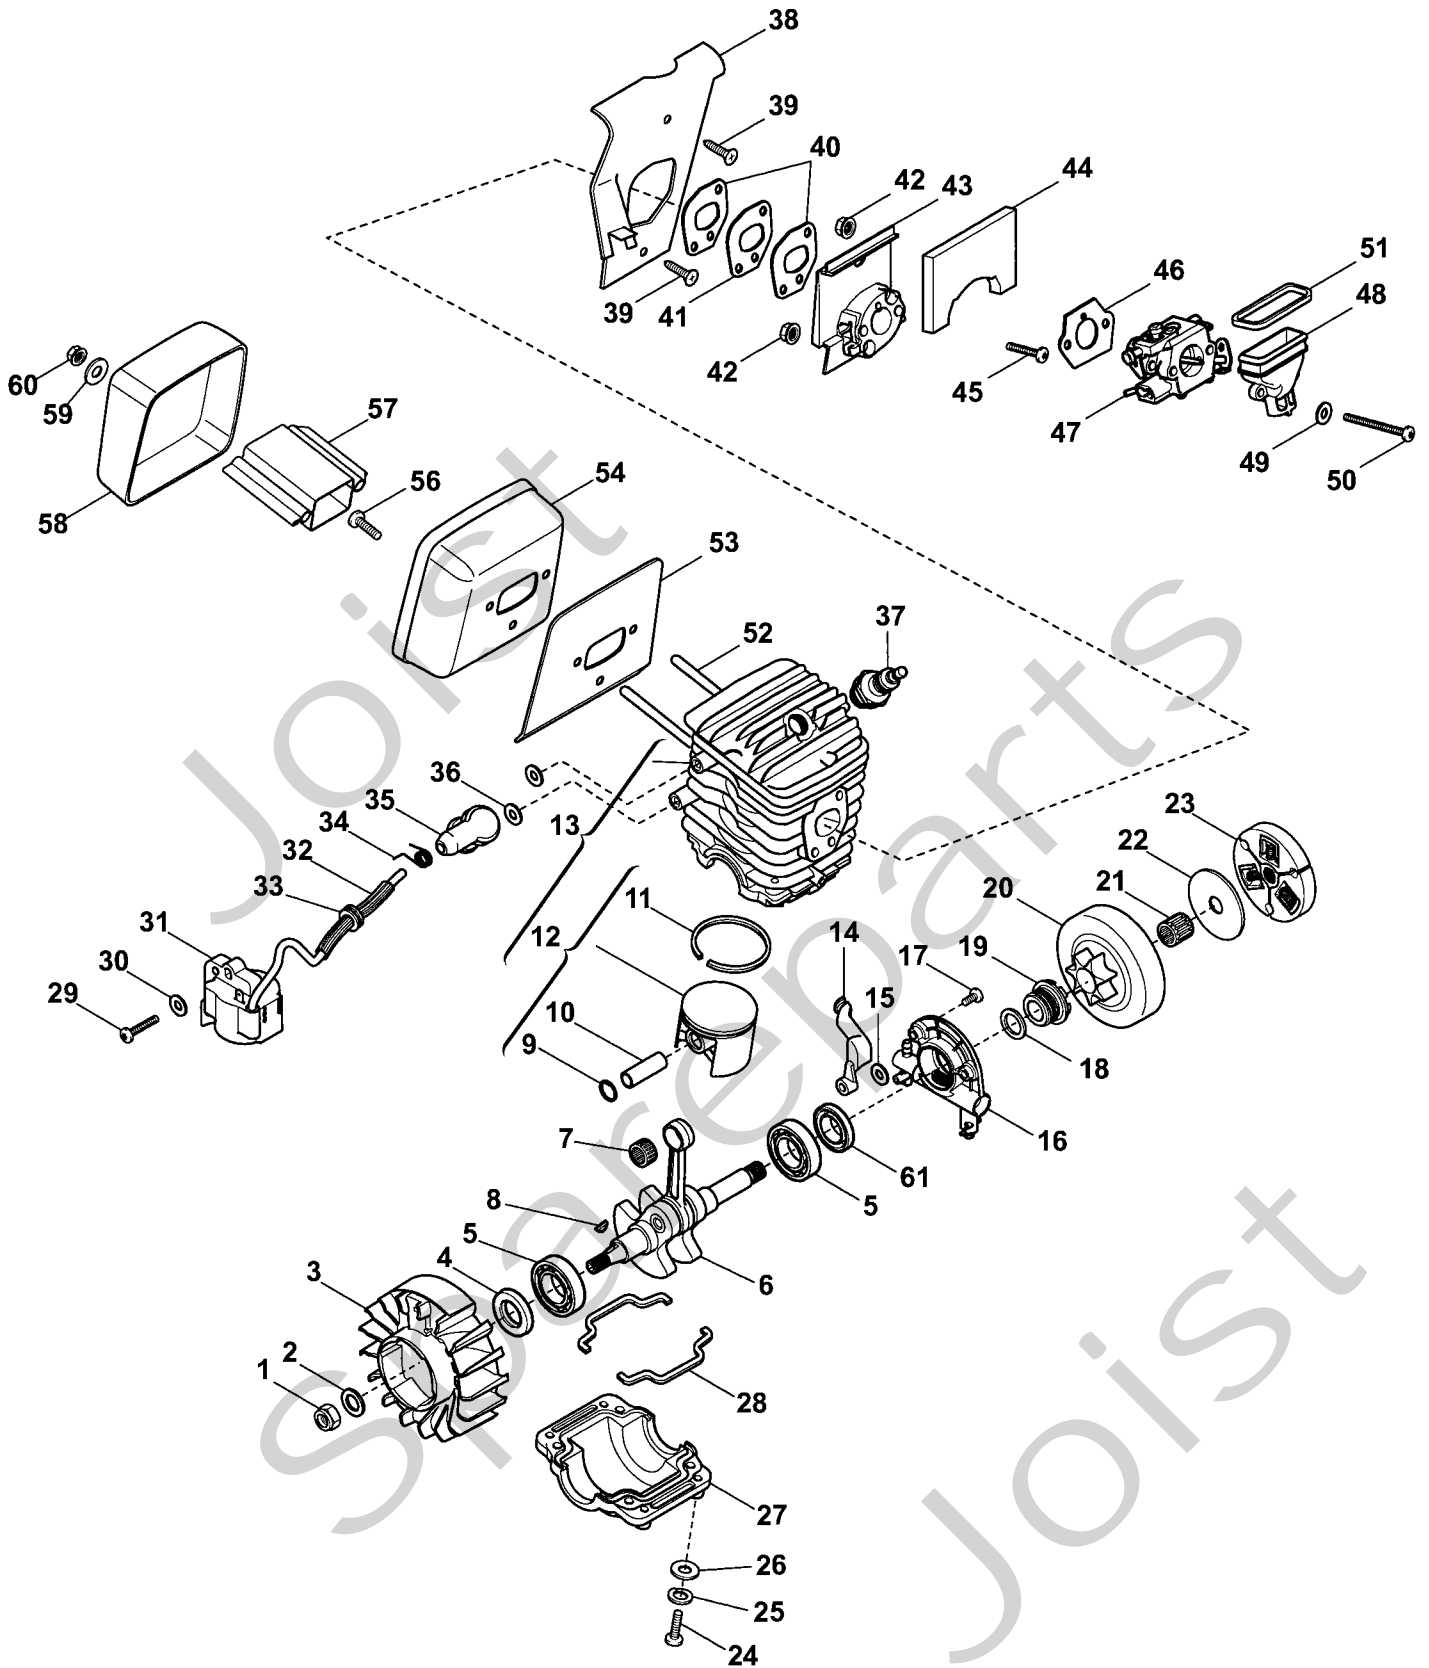 

Utgåva Issue		Bildnr Picture No		SP 440- SP 480 MOTOR		SP 440- SP 480 ENGINE		Sida Page	
2006- 12		1975A						372	
Pos. Fig.	Antal/Quantity			Art nr Part No	Benämning	Description	Sats Kit	Anmärkning Notes	
	4141 -11 -21	4148 -11 -31							
1	1	1		1911-3280-01	Mutter	Nut			
2	1	1		1911-3268-01	Bricka	Washer			
3	1	1		1911-3567-01	Svånghjul	Flywheel			
4	1	1		1911-4111-01	Tätningring	Seal ring			
5	2	2		1911-3033-01	Kullager	Ball bearing			
6	1	1		1911-4116-01	Vevaxel	Crankshaft		Inkl. pos 7	
7	1	1		1911-3041-01	• Nällager	• Needle bearing			
8	1	1		1911-3048-01	Svånghjulskil	Flywheel key			
9	2	2		1911-3068-01	•• Låsring	•• Lock ring			
10	1	1		1911-3305-01	•• Kolvbult	•• Piston pin			
11	1	1		1911-4107-01	•• Kolvring	•• Piston ring			
12	1	1		1911-4218-01	• Kolv kpl.	• Piston assy.		Inkl. pos 9 - 11	
13	1	1		1911-4210-01	Cylinder- kolv kpl.	Cylinder- piston assy.		Inkl. pos 12	
14	1	1		1911-4156-01	Gummihylsa	Grommet			
15	1	1		1911-3015-01	Bricka	Washer			
16	1	1		1911-4521-01	Oljepump	Oil pump			
17	2	2		1911-4109-01	Skruv	Screw			
18	1	1		1911-4182-01	Bricka	Washer			
19	1	1		1911-4195-01	Skruv	Screw			
20	1	1		1911-4204-01	Kopplingshjul	Clutch drum			
21	1	1		1911-4233-01	Nällager	Needle bearing			
22	1	1		1911-4183-01	Bricka	Washer			
23	1	1		1911-4211-01	Koppling	Clutch			
24	4	4		1911-3009-01	Skruv	Screw			
25	4	4		1911-3274-01	Bricka	Washer			
26	4	4		1911-3015-01	Bricka	Washer			
27	1	1		1911-4141-01	Stabilisator	Stabilizer			
28	2	2		1911-4158-01	Packning	Gasket			
29	2	2		1911-4226-01	Skruv	Screw			
30	2	2		1911-3017-01	Bricka	Washer			
31	1	1		1911-4119-01	Elektronikspole	Electronic coil			
32	1	1		1911-3128-01	Kabelhölje	Wire sheath			
33	1	1		1911-3116-01	Gummihylsa	Grommet			
34	1	1		1911-3421-01	Fjäder	Spring			
35	1	1		1911-3470-01	Tändstiftshatt	Spark plug cover			
36	2	2		1911-3271-01	Bricka	Washer			
37	1	1		9400-0258-00	Tändstift	Spark plug			
38	1	1		1911-4143-01	Luffledare	Air conveyor			
39	2	2		1911-4109-01	Skruv	Screw			
40	2	2		1911-4161-01	Packning	Gasket			
41	1	1		1911-4151-01	Värmskydd	Heat block			
42	2	2		1911-3032-01	Mutter	Nut			
43	1	1		1911-4138-01	Insugningsrör	Intake manifold			
44	1	1		1911-4186-01	Isolersvamp	Insulating sponge			
45	2	2		1911-3008-01	Skruv	Screw			
46	1	1		1911-4162-01	Packning	Gasket			
47	1	1		1911-4121-01	Förgasare kpl.	Carburettor assy		WT-727B	
48	1	1		1911-4139-01	Insugningsrör	Intake manifold			
49	2	2		1911-3015-01	Bricka	Washer			
50	2	2		1911-4227-01	Skruv	Screw			
51	1	1		1911-4159-01	Packning	Gasket			
52	2	2		1911-4196-01	Skruv	Screw			
53	1	1		1911-4163-01	Packning	Gasket			
54	1	1		1911-4422-01	Botten- ljuddämpare	Muffler bottom			
56	1	1		1911-3013-01	Skruv	Screw			
57	1	1		1911-4140-01	Innanmäte- ljuddämpare	Muffler inner duct			
58	1	1		1911-4144-01	Lock- ljuddämpare	Muffler cover			
59	2	2		1911-3015-01	Bricka	Washer			
60	2	2		1911-3022-01	Mutter	Nut			
61	1	1		1911-4112-01	Tätningring	Seal ring			

X