 
 
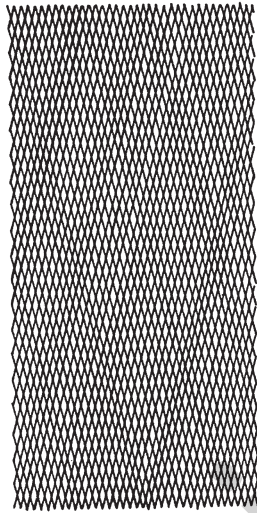 



Genuine Spare Parts

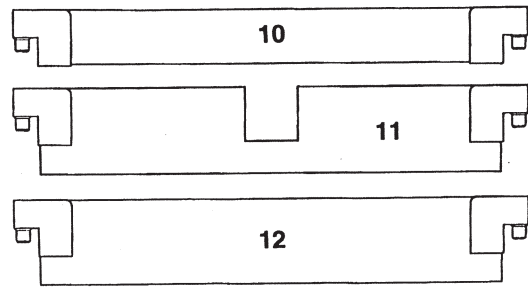


Joist
Spareparts
Joist

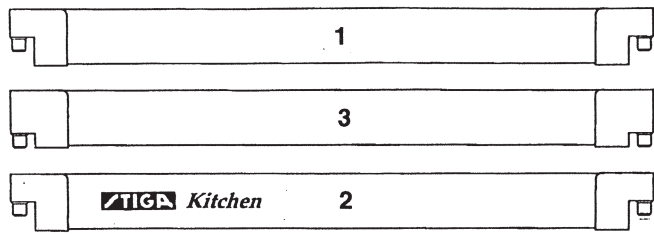

 33

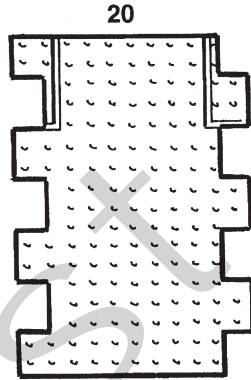

20

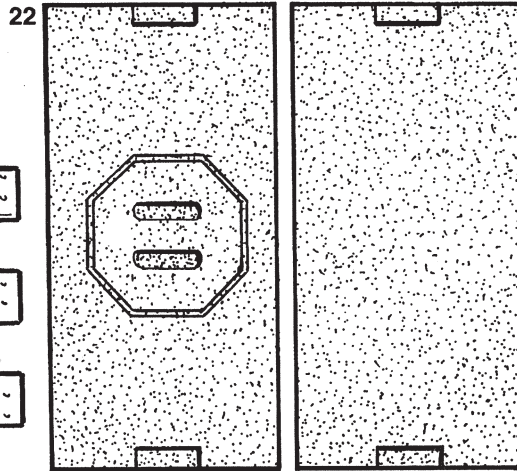 


22


21



 41




42

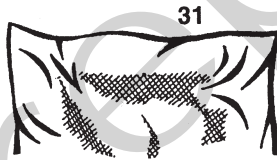 


31



 32




45

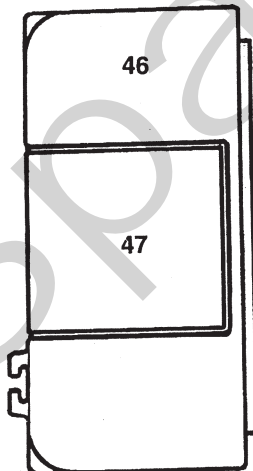 


46

 
47

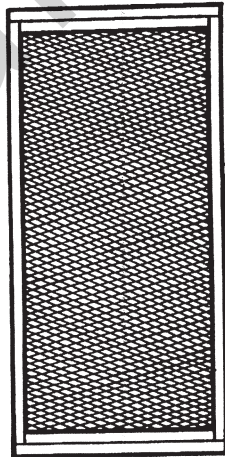

30

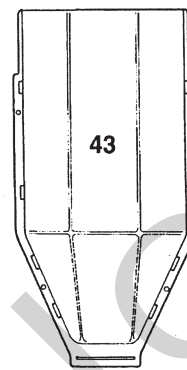 


43

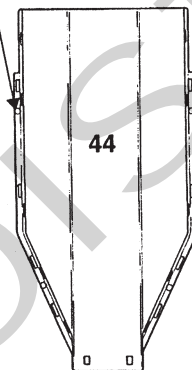 

44

Utgåva Issue		Bildnr Picture No		KITCHEN KOMPOSTBEHÅLLARE	KITCHEN COMPOST	Sida Page		
2005- 12		921A				236		
Pos. Fig.	Antal/Quantity			Art nr Part No	Benämning	Description	Sats Kit	Anmärkning Notes
	3111							
1	10			1717-0327-01	Bräda	Board		
2	2			1717-0328-01	Bräda (m. logo)	Board (w. logo)		
3	2			1717-0167-03	Bräda	Board		
10	11			1717-0329-01	Bräda	Board		
11	1			1717-0175-01	Bräda-bakre	Board-rear		
12	1			1717-0174-01	Bräda-främre	Board-front		
20	10			1717-0211-01	Sidoisolering	Side insulator		
21	2			1717-0212-01	Toppisolering	Top insulator		
22	1			1717-0213-01	Toppisolering	Top insulator		
30	2			1717-0207-01	Jordfilter	Earth filter		
31	2			1717-0218-01	Matta	Mat		
32	1			1717-0208-01	Stöt	Plunger		
33	3			1717-0376-01	Nät	Net		
41	4			1717-0203-01	Jordspett	Earth nail		
42	2			1717-0288-01	Jordspett	Earth nail		
43	1			1717-0264-01	Tratt-främre	Hopper-front		
44	1			1717-0265-01	Tratt-bakre	Hopper-rear		
45	4			9836-9516-12	Skruv	Screw		
46	1			1717-0266-01	Lock	Cover		
47	1			1717-0267-01	Lucka	Flap		

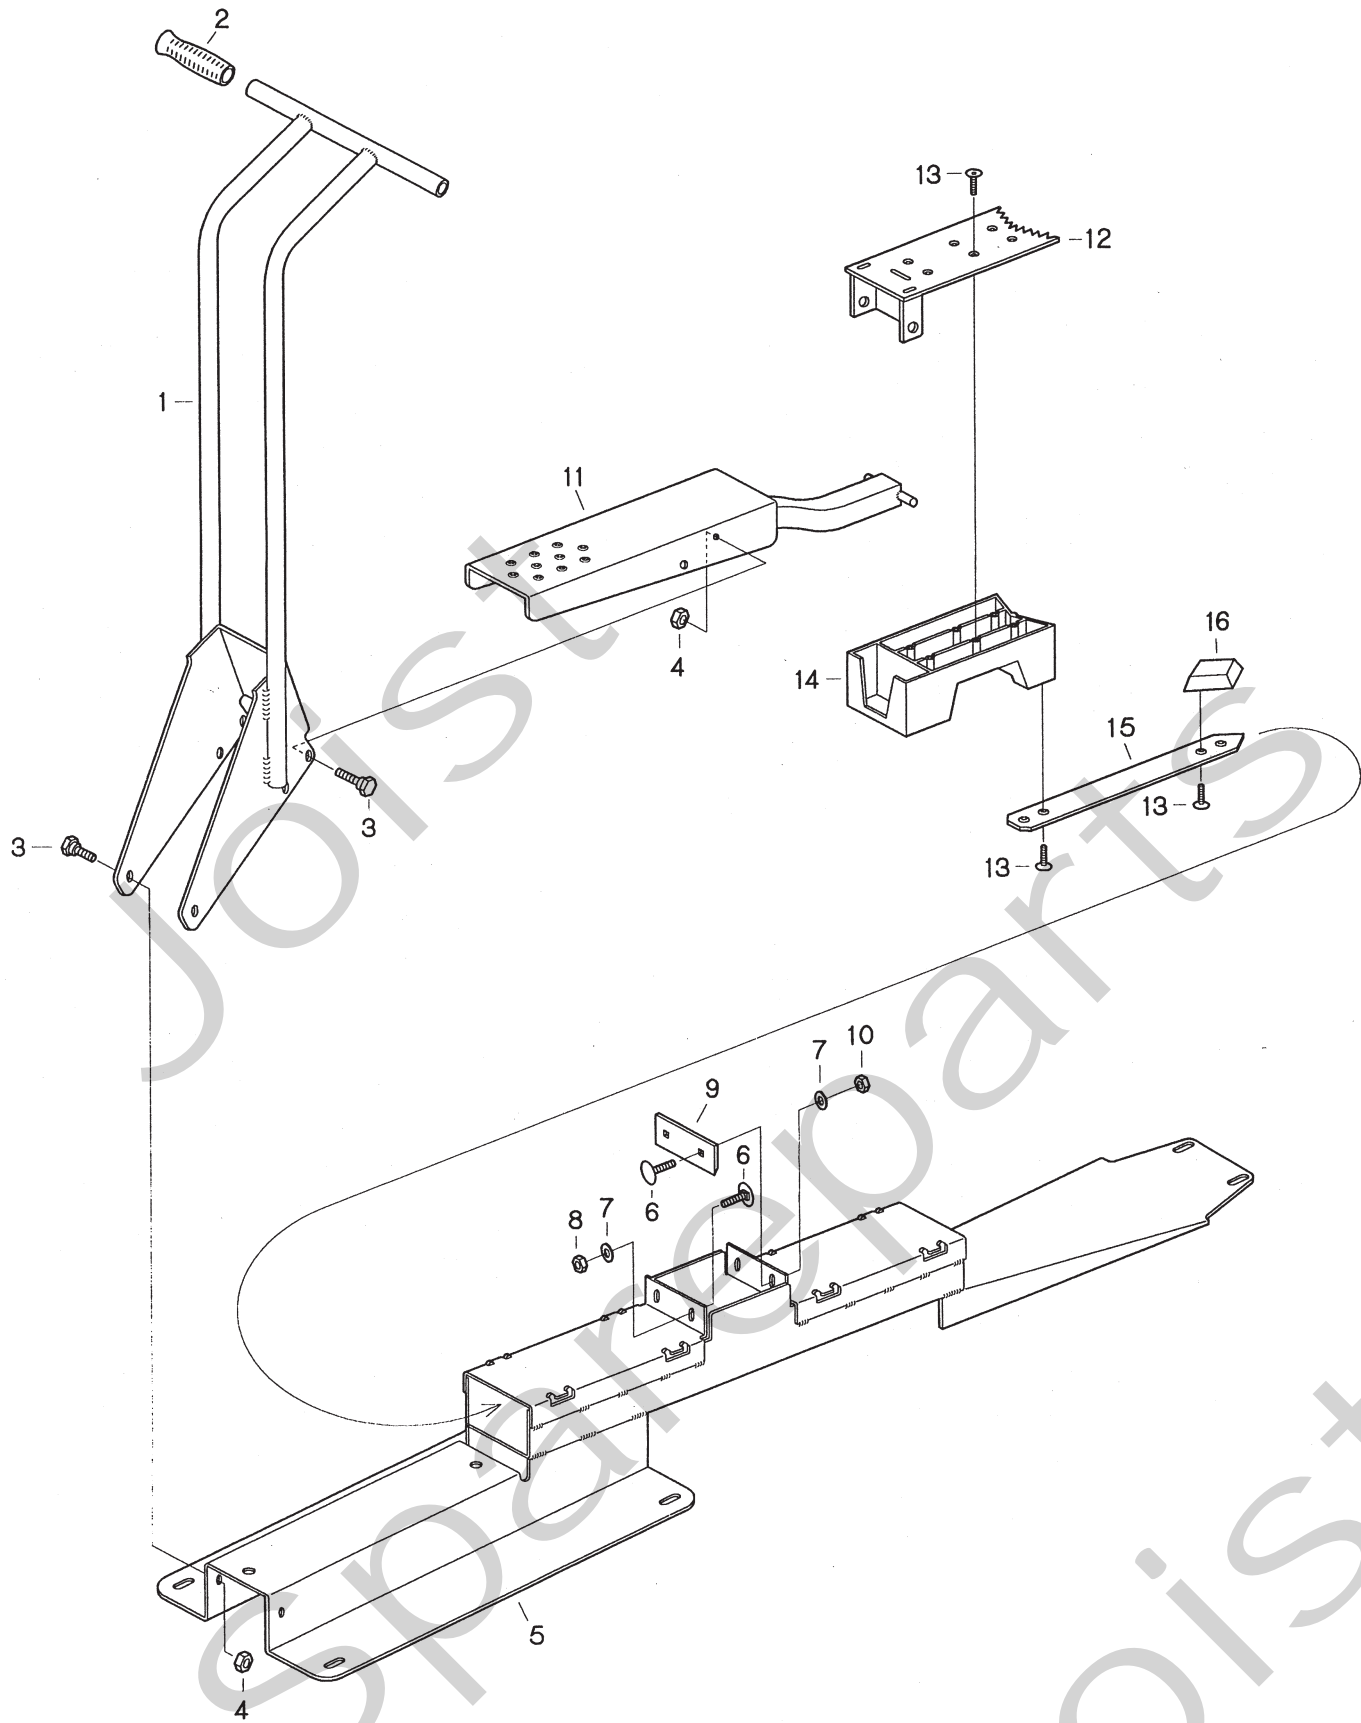 

STIGA
1002
 SPARE PARTS

Utgåva Issue		Bildnr Picture No		KITCHEN KOMPOSTBEHÅLLARE INMATNINGSANORDNING		KITCHEN COMPOST FEEDING UNIT		Sida Page	
2005- 12		1002						238	
Pos. Fig.	Antal/Quantity			Art nr Part No	Benämning	Description	Sats Kit	Anmärkning Notes	
	3111								
0	1			1717-0247-01	Inmatningsenhet kpl.....	Feeder assy			
1	1			1717-0243-01	Styre	Handlebar			
2	2			9403-0114-70	Handtag	Handle			
3	4			1134-0240-00	• Ansatsskruv	• Shoulder screw			
4	4			9747-0831-02	• Mutter	• Lock nut			
5	1			1717-0248-01	• Rör	• Tube			
6	4			9897-0616-16	• Vagnsbult	• Carriage bolt			
7	4			9699-0060-02	• Planbricka	• Flat washer			
8	2			9739-0631-22	• Mutter	• Nut			
9	1			1717-0253-01	• Kniv (fast)	• Blade (fixed)			
10	2			9747-0631-02	• Låsmutter	• Lock nut			
11	1			1717-0257-01	• Pedal	• Pedal			
12	1			1717-0254-01	• Kniv (rörlig)	• Blade (movable)			
13	10			9831-9520-11	• Skruv	• Screw			
14	1			1717-0322-01	• Kolv	• Piston			
15	1			1717-0375-01	• Fäste	• Holder			
16	1			1717-0262-01	• Prisma	• Prism			