


Genuine Spare Parts




Spareparts
Joist

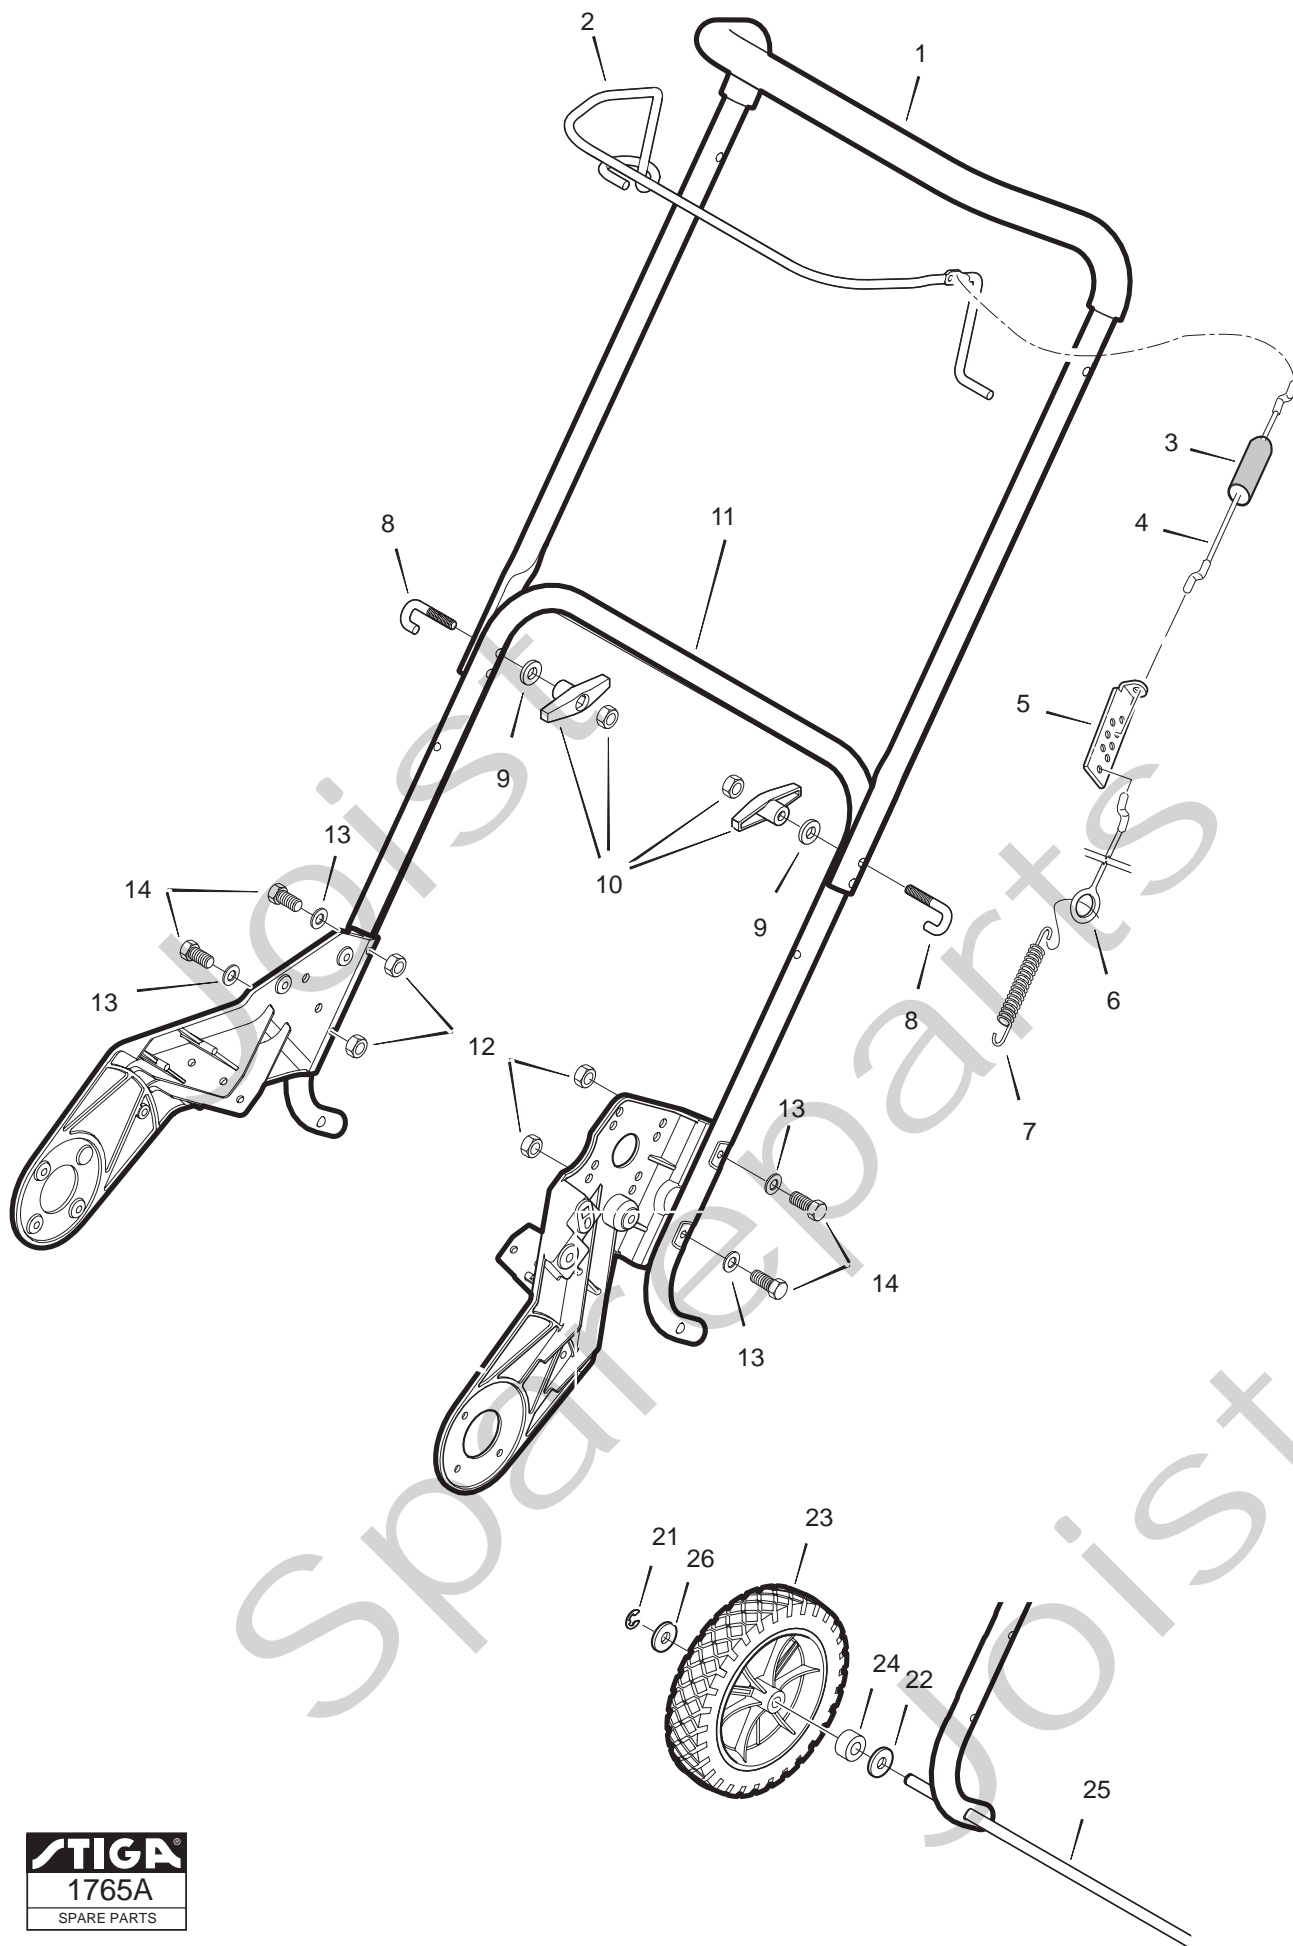


Utgåva Issue		Bildnr Picture No		SNOW BREEZE ES STYRE HJUL		SNOW BREEZE ES HANDLE WHEELS		Sida Page	
2006- 14		1765A						14	
Pos. Fig.	Antal/Quantity				Art nr Part No	Benämning	Description	Sats Kit	Anmärkning Notes
	2826 -27								
1	1				1812-1989-01 Styre-överdel	Handle- upper.....			
2	1				1812-1961-01 Reglagebygel.....	Control bail			
3	1				1133-0968-01 Wirehylsa.....	Clutch spring boot			
4	1				1812-2002-01 Reglagewire.....	Control cable.....			
5	1				1133-0977-01 Wirefäste	Cable adjust bracket.....			
6	1				1812-1883-01 Reglagewire- nedre.....	Control cable- lower			
7	1				1812-1670-01 Fjäder.....	Spring			
8	2				1812-1973-01 U- bult.....	U- bolt			
9	2				1133-0933-01 Kupad bricka.....	Formed washer			
10	2				1812-1928-01 Lås ratt	Wing knob.....			
11	1				1812-1960-01 Styre- underdel	Handle- lower			
12	4				1812-0812-01 Låsmutter	Locking nut			
13	4				9699-0028-02 Planbricka.....	Flat washer.....			
14	4				9988-3532-12 Skruv	Screw			
21	2				1133-1021-01 Låsring	Retaining ring			
22	2				9699-0035-02 Planbricka.....	Flat washer.....			
23	2				1812-1455-01 Hjul.....	Wheel.....			
24	2				1812-1922-01 Distans	Spacer sleeve.....			
25	1				1812-1975-01 Hjulaxel.....	Axle rod.....			
26	2				9699-0030-02 Planbricka.....	Flat washer.....			
99	1				8218-2219-70 Bruksanvisning	Owner's manual			Ej ill/not ill.

X

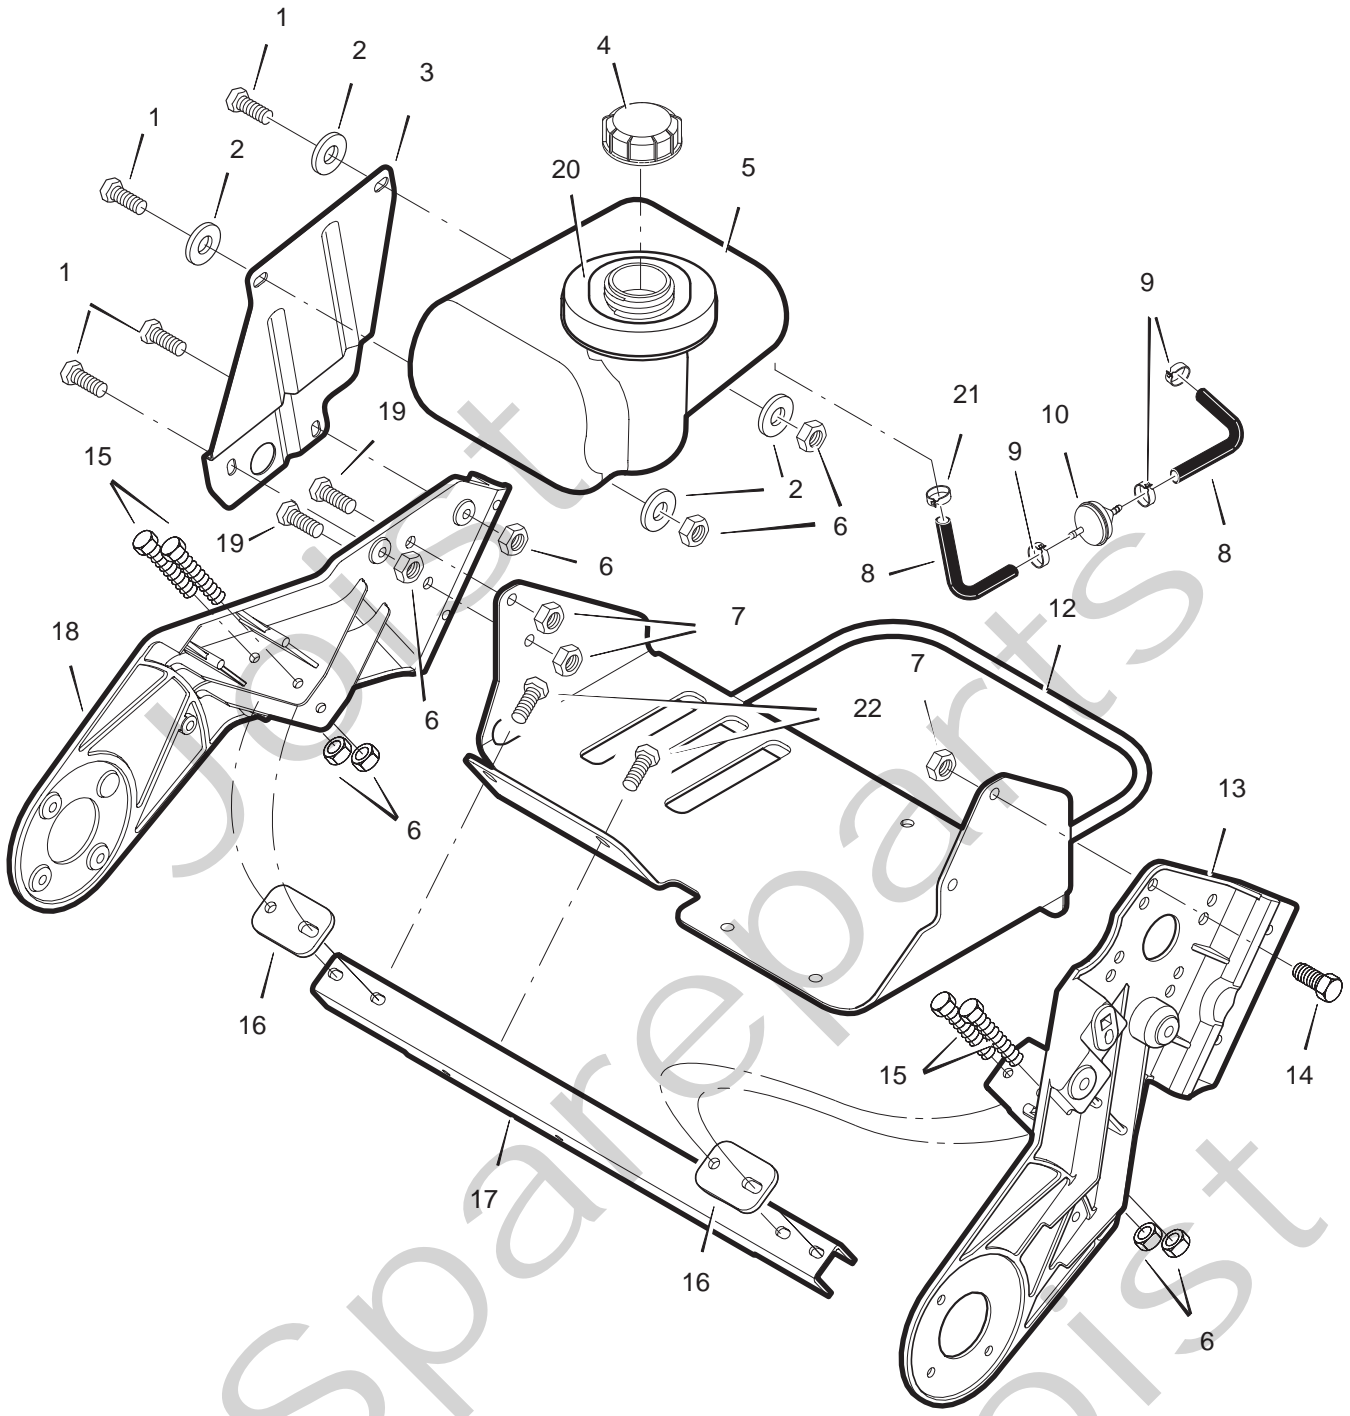


Utgåva Issue		Bildnr Picture No		SNOW BREEZE ES RAM BRÄNSLETANK		SNOW BREEZE ES FRAME FUEL TANK		Sida Page	
2006-14		1766A						16	
Pos. Fig.	Antal/Quantity				Art nr Part No	Benämning	Description	Sats Kit	Anmärkning Notes
	2826 -27								
1	4			9988-3519-16	Skruv.....	Screw.....			
2	4			9699-0028-02	Planbricka.....	Flat washer.....			
3	1			1812-2055-01	Fäste.....	Bracket.....			
4	1			1812-1906-01	Tanklock.....	Fuel tank cap.....			
5	1			1812-1971-01	Bränsletank.....	Fuel tank.....			
6	8			1812-0812-01	Låsmutter.....	Locking nut.....			
7	3			1812-0811-01	Låsmutter.....	Locking nut.....			
8	2			1812-1998-01	Bränsleslang.....	Fuel line tubing.....			
9	3			1812-1487-01	Slangklämma.....	Fuel line clamp.....			
10	1			1812-1907-01	Bränslefilter.....	Fuel line filter.....			
12	1			1812-1954-01	Motorvagg.....	Engine cradle.....			
13	1			1812-1968-01	Ram- vä.....	Frame- LH.....			
14	1			9988-3616-16	Skruv.....	Screw.....			
15	4			9988-3551-12	Skruv.....	Screw.....			
16	2			1812-1894-01	Platta.....	Bolting support plate.....			
17	1			1812-1955-01	Ramstöd.....	Frame support.....			
18	1			1812-1967-01	Ram- hö.....	Frame- RH.....			
19	2			9988-3619-16	Skruv.....	Screw.....			
20	1			1812-1943-01	Skumplastring.....	Foam ring.....			
21	1			1133-0070-01	Slangklämma.....	Fuel line clamp.....			
22	2			9988-3516-16	Skruv.....	Screw.....			

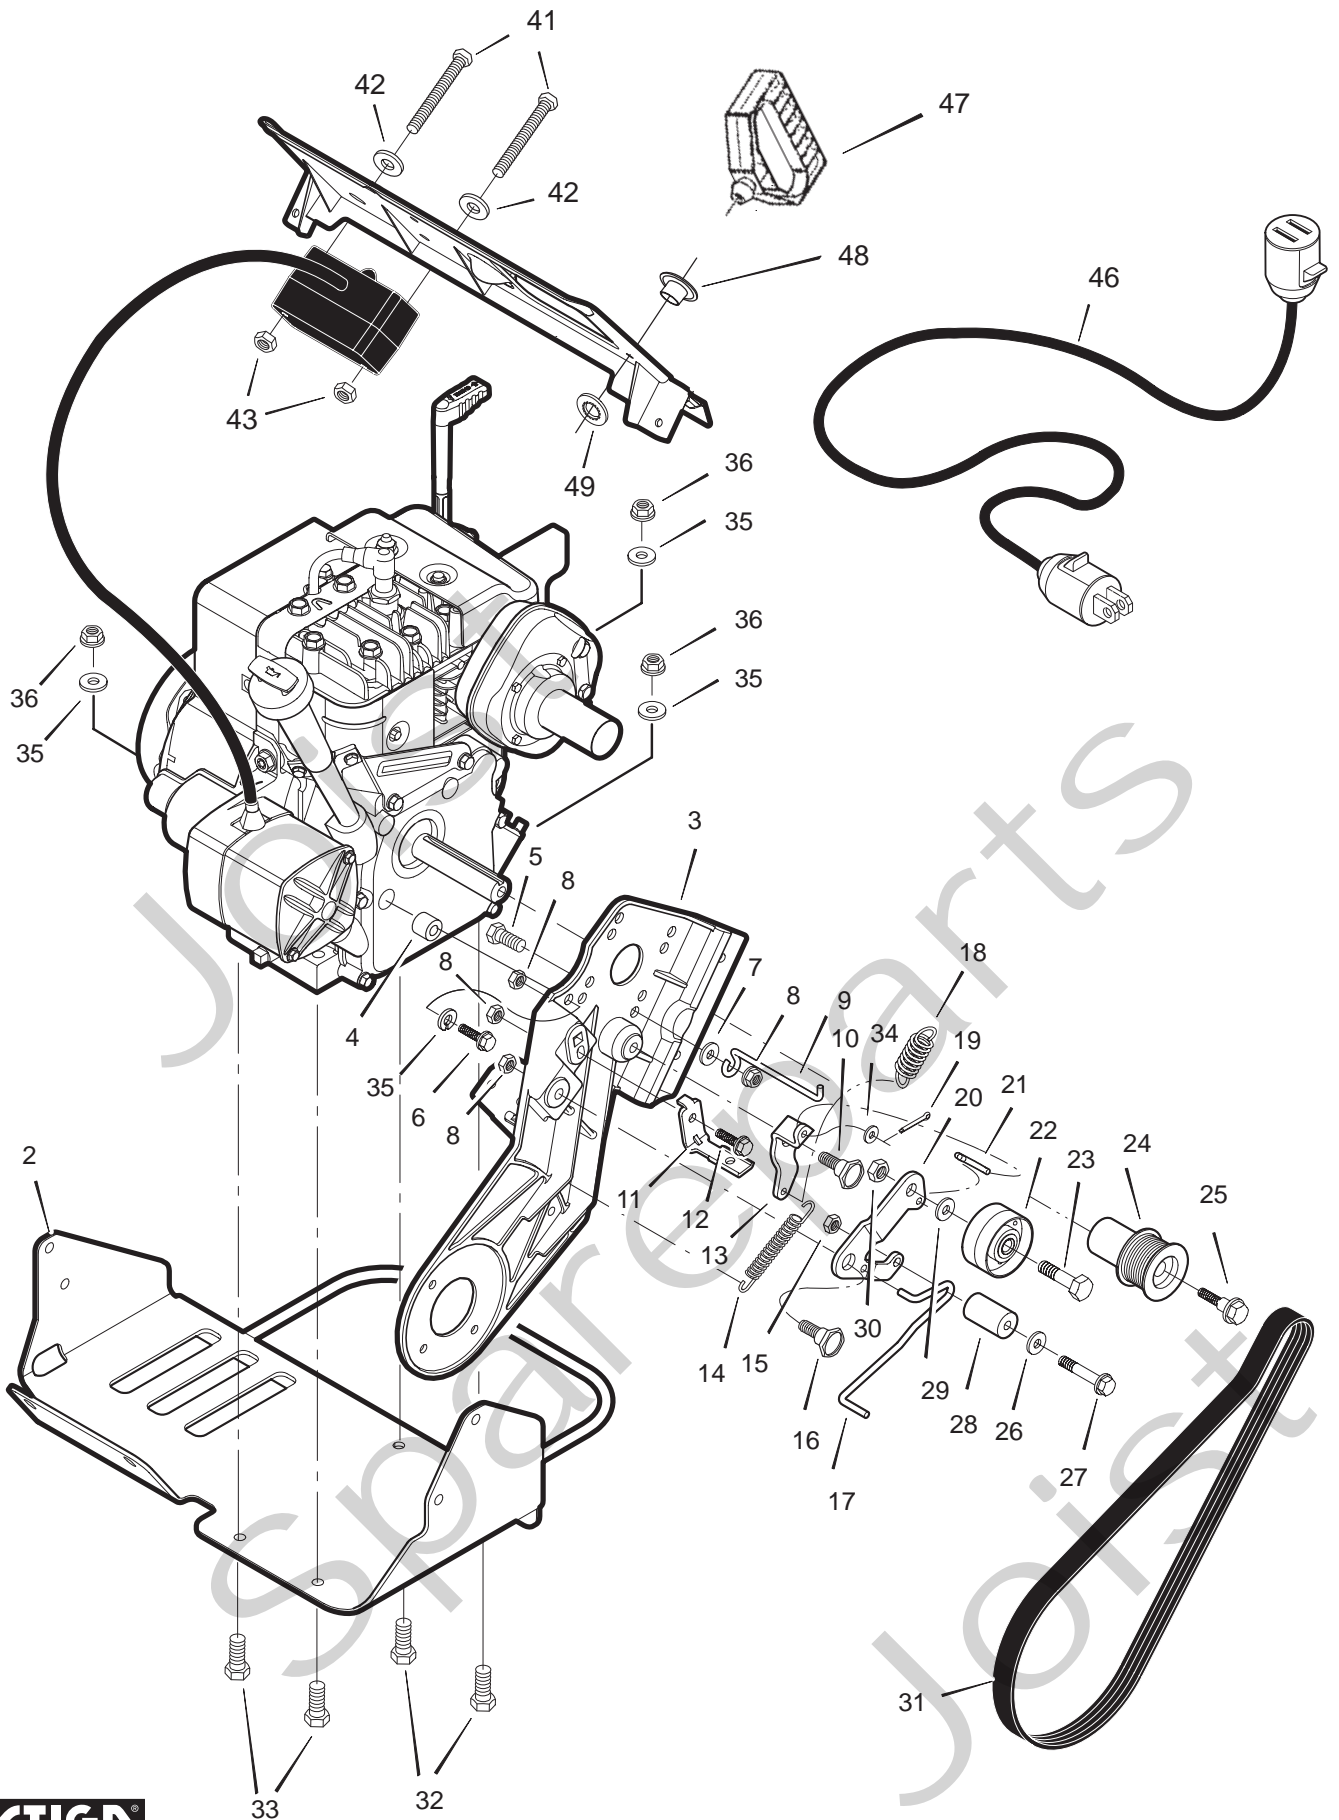


Utgåva Issue 2006-14		Bildnr Picture No 1767A		SNOW BREEZE ES REMTRANSMISSION MOTOR		SNOW BREEZE ES BELT TRANSMISSION ENGINE		Sida Page 18	
Pos. Fig.	Antal/Quantity				Art nr Part No	Benämning	Description	Sats Kit	Anmärkning Notes
	2826								
2	1			1812-1954-01	Motorvagg	Engine cradle			
3	1			1812-1968-01	Ram- vä	Frame- LH			
4	4			1812-1997-01	Avvibrering	Antivibration mount			
5	1			9988-3625-16	Skruv	Screw			
6	4			1812-1918-01	Skruv	Screw			
7	1			9699-0029-02	Planbricka	Flat washer			
8	4			1812-0811-01	Låsmutter	Locking nut			
9	1			1812-1893-01	Remstyrning	Belt guide			
10	1			1812-1829-01	Ansatsbult	Shoulder bolt			
11	1			1812-1891-01	Brombelägg	Brake pad			
12	1			9988-3516-16	Skruv	Screw			
13	1			1812-1882-01	Spännarm	Idler pivot arm			
14	1			1812-1885-01	Fjäder	Spring			
15	1			1812-0812-01	Låsmutter	Locking nut			
16	1			1812-1829-01	Ansatsbult	Shoulder bolt			
17	1			1812-1896-01	Bromsstång	Brake wire			
18	1			1812-1670-01	Fjäder	Spring			
19	1			1812-1879-01	Låsnål	Cotter pin			
20	1			1812-1888-01	Spännarm	Idler bracket arm			
21	1			1812-1881-01	Länkstång	Clutch linkage rod			
22	1			1133-0936-01	Spännrulle	Idler pulley			
23	1			9988-3738-12	Skruv	Screw			
24	1			1812-1977-01	Motorremskiva	Engine belt pulley			
25	1			1812-1976-01	Bult	Bolt			
26	1			9699-0028-02	Planbricka	Flat washer			
27	1			9988-3551-12	Skruv	Screw			
28	1			1812-1897-01	Rulle	Pinch roller			
29	1			1812-1880-01	Planbricka	Flat washer			
30	1			9743-3721-32	Mutter	Nut			
31	1			1812-1878-01	Drivrem	Drive belt			
32	2			9988-3651-12	Skruv	Screw			
33	2			9988-3725-16	Skruv	Screw			
34	1			9699-0079-02	Bricka	Washer			
35	8			9683-0030-02	Låsbricka	Lock washer			
36	4			9795-3631-02	Mutter	Nut			
41	2			1812-1923-01	Skruv	Screw			
42	2			9699-0079-02	Bricka	Washer			
43	2			1812-1921-01	Mutter	Nut			
46	1			1812-1615-01	Förlängningssladd	Extension cord			
47	1			1812-1995-01	Handtag	Grip			
48	1			1812-2123-01	Linhylsa	Rope grommet			
49	1			1812-2124-01	Bricka	Washer			

X
X

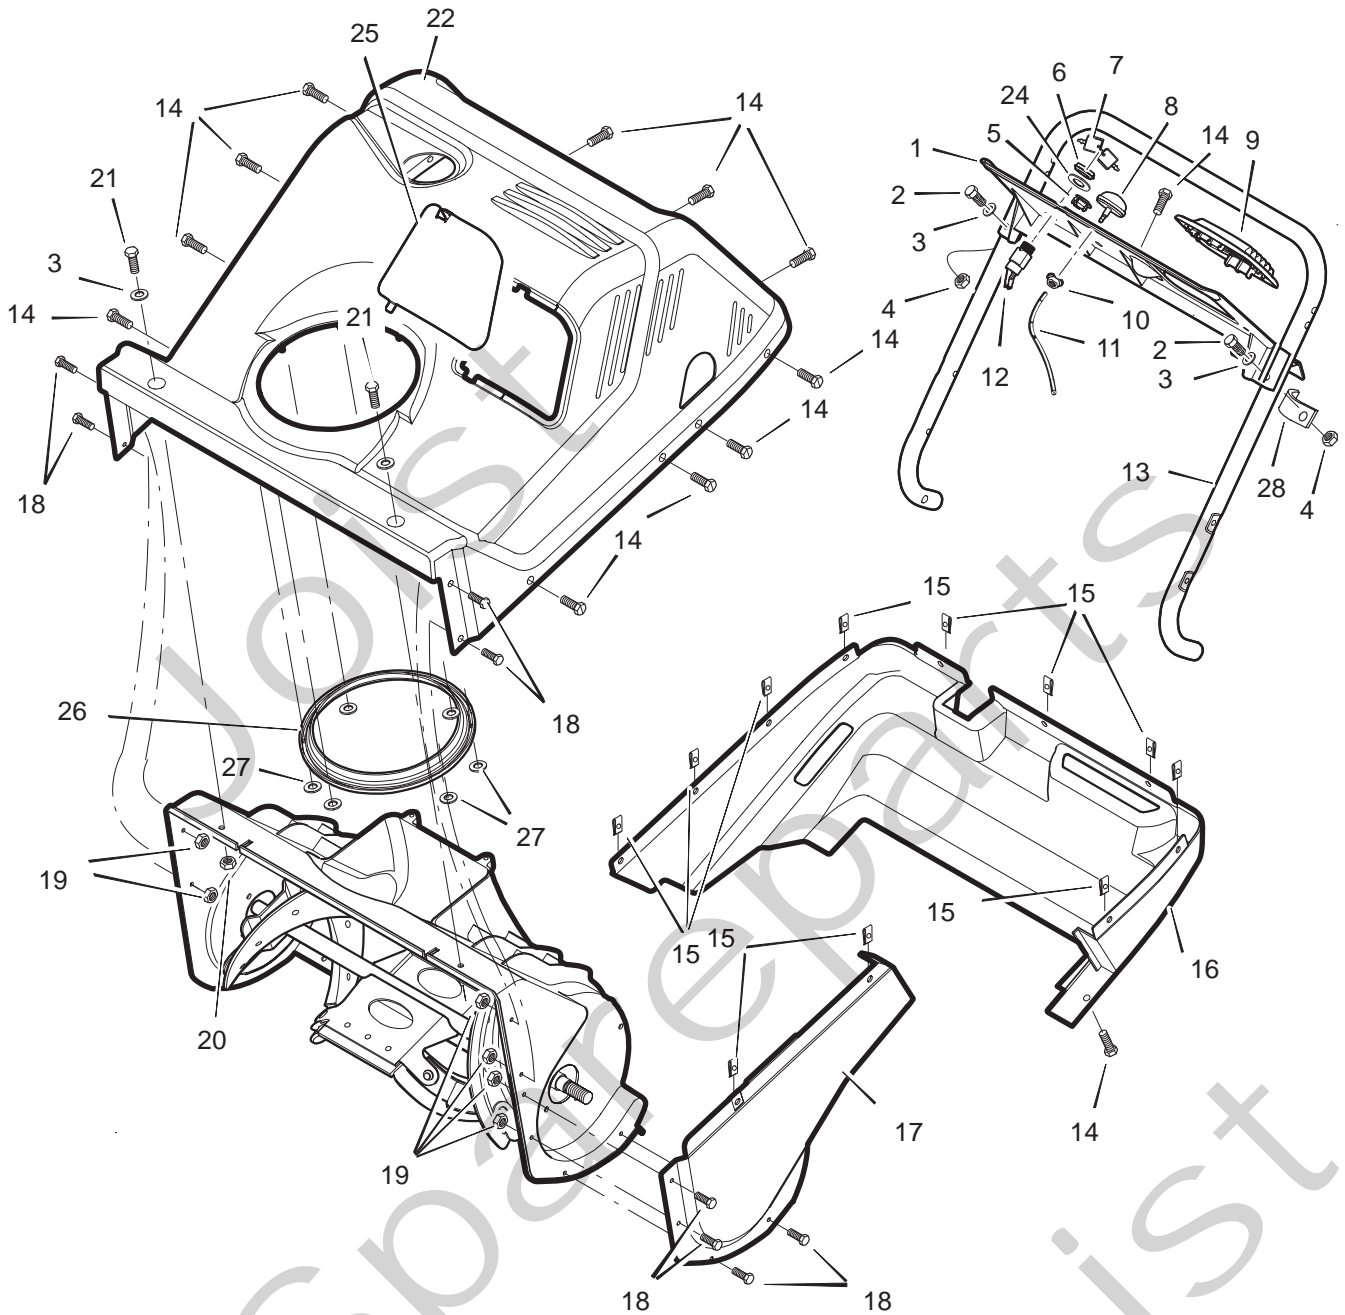


Utgåva Issue		Bildnr Picture No		SNOW BREEZE ES KÅPOR	SNOW BREEZE ES COVERS	Sida Page			
2006- 14		1768A				20			
Pos. Fig.	Antal/Quantity				Art nr Part No	Benämning	Description	Sats Kit	Anmärkning Notes
	2826 -27								
1	1			1812-1962-01	Reglagepanel	Control panel.....			
2	2			9988-3532-12	Skruv	Screw			
3	4			9699-0028-02	Planbricka	Flat washer			
4	2			1812-0812-01	Låsmutter	Locking nut			
5	1			1812-1970-01	Bussning	Chute crank bushing			
6	1			1134-2852-01	Mutter	Nut			
7	1			1134-2848-01	Tändningsnyckel	Ignition key			
8	1			1812-1905-01	Primernippel	Primer bulb			
9	1			1812-1974-01	Lock	Cover			
10	1			9795-3531-02	Mutter	Nut			
11	1			1812-1496-01	Primerslang	Primer hose			
12	1			1133-0956-01	Tändningslås	Ignition switch			
13	1			1812-1960-01	Styre- underdel	Handle- lower			
14	13			1133-0955-01	Skruv	Screw			
15	11			1133-1026-01	Snabbmutter	Speed nut			
16	1			1812-1965-01	Kåpa- undre	Bottom cover			
17	1			1812-1996-01	Remskydd	Belt cover			
18	8			1812-0959-01	Bult	Bolt			
19	6			1812-0630-01	Mutter	Nut			
20	2			1812-1758-01	Mutter	Nut			
21	2			9988-3516-16	Skruv	Screw			
22	1			1812-1993-01	Kåpa- övre	Top cover			
24	1			1134-2853-01	Bricka	Washer			
25	1			1812-1966-01	Lock	Oil access cover			
26	1			1812-1987-01	Packning	Gasket			
27	6			1812-1916-01	Snabbmutter	Push nut			
28	1			1812-2110-01	Klämma	Cable clamp			

X

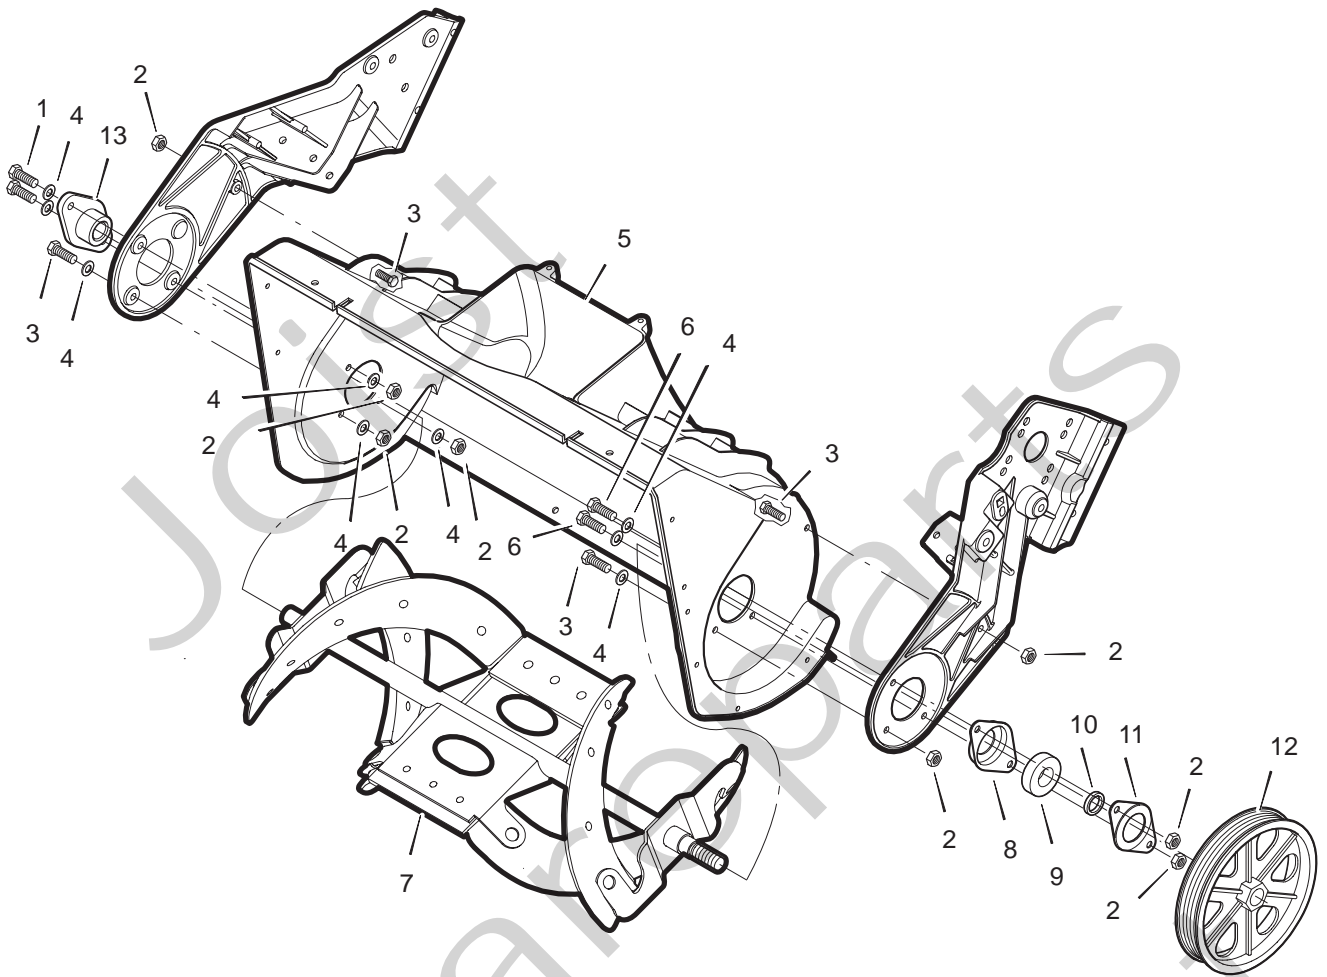

Utgåva Issue		Bildnr Picture No		SNOW BREEZE ES SNÖSKRUV		SNOW BREEZE ES AUGER		Sida Page	
2006- 14		1769						22	
Pos. Fig.	Antal/Quantity				Art nr Part No	Benämning	Description	Sats Kit	Anmärkning Notes
	2826 -27								
1	2				9988-3525-16 Skruv.....	Screw.....			
2	8				1812-0812-01 Låsmutter.....	Locking nut.....			
3	3				9988-3519-16 Skruv.....	Screw.....			
4	10				9699-0028-02 Planbricka.....	Flat washer.....			
5	1				1812-1956-01 Snöskruvhus.....	Auger housing.....			
6	2				9988-3516-16 Skruv.....	Screw.....			
7	1				1812-1984-01 Snöskruv.....	Auger.....			
8	1				1812-1925-01 Lagerhållare.....	Bearing retainer.....			
9	1				1812-1383-01 Kullager.....	Ball bearing.....			
10	1				1812-1895-01 Distans.....	Sleeve spacer.....			
11	1				1133-1000-01 Lagerhållare.....	Retainer plate.....			
12	1				1812-1889-01 Remskiva.....	Pulley.....			
13	1				1133-1019-01 Flänslager.....	Flange bearing.....			

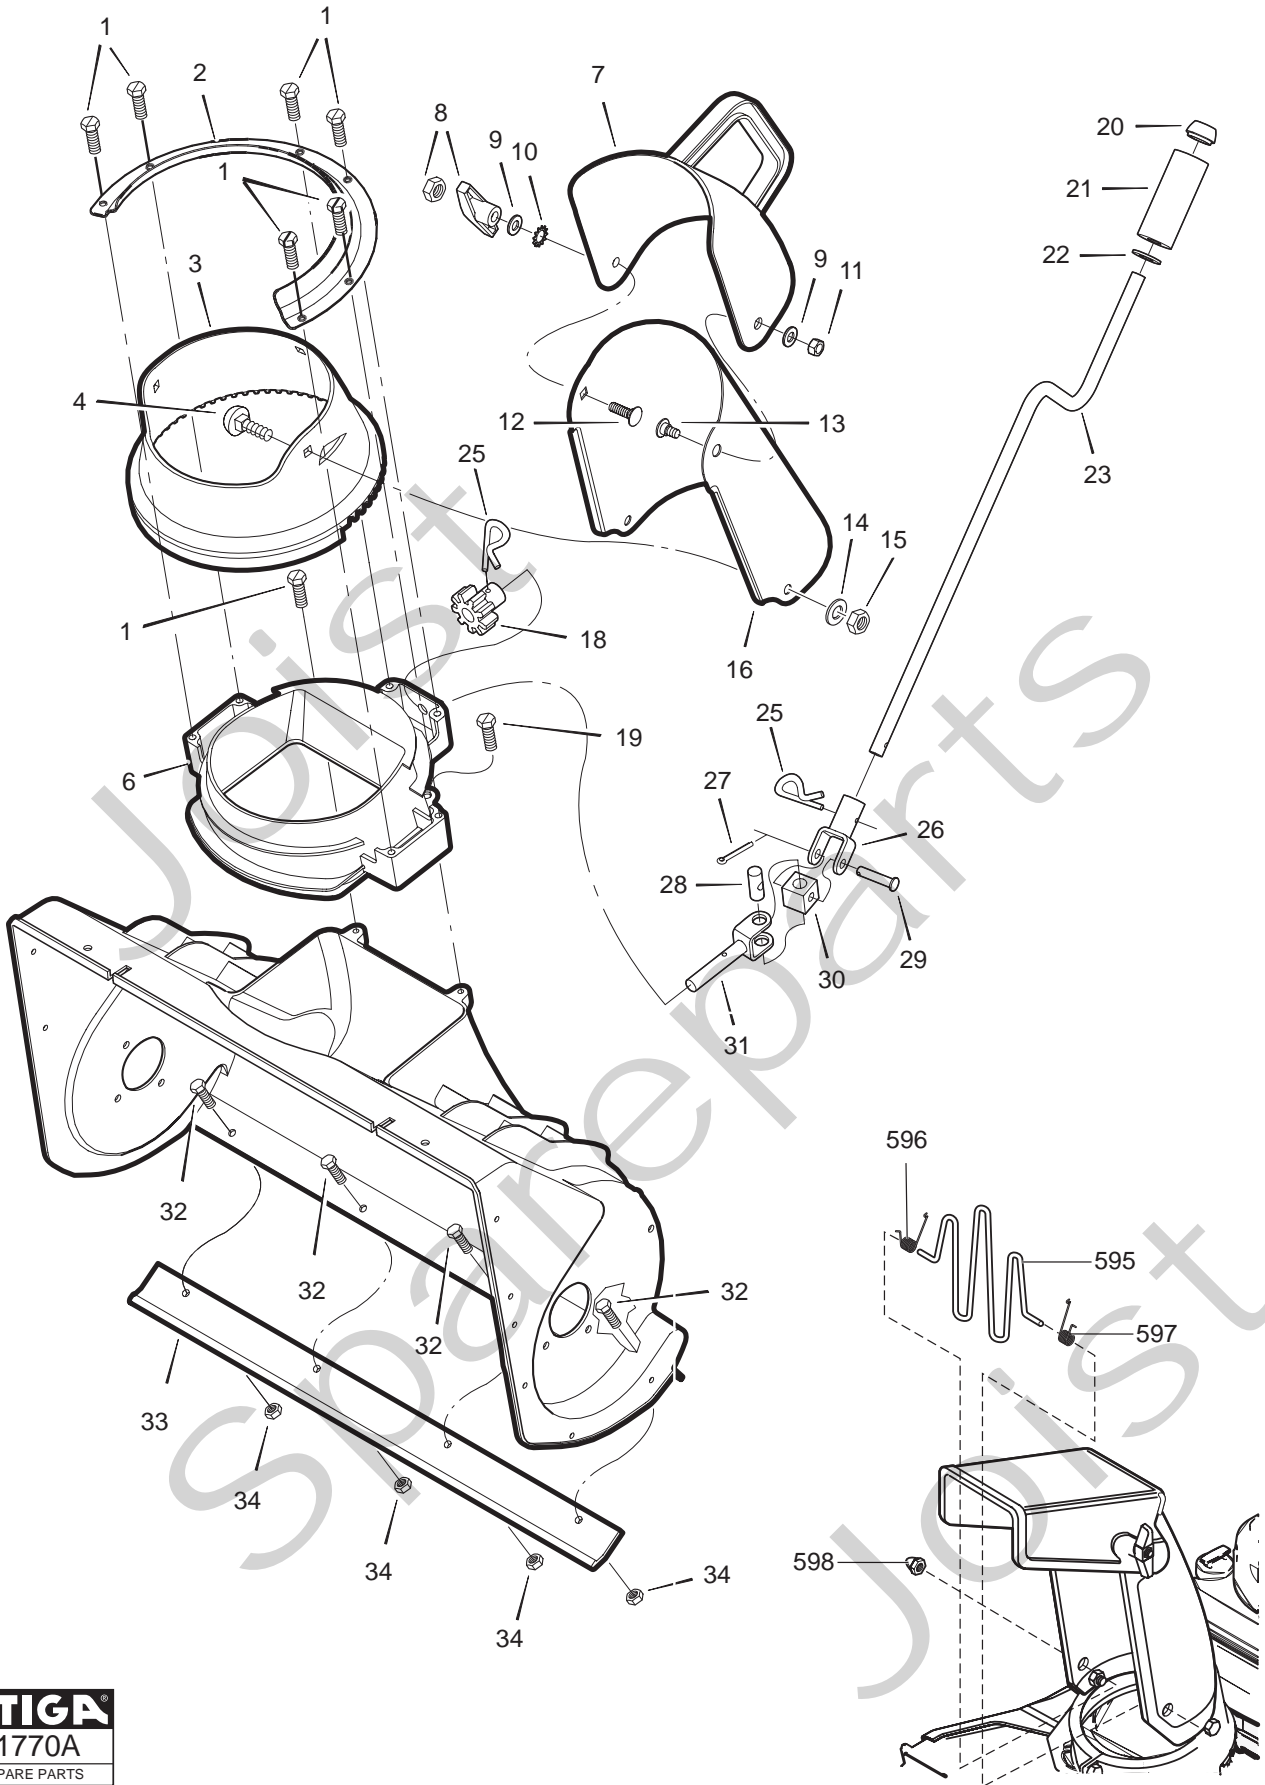

Utgåva Issue 2006- 14		Bildnr Picture No 1770A		SNOW BREEZE ES UTKAST INSTÄLLINGSVEV		SNOW BREEZE ES DISCHARGE CHUTE CHUTE ROD		Sida Page 24	
Pos. Fig.	Antal/Quantity				Art nr Part No	Benämning	Description	Sats Kit	Anmärkning Notes
	2826								
1	7				1133-0955-01 Skruv.....	Screw.....			
2	1				1812-2057-01 Hållare	Chute ring retainer			
3	1				1812-2058-01 Utkastring.....	Chute ring			
4	2				9899-3622-16 Skruv.....	Screw.....			
6	1				1812-1953-01 Fäste- utkast	Chute neck.....			
7	1				1812-1979-01 Utkastskärm	Upper chute			
8	1				1812-1928-01 Låsraff	Wing knob.....			
9	2				9699-0029-02 Planbricka.....	Flat washer.....			
10	1				9678-0010-02 Låsbricka.....	Starlock.....			
11	1				1812-0811-01 Låsmutter	Locking nut.....			
12	1				1812-1678-01 Vagnsbult	Carriage bolt			
13	1				1812-1978-01 Bult.....	Bolt			
14	2				9699-0035-02 Planbricka.....	Flat washer.....			
15	2				9743-3621-32 Mutter.....	Nut.....			
16	1				1812-1994-01 Utkaströr	Lower chute			
18	1				1812-1706-01 Drev.....	Gear.....			
19	2				1133-0955-01 Skruv.....	Screw.....			
20	1				1812-0396-01 Låsning.....	Retainer			
21	1				1133-0959-01 Handtag.....	Knob			
22	1				9699-0035-02 Planbricka.....	Flat washer.....			
23	1				1812-2122-01 Inställn.vev	Chute rotation crank.....			
25	2				1812-1791-01 Låsnål.....	Hair pin			
26	1				1812-1708-01 Gaffel.....	Yoke adapter			
27	1				9599-0033-00 Saxsprint	Split pin.....			
28	1				1812-1316-01 Axel	Universal pin.....			
29	1				1812-1318-01 Sprint.....	Clevis pin			
30	1				1812-1317-01 Ledknut	Universal pivot block.....			
31	1				1812-1969-01 Gaffelstång	Crank rod			
32	4				9988-3519-16 Skruv.....	Screw.....			
33	1				1812-1963-01 Skrapskär	Scraper blade.....			
34	4				1812-1758-01 Mutter.....	Nut.....			
595	1				1133-0970-01 Utkastskydd.....	Wire chute guide.....			
596	1				1133-0944-01 Fjäder.....	Torsion chute spring			
597	1				1133-0945-01 Fjäder.....	Torsion chute spring			
598	2				1133-0937-01 Hattlåsning	Acorn nut			

X