


Genuine Spare Parts



Joist
Spareparts
Joist

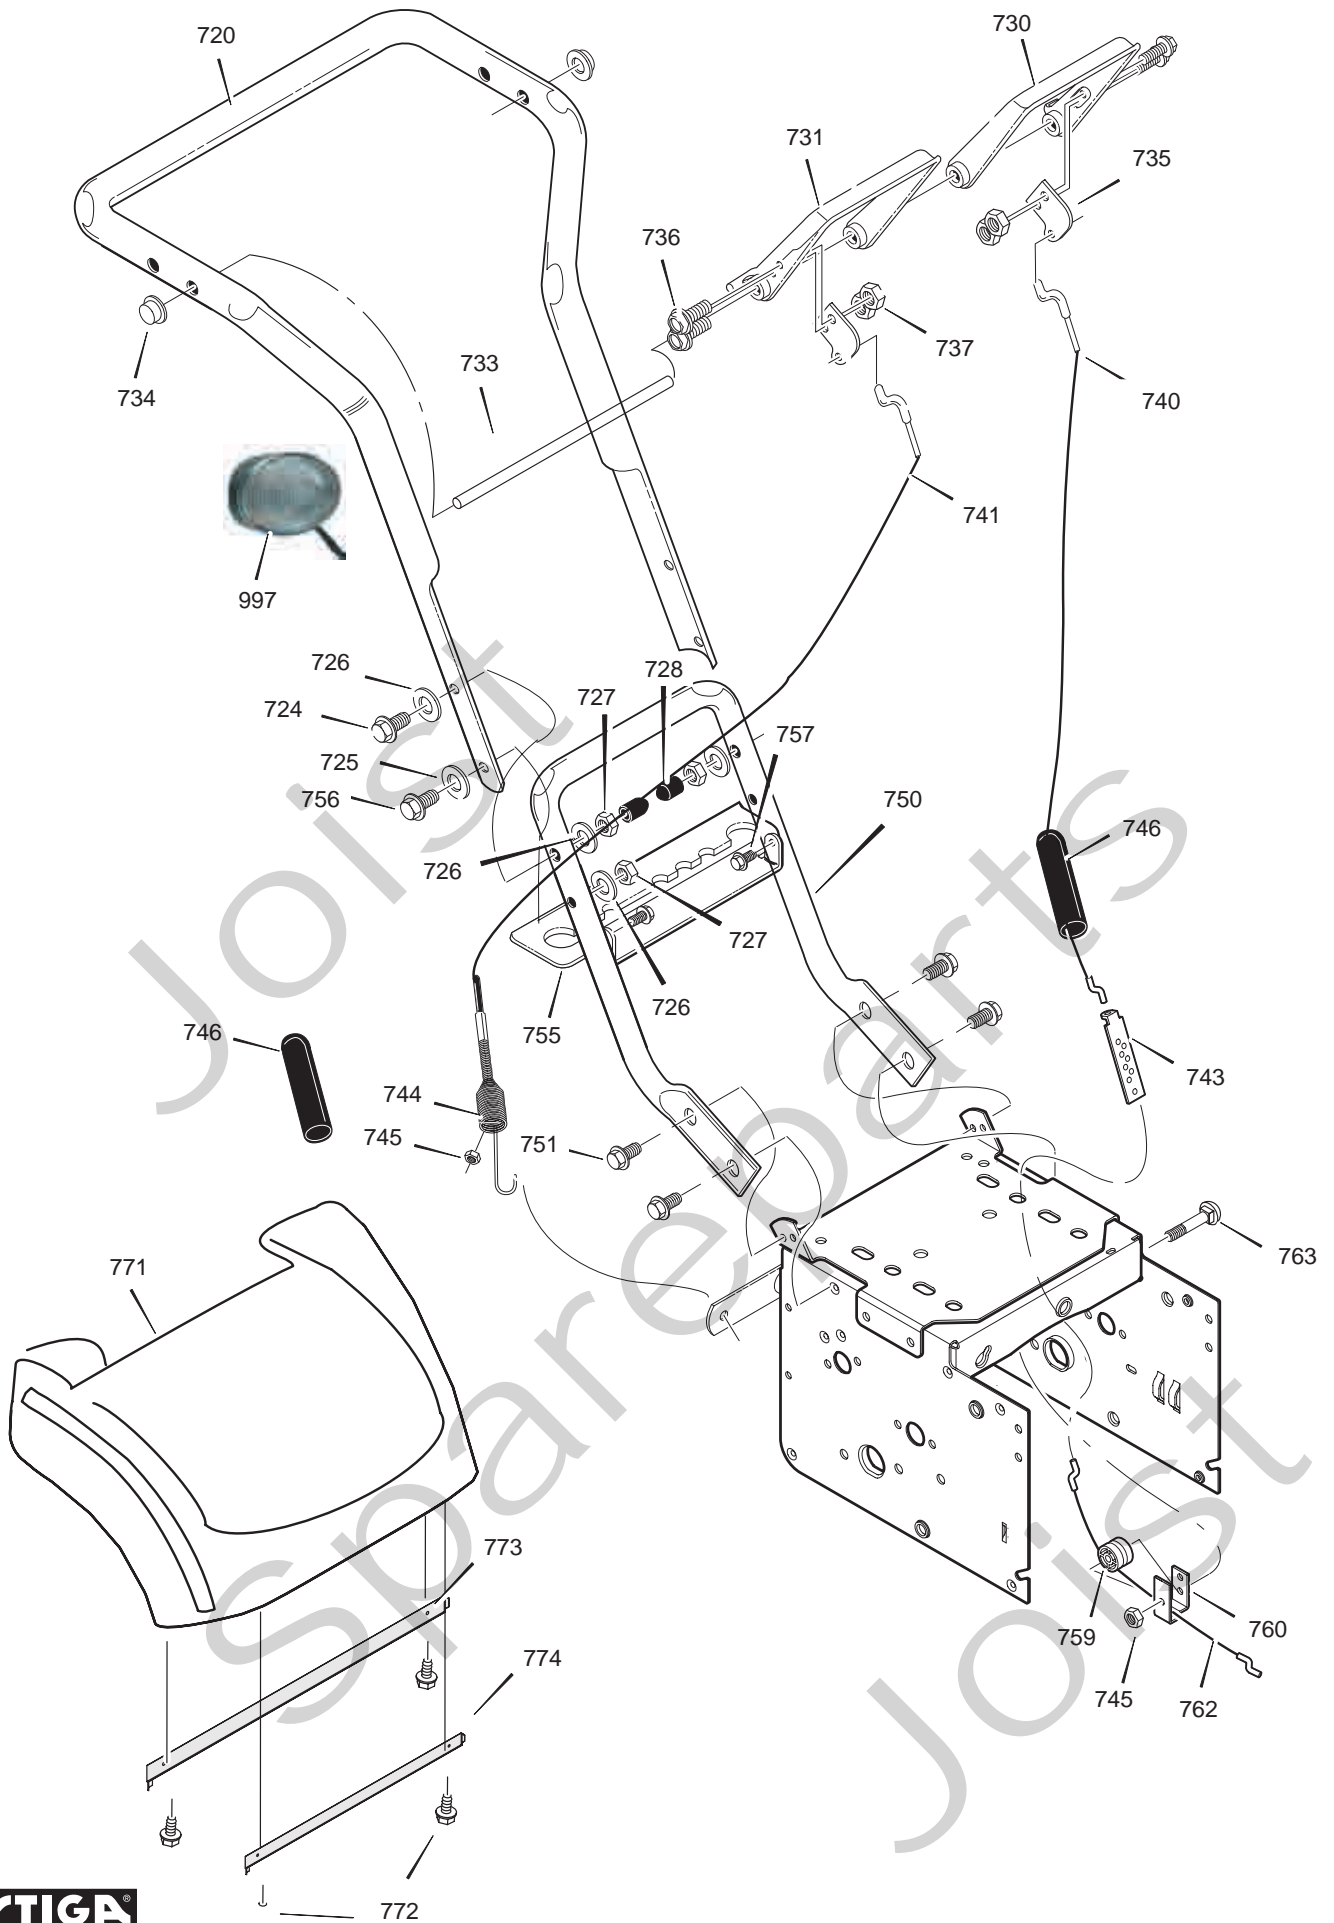


Utgåva Issue 2007-14		Bildnr Picture No 1318B		SNOW SPARK SNOW BLIZZARD SNOW UNLIMITED ALPINA AN 927		SNOW SPARK SNOW BLIZZARD SNOW UNLIMITED ALPINA AN 927		Sida Page 42	
Pos. Fig.	Antal/Quantity			Art nr Part No	Benämning	Description	Sats Kit	Anmärkning Notes	
	2857 -28	2830 -28 -38	2856 -28						
720	1	1	1	1812-1395-01	Styre- överdel	Handle- upper.....			
724	2	2	2	9988-3670-12	Skruv	Screw			
725	2	2	2	9699-0029-02	Planbricka.....	Flat washer.....			
726	6	6	6	9683-0030-02	Låsbricka	Lock washer.....			
727	4	4	4	1812-1759-01	Mutter.....	Nut			
728	2	2	2	1812-0941-01	Plastknopp.....	Plastic stop			
730	1	1	1	1812-0932-01	Kopplingshandtag- vä	Clutch handle- LH.....			
731	1	1	1	1812-0933-01	Kopplingshandtag- hö.....	Clutch handle- RH			
733	1	1	1	1812-0934-01	Handtagsaxel	Clutch handle rod.....			
734	2	2	2	1812-0513-01	Låsning.....	Retainer			
735	2	2	2	1812-2100-01	Wirefäste	Cable pivot plate.....			
736	4	4	4	9988-3525-16	Skruv	Screw			
737	4	4	4	1812-0812-01	Låsmutter	Locking nut			
740	1	1	1	1812-1728-01	Kopplingswire.....	Clutch cable- drive.....			
741	1	1	1	1812-2068-01	Reglagewire- snöskruv	Control cable- auger			
743	1	1	1	1133-0977-01	Wirefäste	Cable adjust bracket.....			
744	1	1	1	1812-0254-01	Fjäder.....	Spring			
745	2	2	2	1812-1760-01	Mutter	Nut			
746	2	2	2	1133-0968-01	Wirehylsa.....	Clutch spring boot			
750	1	1	1	1812-1323-01	Styre- underdel	Handle- lower			
751	4	4	4	1812-1833-01	Skruv	Screw			
755	1	1	1	1812-1398-01	Växelväljarplåt	Gear selector plate.....			
756	2	2	2	9988-3651-12	Skruv	Screw			
757	2	2	2	9988-3516-16	Skruv	Screw			
759	1	1	1	1812-1205-01	Spole	Spool			
760	1	1	1	1812-1702-01	Fäste.....	Bracket.....			
762	1	1	1	1812-1727-01	Reglagewire- nedre.....	Drive cable- lower			
763	1	1	1	1812-1772-01	Skruv	Screw			
771	1	1	1	1812-1870-01	Panel	Panel			
772	4	4	4	1812-1394-01	Skruv	Screw			
773	1	1	1	1812-1869-01	Fäste- övre	Bracket- top			
774	1	1	1	1812-1868-01	Fäste- undre.....	Bracket- bottom			
997	1	1	1	1812-2176-01	Strålkastare	Headlight.....			
997A	1	1	1	1812-1909-01	• Halogenlampa.....	• Halogene bulb			
X 998	1	1	1	8218-2233-80	Bruksanvisning.....	Owner's manual		Ej ill/not ill.	

Utgåva Issue 2007-14		Bildnr Picture No 1776B		SNOW SPARK SNOW BLIZZARD SNOW UNLIMITED ALPINA AN 927		SNOW SPARK SNOW BLIZZARD SNOW UNLIMITED ALPINA AN 927		Sida Page 44	
Pos. Fig.	Antal/Quantity			Art nr Part No	Benämning	Description	Sats Kit	Anmärkning Notes	
	2857 -28	2830 -28 -38	2856 -28						
1		1	1	1812-1615-01	Förlängningssladd	Extension cord			
3	4	4	4	1812-1678-01	Vagnsbult	Carriage bolt			
4	4	4	4	1812-1681-01	Hållare	Retainer			
5	4	4	4	9795-3631-02	Mutter	Nut			
6	1	1	1	1812-1719-01	Motorremskiva	Engine pulley.....			
7	1	1	1	1812-2284-01	Bricka	Washer.....			
8	1	1	1	9683-0030-02	Låsbricka	Lock washer.....			
9	1	1	1	9987-5125-16	Skruv	Screw			
10	1	1	1	1812-9016-01	Drivrem	Drive belt.....			
11	1	1	1	1812-9020-01	Drivrem	Drive belt.....			
12	1	1	1	1812-1722-01	Spännrullsfäste.....	Idler bracket.....			
13	1	1	1	1812-1705-01	Bussning	Bushing.....			
14	1	1	1	9683-0030-02	Låsbricka	Lock washer.....			
15	1	1	1	9987-5119-16	Skruv	Screw	L = 19 mm		
16	1	1	1	1812-1835-01	Fjäder	Spring			
17	1	1	1	1812-2077-01	Spännrulle	Tension roller			
18	1	1	1	9743-3721-32	Mutter	Nut			
20	1	1	1	1812-1742-01	Remstyrning.....	Belt guide.....			
22	1	1	1	9683-0030-02	Låsbricka	Lock washer.....			
24	2	2	2	9987-5119-16	Skruv	Screw	L = 19 mm		
25	1	1	1	1812-1703-01	Motorplatta.....	Engine mount plate.....			
26	6	6	6	9988-3516-16	Skruv	Screw			
27	4	4	4	1812-1832-01	Skruv	Screw.....			
28	1	1	1	1812-1849-01	Motorchassi.....	Engine box frame.....			
29	1	1	1	1812-2290-01	Nyckel.....	Key.....			
30	1	1	1	1812-2291-01	Deflektor.....	Deflector			
31	1			1812-2293-01	Skruv	Screw.....			
31		1	1	1812-2297-01	Skruv	Screw.....			

X


X
X
X
X

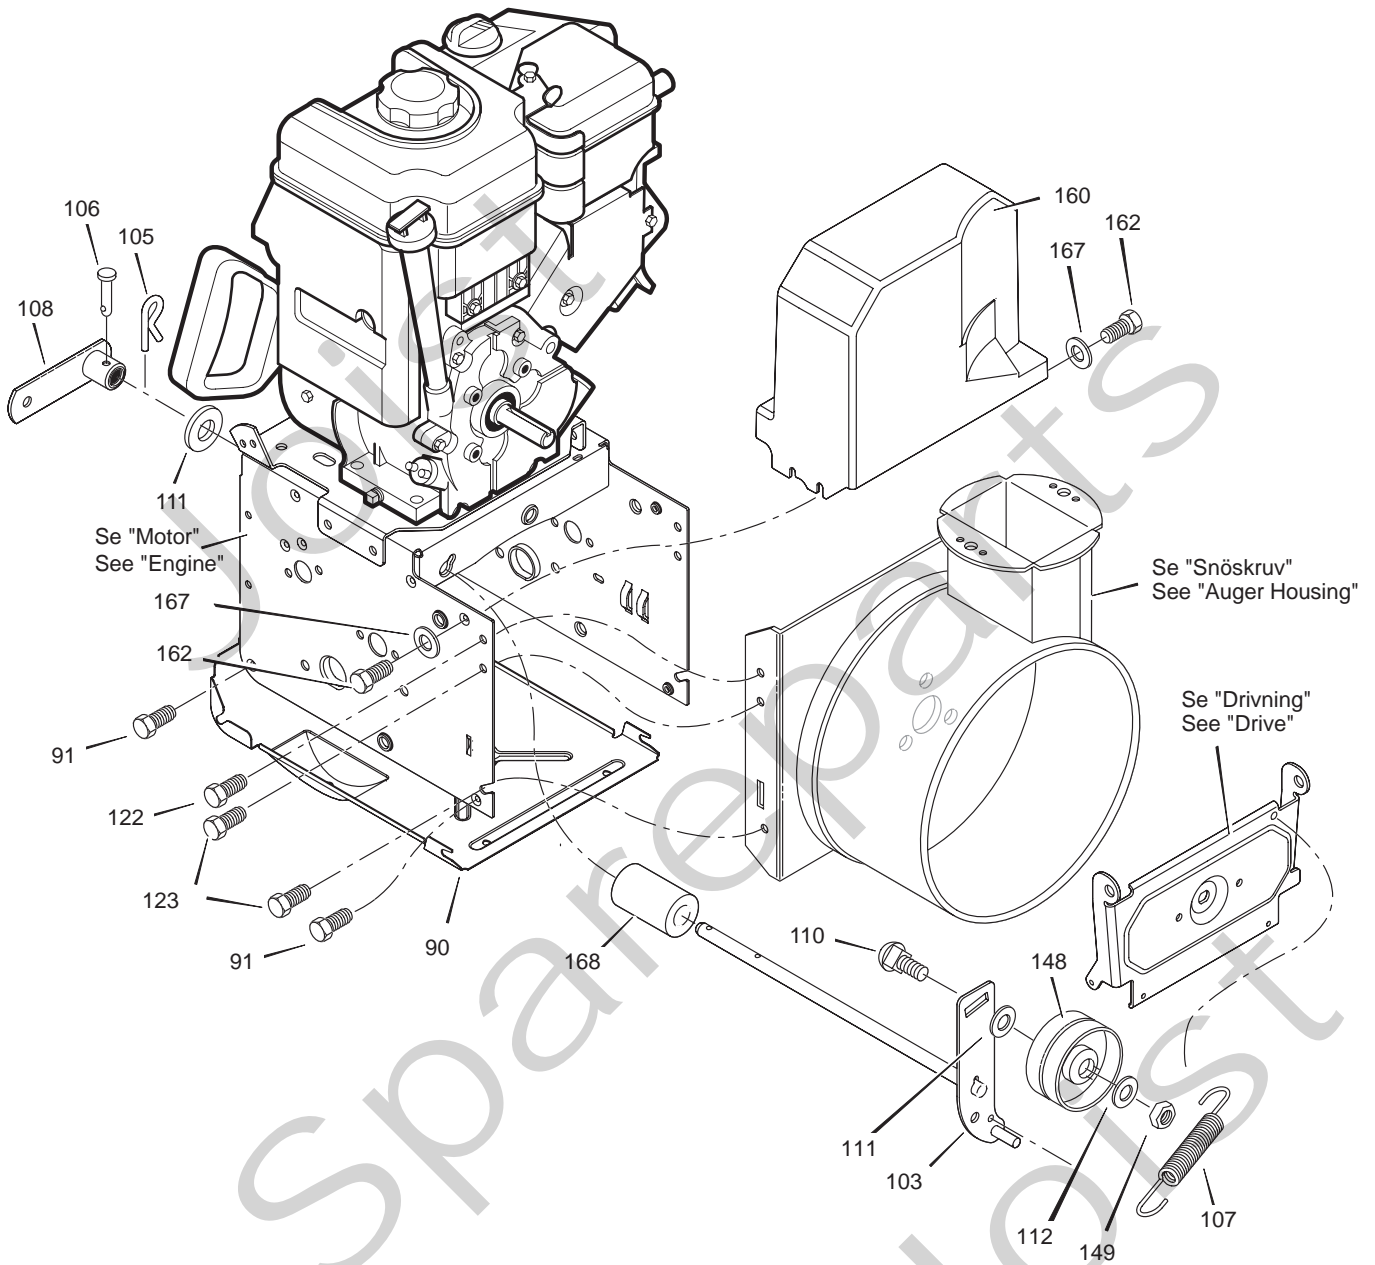


Utgåva Issue 2007-14		Bildnr Picture No 1315D		SNOW SPARK SNOW BLIZZARD SNOW UNLIMITED ALPINA AN 927		SNOW SPARK SNOW BLIZZARD SNOW UNLIMITED ALPINA AN 927		Sida Page 46	
Pos. Fig.	Antal/Quantity			Art nr Part No	Benämning	Description	Sats Kit	Anmärkning Notes	
	2857 -28	2830 -28 -38	2856 -28						
90	1	1	1	1812-1700-01	Bottenplåt	Bottom cover			
91	4	4	4	9988-3516-16	Skruv	Screw			
103	1	1	1	1812-1747-01	Spännarm	Idler			
105	1	1	1	1812-1511-01	Låsstift	Hair pin			
106	1	1	1	1812-1533-01	Pinne	Klik pin			
107	1	1	1	1812-1676-01	Fjäder	Tension spring			
108	1	1	1	1812-2308-01	Reglagearm	Control arm			
110	1	1	1	9899-3732-16	Skruv	Screw			
111	2	2	2	1812-1509-01	Planbricka	Flat washer			
112	1	1	1	1812-2108-01	Bricka	Washer			
122	2	2	2	1812-1832-01	Skruv	Screw			
123	4	4	4	1812-1833-01	Skruv	Screw			
148	1	1	1	1812-2077-01	Spännrulle	Tension roller			
149	1	1	1	9743-3721-32	Mutter	Nut			
160	1	1	1	1812-2078-01	Remskydd	Belt cover			
162	4	4	4	1812-1680-01	Skruv	Screw			
167	4	4	4	9699-0028-02	Planbricka	Flat washer			
168	1	1	1	1812-2075-01	Distans	Spacer			

X

Joist Spareparts Joist

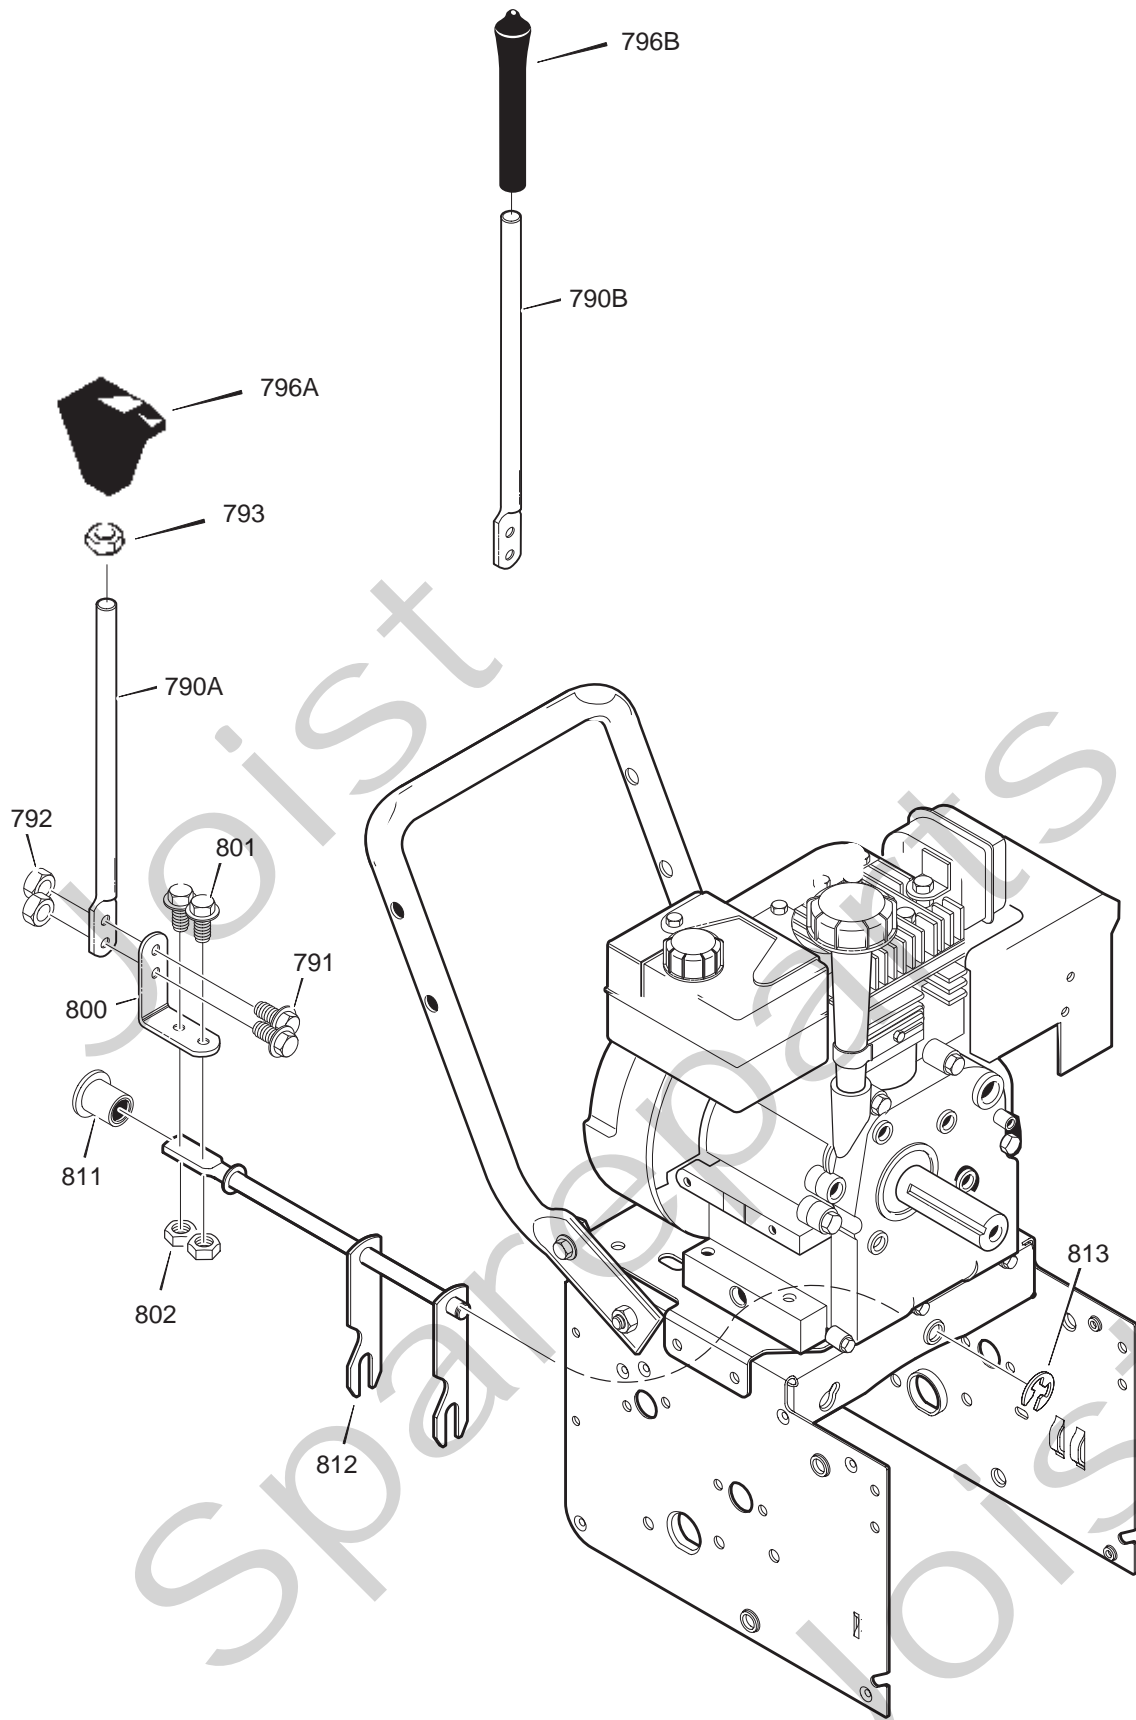


Utgåva Issue 2007-14		Bildnr Picture No 1319A		SNOW SPARK SNOW BLIZZARD SNOW UNLIMITED ALPINA AN 927		SNOW SPARK SNOW BLIZZARD SNOW UNLIMITED ALPINA AN 927		Sida Page 48	
Pos. Fig.	Antal/Quantity			Art nr Part No	Benämning	Description	Sats Kit	Anmärkning Notes	
	2857 -28	2830 -28 -38	2856 -28						
790 A	1			1812-1420-01	Växelspak	Shift rod			
790 B		1	1	1812-2061-01	Växelspak	Shift rod			
791	2	2	2	9988-3519-16	Skruv	Screw			
792	2	2	2	1812-0812-01	Låsmutter	Locking nut			
793	1			9795-3931-00	Mutter	Nut			
796 A	1			1812-1308-01	Reglageknopp	Shift knob			
796 B		1	1	1812-2060-01	Reglageknopp	Slip knob			
800	1	1	1	1812-1444-01	Spakfjäder	Lever spring			
801	2	2	2	9988-3519-16	Skruv	Screw			
802	2	2	2	1812-0812-01	Låsmutter	Locking nut			
811	1	1	1	1812-1219-01	Plastbussning	Plastic bushing			
812	1	1	1	1812-1710-01	Växelspång	Shift rod			
813	1	1	1	1812-1672-01	Låsring	Retainer ring			

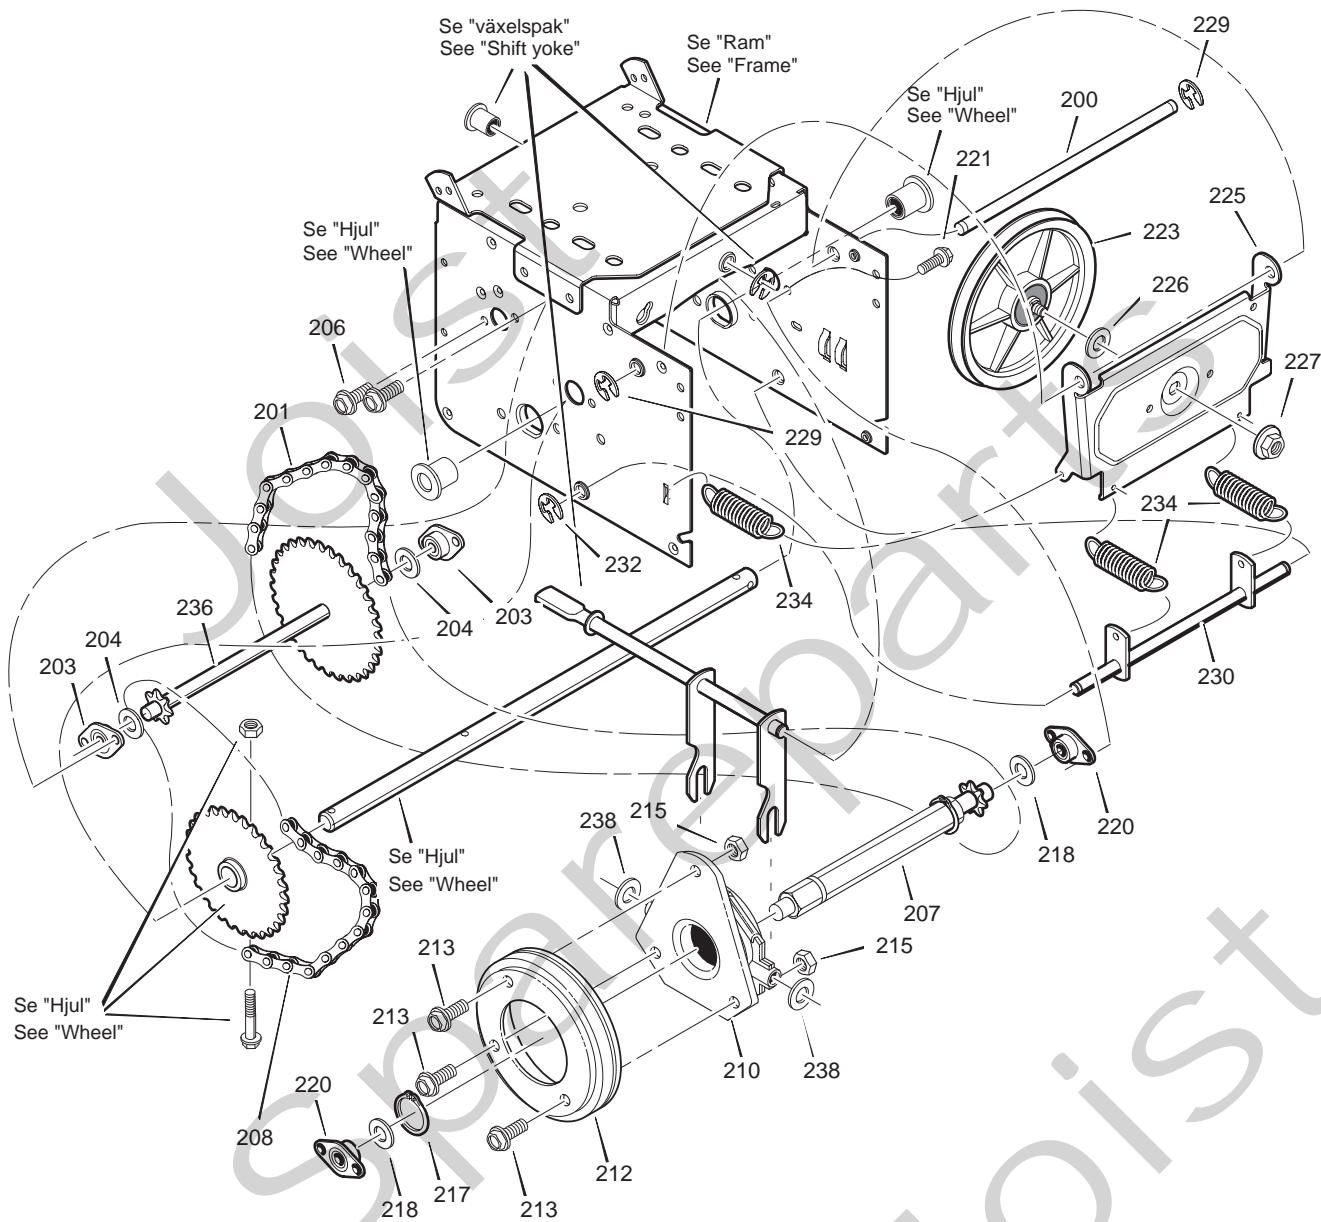


Utgåva Issue 2007-14		Bildnr Picture No 1316		SNOW SPARK SNOW BLIZZARD ALPINA AN 927 DRIVNING		SNOW SPARK SNOW BLIZZARD ALPINA AN 927 DRIVE		Sida Page 50	
Pos. Fig.	Antal/Quantity			Art nr Part No	Benämning	Description	Sats Kit	Anmärkning Notes	
	2857 -28	2830 -28 -38							
200	1	1		1812-1713-01	Axel- svängplatta	Axle- swing plate			
201	1	1		1812-1686-01	Kedja	Chain			
203	2	2		1812-1178-01	Glidlager m.hållare.....	Bearing & retainer			
204	2	2		1812-1204-01	Bricka	Washer			
206	4	4		1812-1832-01	Skruv	Screw			
207	1	1		1812-1750-01	Sexkantsaxel.....	Hex shaft			
208	1	1		1812-1688-01	Kedja	Chain			
210	1	1		1812-1313-01	Lager	Trunion bearing			
212	1	1		1812-9028-01	Friktionshjul.....	Friction disc wheel			
213	3	3		9988-3516-16	Skruv	Screw			
215	3	3		9795-3531-02	Mutter.....	Nut			
217	1	1		1812-1687-01	Låsring	Retext ring			
218	2	2		1812-1204-01	Bricka	Washer			
220	2	2		1812-1178-01	Glidlager m.hållare.....	Bearing & retainer			
221	4	4		1812-1832-01	Skruv	Screw			
223	1	1		1812-1725-01	Friktionsremskiva	Friction pulley			
225	1	1		1812-1701-01	Svängplatta	Swing plate			
226	1	1		1812-1739-01	Distans	Spacer			
227	1	1		1812-1674-01	Flänslåsmutter	Flange lock nut			
229	2	2		1812-1672-01	Låsring	Retainer ring			
230	1	1		1812-2076-01	Fjäderlänkarm	Spring link			
232	2	2		1812-1672-01	Låsring	Retainer ring			
234	3	3		1812-1675-01	Fjäder.....	Spring			
236	1	1		1812-1712-01	Kedjedrev.....	Sprocket.....			
236		1		1812-1751-01	Mellanaxel m.drev	Intermed. sprocket.....		33T/7T	
238	2	2		9699-0038-02	Planbricka.....	Flat washer.....			


Utgåva Issue		Bildnr Picture No		SNOW UNLIMITED DRIVNING	SNOW UNLIMITED DRIVE	Sida Page			
2007-14		1777C				52			
Pos. Fig.	Antal/Quantity				Art nr Part No	Benämning	Description	Sats Kit	Anmärkning Notes
	2856 -28								
200	1			1812-1713-01	Axel- svängplatta	Axle- swing plate			
201	1			1812-1686-01	Kedja	Chain			
203	4			1812-1207-01	Kullager	Ball bearing			
204	2			1812-1204-01	Bricka	Washer			
206	4			1812-1832-01	Skruv	Screw			
207	1			1812-2000-01	Sexkantsaxel	Hex shaft			
208	1			1812-1688-01	Kedja	Chain			
210	1			1812-1313-01	Lager	Trunion bearing			
212	1			1812-9028-01	Friktionshjul	Friction disc wheel			
213	3			9988-3516-16	Skruv	Screw			
215	3			9795-3531-02	Mutter	Nut			
217	2			1812-1687-01	Låsring	Retext ring			
218	2			1812-1204-01	Bricka	Washer			
220	4			1812-1200-01	Lagerhållare	Bearing retainer			
221	2			1812-1832-01	Skruv	Screw			
223	1			1812-1725-01	Friktionsremskiva	Friction pulley			
225	1			1812-1701-01	Svängplatta	Swing plate			
226	1			1812-1739-01	Distans	Spacer			
227	1			1812-1674-01	Flänslåsmutter	Flange lock nut			
229	2			1812-1672-01	Låsring	Retainer ring			
230	1			1812-2101-01	Fjäderlänkarm	Spring link			
232	2			1812-1672-01	Låsring	Retainer ring			
233	1			1812-2080-01	Bricka	Washer			
234	3			1812-1675-01	Fjäder	Spring			
236	1			1812-1715-01	Mellanaxel m.drev	Intermed. sprocket		33T/7T	
238	2			9699-0038-02	Planbricka	Flat washer			
239	3			1812-1920-01	Kullager	Ball bearing			
240	3			1812-1919-01	Lagerhållare	Bearing retainer			
241	1			1812-2102-01	Axel- vä	Axle- LH			
242	1			1812-2098-01	Axelsprint	Axle pin			
243	1			1812-2001-01	Axel m.bussning- hö	Axle & bushing- RH			
244	1			1812-1935-01	Kedjedrev	Sprocket			
245	1			1812-1933-01	Differential	Auto lock clutch			
246	5			1812-2081-01	Skruv	Screw			
247	1			1812-1760-01	Mutter	Nut			
248	1			1812-1114-01	Bult	Bolt			
249	1			1812-1724-01	Lager	Axle bearing			
250	1			1812-1932-01	Fäste	Axle support bracket			
251	2			1812-1833-01	Skruv	Screw			
252	2			1812-1934-01	Låshylsa	Locking collar			
253	2			1812-1913-01	Bricka	Washer			
255	2			1812-1999-01	Stödstag	Support bracket			
256	4			9988-3516-16	Skruv	Screw			
258	2			9954-3719-16	Skruv	Screw			
259	2			9683-0035-02	Låsbricka	Lock washer			
260	2			9795-3731-02	Mutter	Nut			

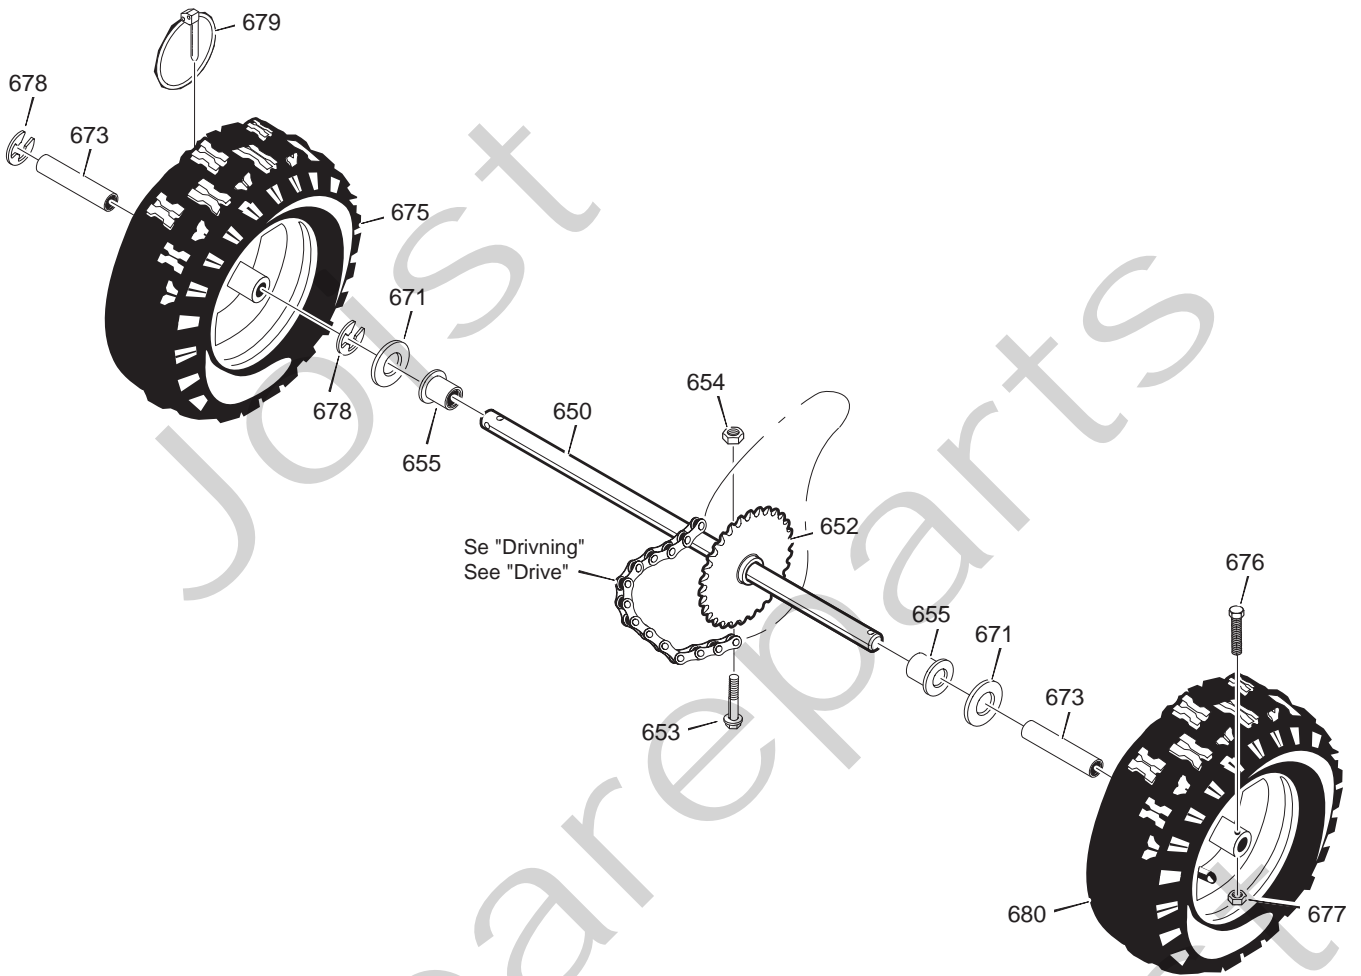


Utgåva Issue 2007-14		Bildnr Picture No 1317A		SNOW SPARK SNOW BLIZZARD ALPINA AN 927 HJUL		SNOW SPARK SNOW BLIZZARD ALPINA AN 927 WHEELS		Sida Page 54	
Pos. Fig.	Antal/Quantity			Art nr Part No	Benämning	Description	Sats Kit	Anmärkning Notes	
	2857 -28	2830 -28 -38							
650	1			1812-1862-01	Hjulaxel.....	Axle shaft			
650		1		1812-1863-01	Hjulaxel.....	Axle shaft			
652	1	1		1812-1712-01	Kedjedrev.....	Sprocket.....			
653	1	1		1812-1755-01	Skruv.....	Screw.....			
654	1	1		1812-1760-01	Mutter	Nut			
655	2	2		1812-1724-01	Lager	Axle bearing			
671	2	2		1812-2059-01	Bricka	Washer.....			
673		2		1812-1733-01	Hjulbussning	Wheel bushing			
673	2			1812-1734-01	Hjulbussning	Wheel bushing			
675	1			1812-1949-01	Hjul kpl- hö	Wheel assy- RH.....	13 x 5.00- 6		
675		1		1812-1951-01	Hjul kpl- hö	Wheel assy- RH.....	4.00/4.80- 8 (16 x 4")		
676	1	1		1812-1114-01	Bult.....	Bolt			
677	1	1		1812-1760-01	Mutter	Nut			
678	2	2		1812-0567-01	Låsring	Retaining ring			
679	1	1		1812-0408-01	Låssprint	Clik pin			
680	1			1812-1950-01	Hjul kpl- vä.....	Wheel assy- LH	13 x 5.00- 6		
680		1		1812-1952-01	Hjul kpl- vä.....	Wheel assy- LH	4.00/4.80- 8 (16 x 4")		

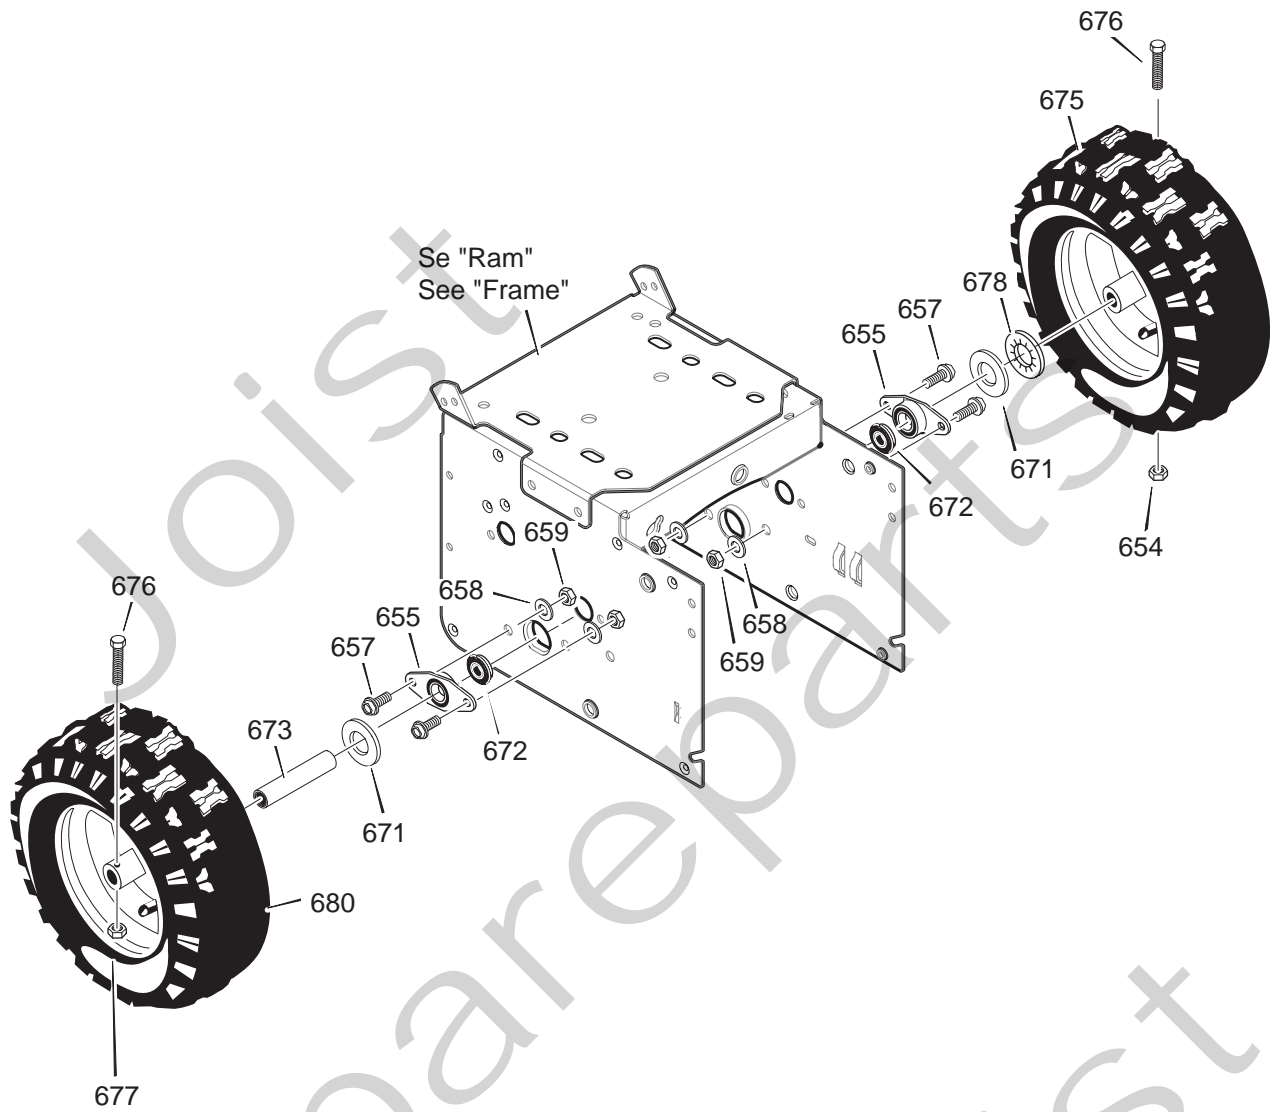


Utgåva Issue		Bildnr Picture No		SNOW UNLIMITED HJUL		SNOW UNLIMITED WHEELS		Sida Page	
2007-14		1778C						56	
Pos. Fig.	Antal/Quantity				Art nr Part No	Benämning	Description	Sats Kit	Anmärkning Notes
	2856 -28								
654	1				1812-1760-01 Mutter	Nut			
655	2				1812-1919-01 Lagerhållare	Bearing retainer			
657	4				9954-3719-16 Skruv	Screw			
658	4				9683-0035-02 Låsbricka	Lock washer			
659	4				9795-3731-02 Mutter	Nut			
671	2				1812-2059-01 Bricka	Washer			
672	2				1812-1920-01 Kullager	Ball bearing			
673	2				1812-1733-01 Hjulbussning	Wheel bushing			
675	1				1812-1952-01 Hjul kpl- vä	Wheel assy- LH		4.00/4.80-8 (16 x 4")	
676	2				1812-1114-01 Bult	Bolt			
677	1				1812-1760-01 Mutter	Nut			
678	2				1812-0567-01 Låsring	Retaining ring			
680	1				1812-1951-01 Hjul kpl- hö	Wheel assy- RH		4.00/4.80-8 (16 x 4")	

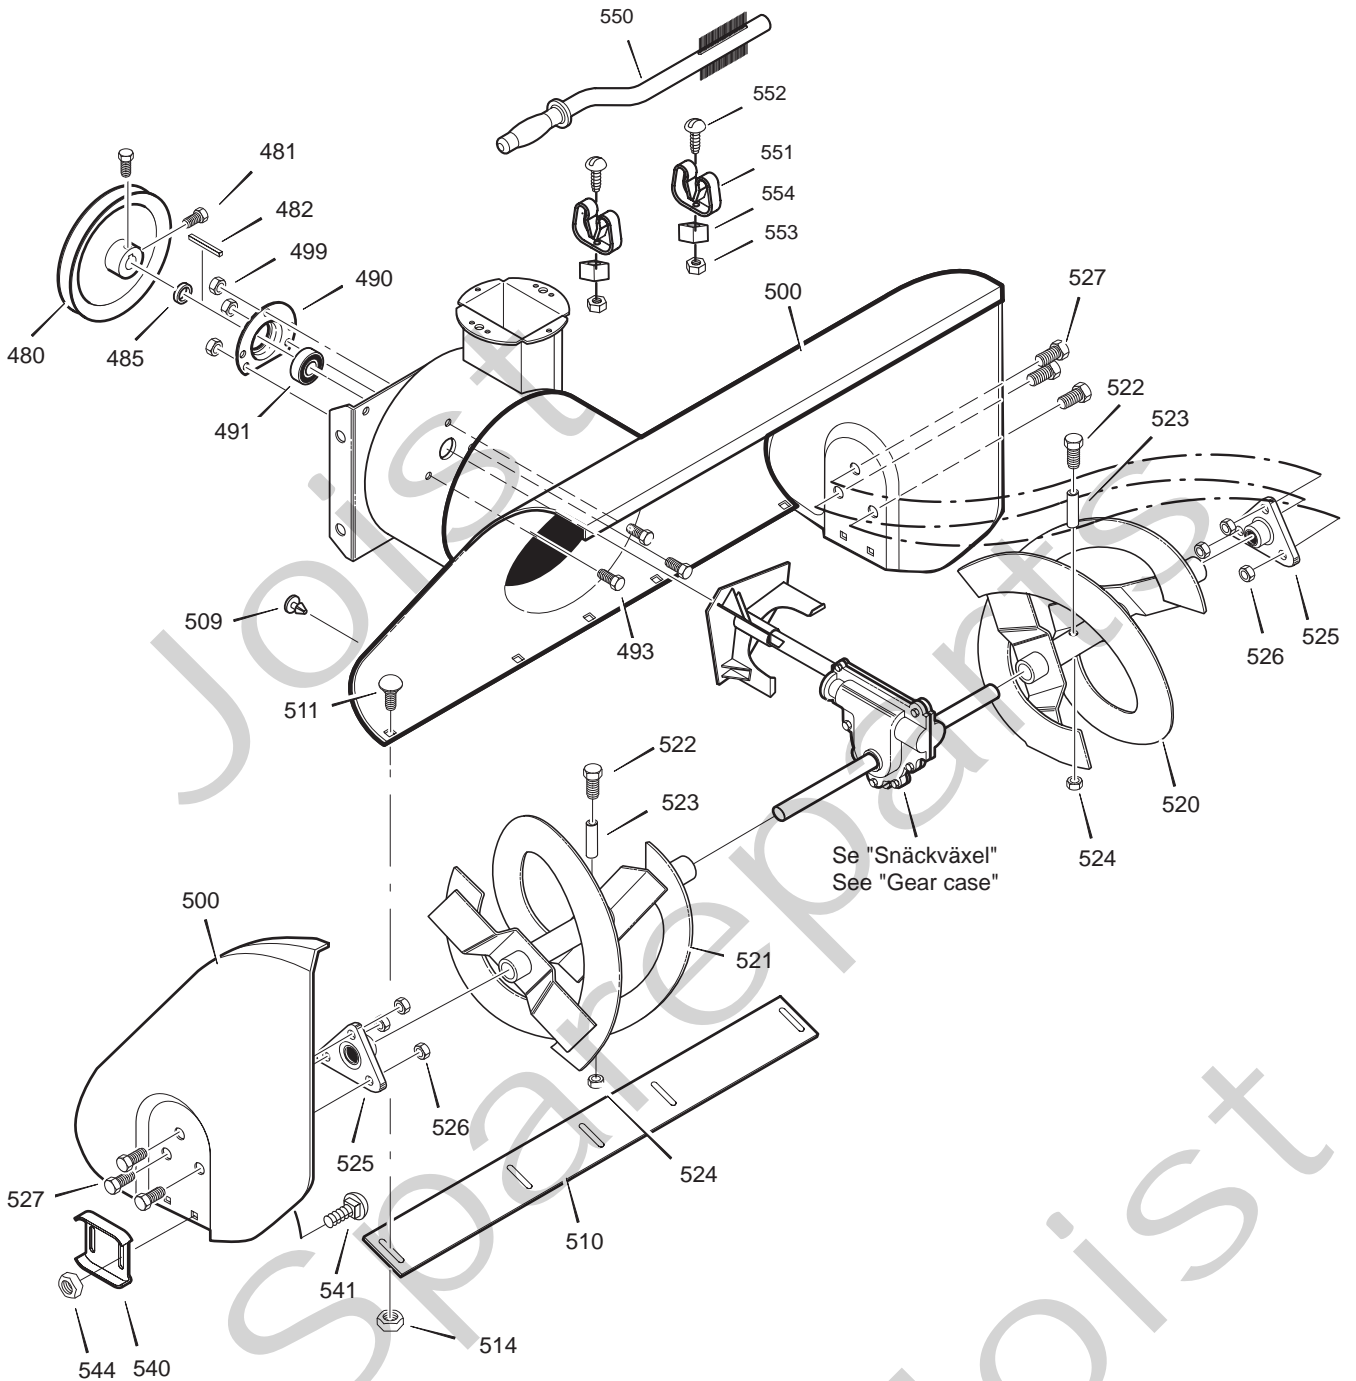


Utgåva Issue 2007-14		Bildnr Picture No 1325C		SNOW SPARK SNOW BLIZZARD SNOW UNLIMITED ALPINA AN 927		SNOW SPARK SNOW BLIZZARD SNOW UNLIMITED ALPINA AN 927		Sida Page 58	
Pos. Fig.	Antal/Quantity			Art nr Part No	Benämning	Description	Sats Kit	Anmärkning Notes	
	2857 -28	2830 -28 -38	2856 -28						
480	1	1	1	1812-1854-01	Remskiva- snöskruv	Auger pulley			
481	2	2	2	1812-1119-01	Skruv	Bolt			
482	1	1	1	1812-1609-01	Kil	Key			
485	1	1	1	1812-1739-01	Distans	Spacer			
490	1	1	1	1812-1690-01	Kullagerhållare	Ball bearing retainer			
491	1	1	1	1812-1858-01	Kullager	Ball bearing			
493	3	3	3	9899-3622-16	Skruv	Screw			
499	3	3	3	9795-3631-02	Mutter	Nut			
500	1			1812-1942-01	Snöskruvhus	Auger housing			
500		1	1	1812-2095-01	Snöskruvhus	Auger housing			
509	2	2	2	1812-1430-01	Plugg	Plug			
510		1	1	1812-1450-01	Skrapskär	Scraper blade			
510	1			1812-1843-01	Skrapskär	Scraper blade			
511	5	5	5	9899-3622-16	Skruv	Screw			
514	5	5	5	9795-3631-02	Mutter	Nut			
520	1			1812-1860-01	Snöskruv- vä	Auger- LH			
520		1	1	1812-2118-01	Snöskruv- vä	Auger- LH			
521	1			1812-1859-01	Snöskruv- hö	Auger- RH			
521		1	1	1812-2117-01	Snöskruv- hö	Auger- RH			
522	1	1	1	1812-9005-01	Brytbultsats	Shear bolt kit			
523	2	2	2	1812-0531-01	• Distans	• Spacer			
524	2	2	2	1812-0812-01	• Låsmutter	• Locking nut			
525	2	2	2	1812-0878-01	Lager	Bearing			
526	6	6	6	9743-3621-32	Mutter	Nut			
527	6	6	6	9988-3619-16	Skruv	Screw			
540	2	2	2	1812-1391-01	Släpsko	Height adjustor skid			
541	4	4	4	9899-3622-16	Skruv	Screw			
544	4	4	4	9795-3631-02	Mutter	Nut			
550	1	1	1	1812-1930-01	Rengöringsborste	Clean- out brush			
551	2	2	2	1812-1939-01	Hållare	Clips			
552	2	2	2	1812-1917-01	Skruv	Screw			
553	2	2	2	1812-1912-01	Mutter	Nut			
554	2	2	2	1812-1317-01	Ledknut	Universal pivot block			

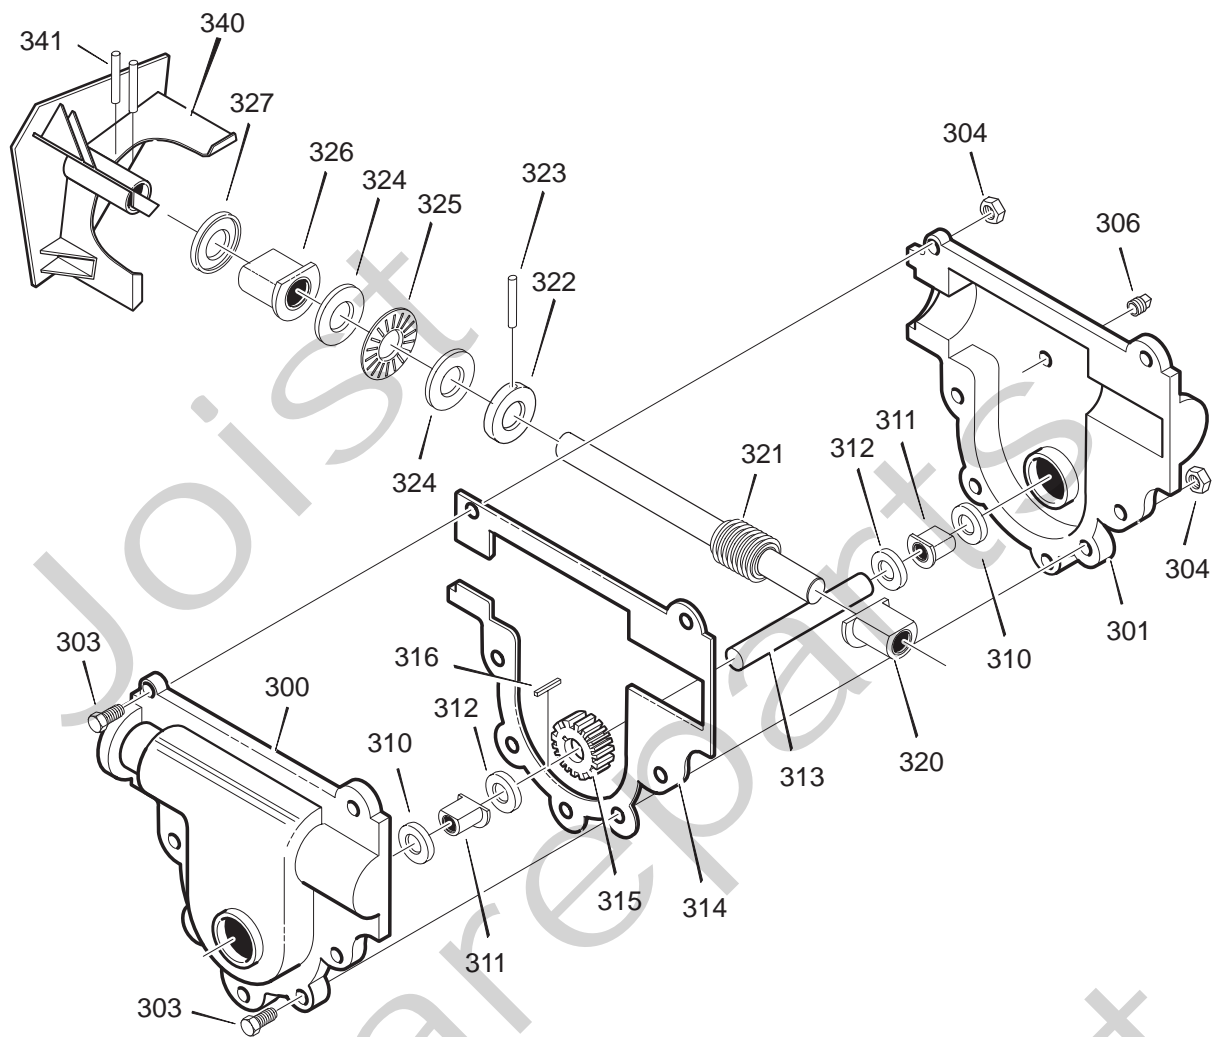


Utgåva Issue 2007-14		Bildnr Picture No 1323B		SNOW SPARK SNOW BLIZZARD SNOW UNLIMITED ALPINA AN 927		SNOW SPARK SNOW BLIZZARD SNOW UNLIMITED ALPINA AN 927		Sida Page 60	
Pos. Fig.	Antal/Quantity			Art nr Part No	Benämning	Description	Sats Kit	Anmärkning Notes	
	2857 -28	2830 -28 -38	2856 -28						
300	1	1	1	1812-0909-01	Snäckväxelhus- hö	Gear case- RH			
301	1	1	1	1812-0908-01	Snäckväxelhus- vä	Gear case- LH			
303	7	7	7	9988-3519-16	Skruv	Screw			
304	7	7	7	1812-1758-01	Mutter	Nut			
306	1	1	1	1812-0856-01	Skruv	Screw			
310	2	2	2	1812-0881-01	Tätningring	Oil seal			
311	2	2	2	1812-1360-01	Flänslager	Flange bearing			
312	2	2	2	1812-0857-01	Bricka	Thrust washer			
313	1			1812-1852-01	Snöskruvaxel	Auger shaft			
313		1	1	1812-2086-01	Snöskruvaxel	Auger shaft			
314	1	1	1	1812-1361-01	Packning	Gasket			
315	1	1	1	1812-0862-01	Snäckdrev	Worm gear			
316	1	1	1	1812-1371-01	Kil	Woodruff key			
320	1	1	1	1812-1359-01	Bussning	Bushing			
321	1	1	1	1812-1853-01	Ingående axel	Input shaft			
322	1	1	1	1812-1321-01	Distans	Thrust collar			
323	1	1	1	1133-0395-01	Stift	Roll pin			
324	2	2	2	1812-0857-01	Bricka	Thrust washer			
325	1	1	1	1812-0285-01	Nållager	Needle bearing			
326	1	1	1	1812-1360-01	Flänslager	Flange bearing			
327	1	1	1	1812-0881-01	Tätningring	Oil seal			
340	1	1	1	1812-1851-01	Fläkt	Impeller			
341	2	2	2	1133-0395-01	Stift	Roll pin			

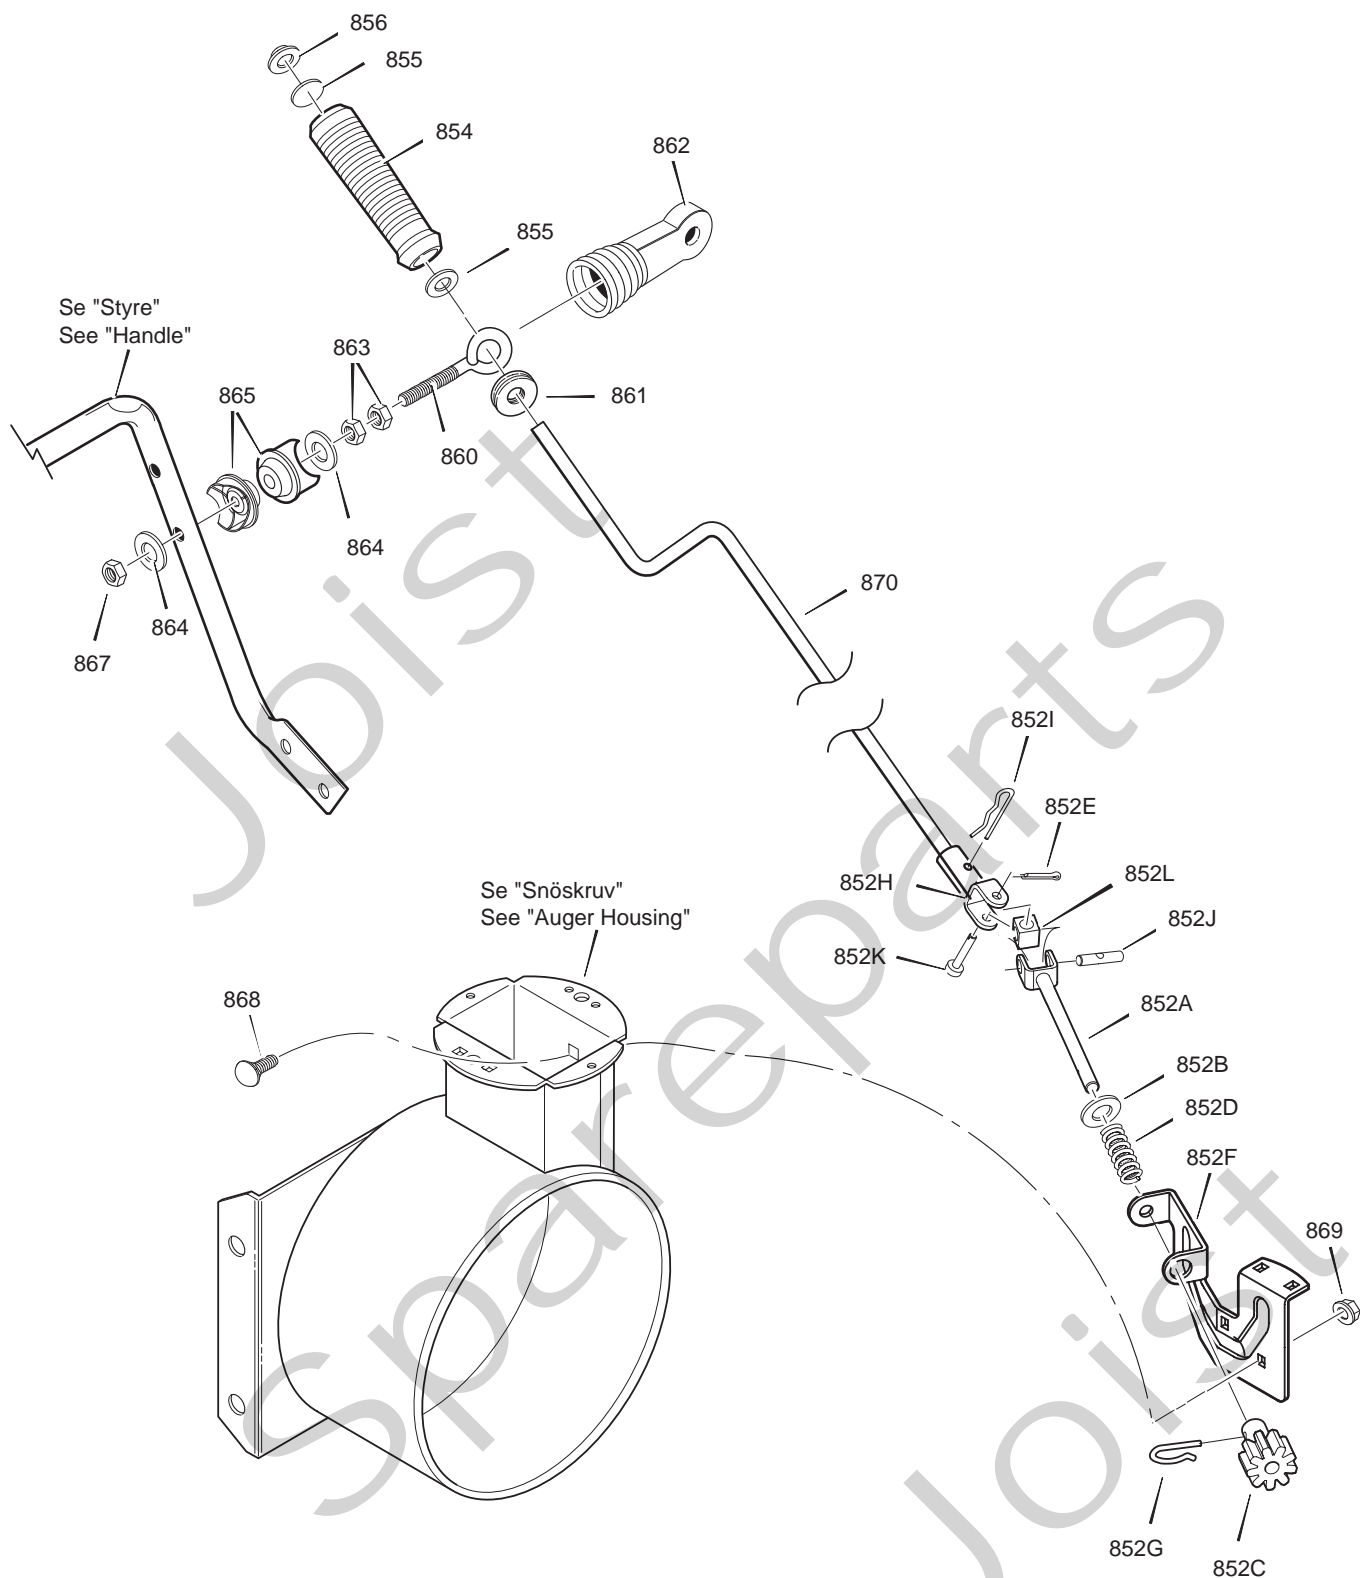

Utgåva Issue 2007-14		Bildnr Picture No 2192		SNOW SPARK SNOW BLIZZARD SNOW UNLIMITED ALPINA AN 927		SNOW SPARK SNOW BLIZZARD SNOW UNLIMITED ALPINA AN 927		Sida Page 62	
Pos. Fig.	Antal/Quantity			Art nr Part No	Benämning	Description	Sats Kit	Anmärkning Notes	
	2857 -28	2830 -28 -38	2856 -28						
852 A	1	1	1	1812-1826-01	Gaffelstång	Yoke and rod			
852 B	1	1	1	1812-2108-01	Bricka	Washer			
852 C	1	1	1	1812-1706-01	Drev	Gear			
852 D	1	1	1	1812-1761-01	Fjäder	Spring			
852 E	1	1	1	9599-0033-00	Saxsprint	Split pin			
852 F	1	1	1	1812-1793-01	Fäste	Bracket			
852 G	1	1	1	1812-1791-01	Låsnaål	Hair pin			
852 H	1	1	1	1812-1708-01	Gaffel	Yoke adapter			
852 I	1	1	1	1812-1511-01	Låsstift	Hair pin			
852 J	1	1	1	1812-1316-01	Axel	Universal pin			
852 K	1	1	1	1812-1318-01	Sprint	Clevis pin			
852 L	1	1	1	1812-1317-01	Ledknut	Universal pivot block			
854	1	1	1	1812-1168-01	Handtag	Handle			
855	2	2	2	1812-1171-01	Bricka	Washer			
856	1	1	1	1812-1483-01	Låsning	Retainer			
860	1	1	1	1812-1821-01	Öglebult	Eye bolt		L = 6.5"	
861	1	1	1	1812-0203-01	Hylsa	Grommet			
862	1	1	1	1812-1822-01	Hylsa- öglebult	Boot-eye bolt			
863	2	2	2	9743-3721-32	Mutter	Nut			
864	2	2	2	9699-0035-02	Planbricka	Flat washer			
865	1	1	1	1812-1172-01	Adapter	Boot adaptor			
867	1	1	1	9743-3721-32	Mutter	Nut			
868	1	1	1	1812-1831-01	Skruv	Screw			
869	1	1	1	1812-1760-01	Mutter	Nut			
870	1	1	1	1812-1707-01	Inställningsvev	Chute crank			

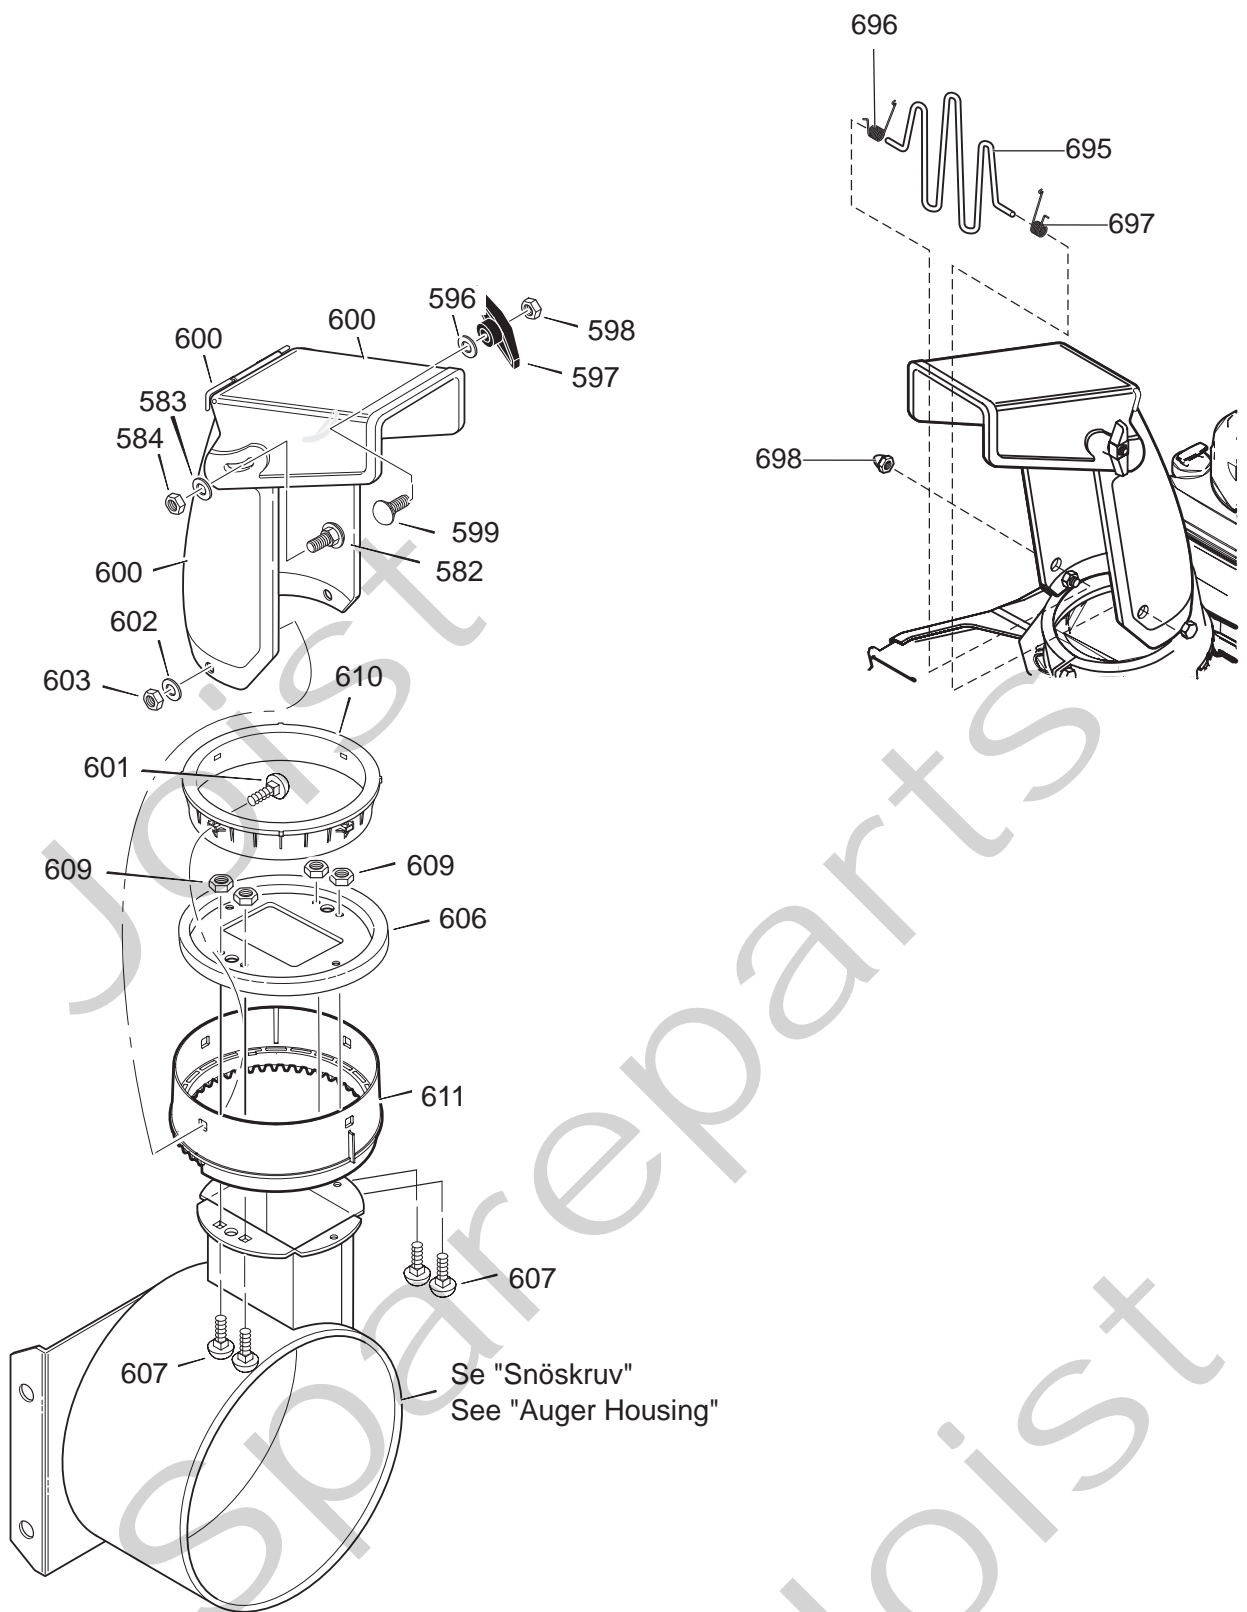

Utgåva Issue 2007-14		Bildnr Picture No 1780		SNOW SPARK SNOW BLIZZARD ALPINA AN 927 UTKAST		SNOW SPARK SNOW BLIZZARD ALPINA AN 927 DISCHARGE CHUTE		Sida Page 64	
Pos. Fig.	Antal/Quantity			Art nr Part No	Benämning	Description	Sats Kit	Anmärkning Notes	
	2857 -28	2830 -28 -38							
582	1	1		9899-3625-16	Skruv.....	Screw.....			
583	1	1		9699-0029-02	Planbricka.....	Flat washer.....			
584	1	1		9743-3621-32	Mutter.....	Nut.....			
596	1	1		9699-0029-02	Planbricka.....	Flat washer.....			
597	1	1		1133-0932-01	Låsrott.....	T-knob.....			
598	1	1		1812-1759-01	Mutter.....	Nut.....			
599	1	1		1812-1678-01	Vagnsbult.....	Carriage bolt.....			
600	1	1		1812-2074-01	Utkast kpl.....	Chute assy.....			
601	3	3		9899-3625-16	Skruv.....	Screw.....			
602	3	3		9699-0029-02	Planbricka.....	Flat washer.....			
603	3	3		9743-3621-32	Mutter.....	Nut.....			
606	1	1		1812-1983-01	Utkastplatta.....	Chute rotate collar.....			
607	4	4		1812-1831-01	Skruv.....	Screw.....			
609	4	4		1812-1760-01	Mutter.....	Nut.....			
610	1	1		1812-1366-01	Utkastring- inre.....	Chute rot. ring- inner.....			
611	1	1		1812-1787-01	Utkastring- yttre.....	Retainer ring- outer.....			
695	1	1		1133-0970-01	Utkastskydd.....	Wire chute guide.....			
696	1	1		1133-0944-01	Fjäder.....	Torsion chute spring.....			
697	1	1		1133-0945-01	Fjäder.....	Torsion chute spring.....			
698	2	2		1133-0937-01	Hattlåsning.....	Acorn nut.....			

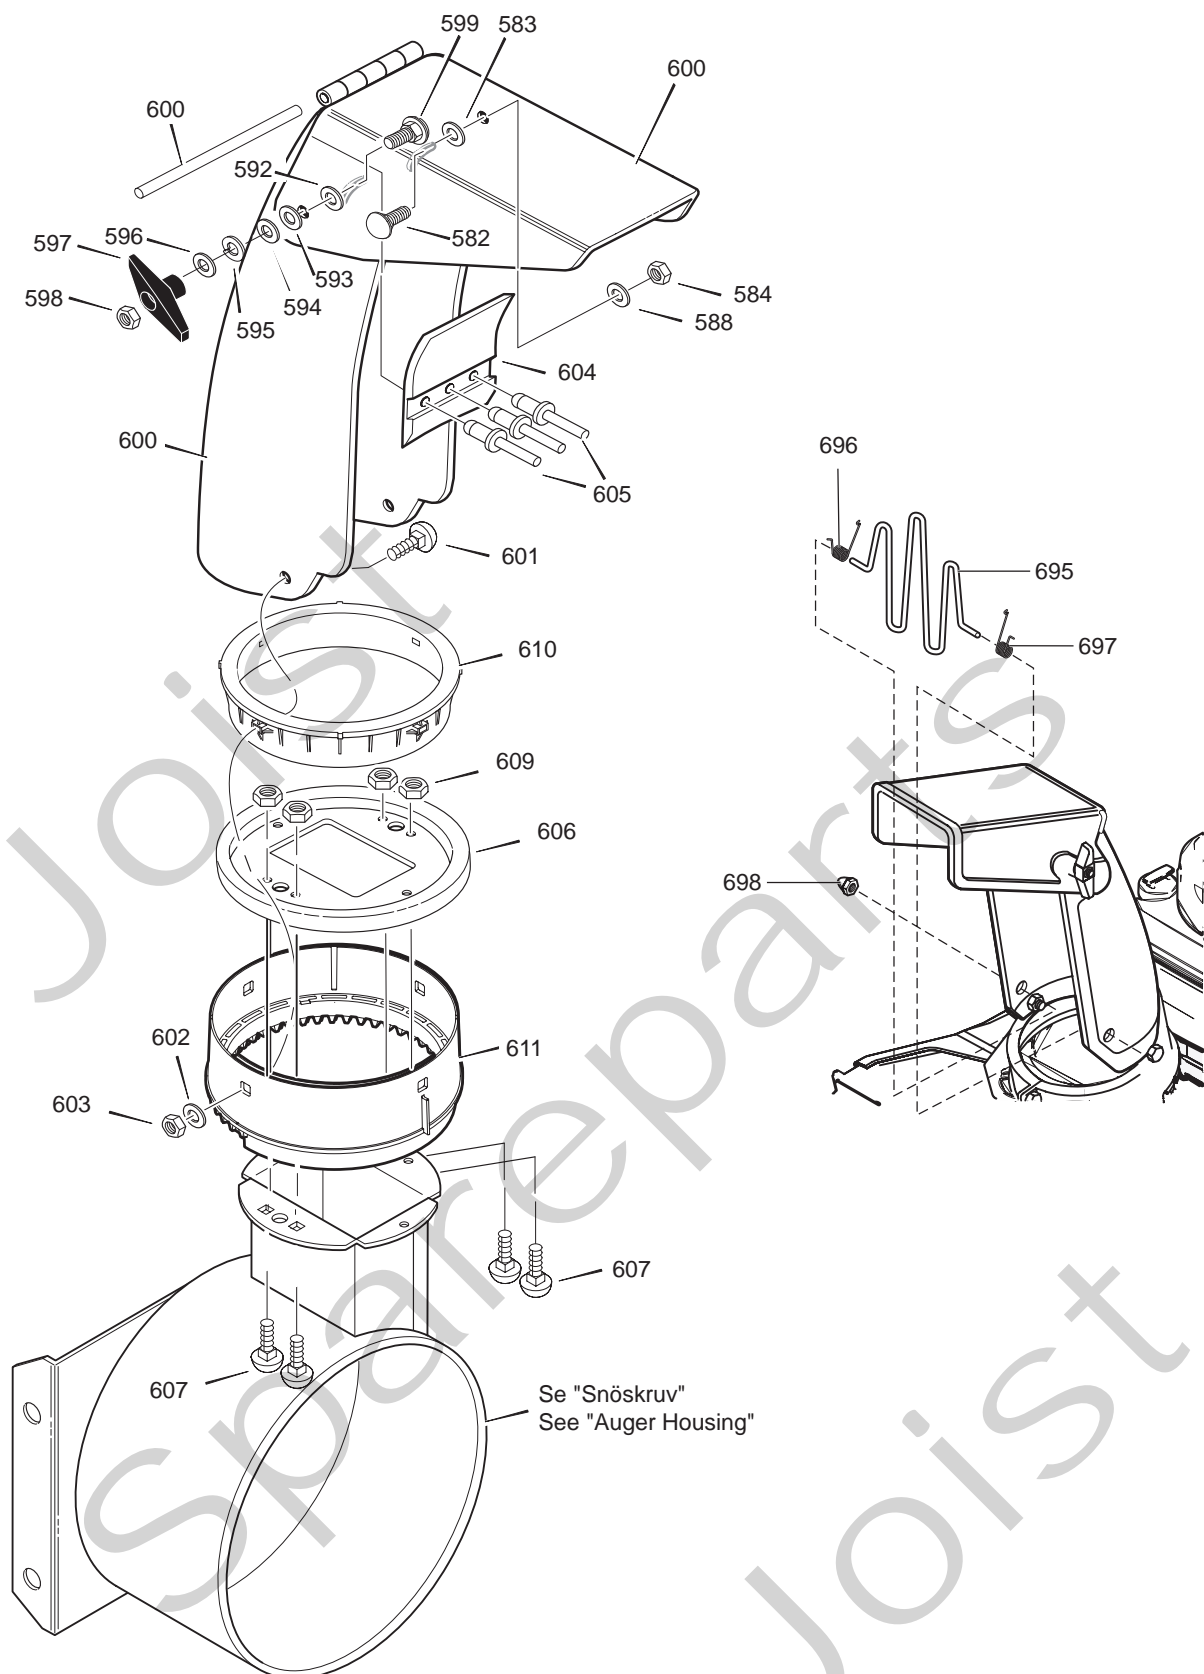

Utgåva Issue		Bildnr Picture No		SNOW UNLIMITED UTKAST		SNOW UNLIMITED DISCHARGE CHUTE		Sida Page	
2007-14		1327C						66	
Pos. Fig.	Antal/Quantity				Art nr Part No	Benämning	Description	Sats Kit	Anmärkning Notes
	2856								
	-28								
582	1			9899-3622-16	Skruv.....	Screw.....			
583	1			1812-1163-01	Plastbricka.....	Plastic washer.....			
584	1			9743-3621-32	Mutter.....	Nut.....			
588	1			1812-0667-01	Plastbricka.....	Plastic washer.....			
592	1			1812-1163-01	Plastbricka.....	Plastic washer.....			
593	1			1812-0667-01	Plastbricka.....	Plastic washer.....			
594	1			9699-0029-02	Planbricka.....	Flat washer.....			
595	1			9683-0030-02	Låsbricka.....	Lock washer.....			
596	1			9699-0029-02	Planbricka.....	Flat washer.....			
597	1			1133-0932-01	Lås ratt.....	T- knob.....			
598	1			1812-1759-01	Mutter.....	Nut.....			
599	1			1812-1678-01	Vagnsbult.....	Carriage bolt.....			
600	1			1812-2103-01	Utkast.....	Chute.....			
601	3			9899-3625-16	Skruv.....	Screw.....			
602	3			9699-0029-02	Planbricka.....	Flat washer.....			
603	3			9743-3621-32	Mutter.....	Nut.....			
604	1			1812-1436-01	Utkastskydd.....	Chute flap.....			
605	3			1812-1462-01	Popnit.....	Pop rivet.....			
606	1			1812-1983-01	Utkastplatta.....	Chute rotate collar.....			
607	4			1812-1831-01	Skruv.....	Screw.....			
609	4			1812-1760-01	Mutter.....	Nut.....			
610	1			1812-1366-01	Utkastring- inre.....	Chute rot. ring- inner.....			
611	1			1812-1787-01	Utkastring- yttre.....	Retainer ring- outer.....			
695	1			1133-0970-01	Utkastskydd.....	Wire chute guide.....			
696	1			1133-0944-01	Fjäder.....	Torsion chute spring.....			
697	1			1133-0945-01	Fjäder.....	Torsion chute spring.....			
698	2			1133-0937-01	Hattlåsning.....	Acorn nut.....			